



Service Manual

236B SKID STEER LOADER

S/N HEN

Printed by Heavy Equipment Manuals
v2.20

Printed in U.S.A

[Heavy Equipment Manuals](#)

[Previous Screen](#)

Product: SKID STEER LOADER

Model: 236B SKID STEER LOADER HEN07630

Configuration: 236B2 Skid Steer Loader HEN06750-UP (MACHINE) POWERED BY 3044C Engine

Disassembly and Assembly

**236B, 246B, 246C, 252B, 256C,
262B, 262C, 262C2 and 272C**

Skid Steer Loaders Engine Supplement

Media Number -KENR5114-03

Publication Date -01/04/2011

Date Updated -19/04/2011

i02667975

Air Cleaner - Remove and Install

SMCS - 1051-010

Removal Procedure

1. Tilt the radiator. Refer to Operation and Maintenance Manual, "Radiator Tilting".

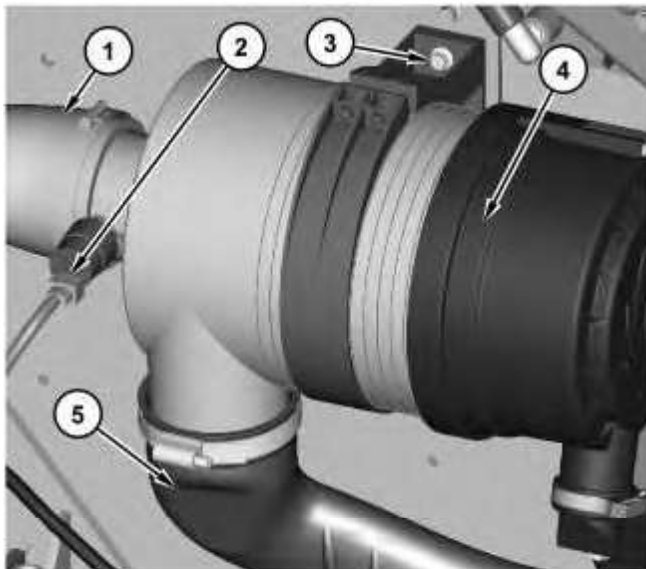


Illustration 1

g01340815

2. Disconnect harness assembly (2). Disconnect hoses (1) and (5). Remove bolts (3) and air cleaner (4) .

Installation Procedure

1. Tilt the radiator. Refer to Operation and Maintenance Manual, "Radiator Tilting".

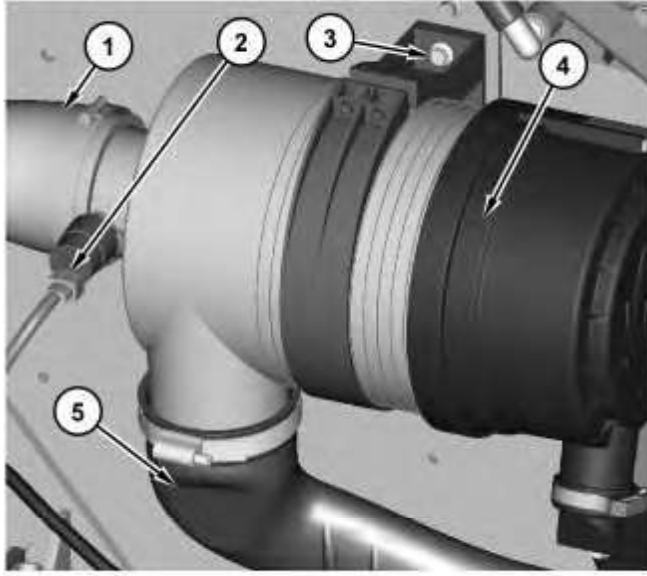


Illustration 2

g01340815

2. Position air cleaner (4) and install bolts (3). Connect hoses (1) and (5). Connect harness assembly (2) .
3. Tilt the radiator back to the original position. Refer to Operation and Maintenance Manual, "Radiator Tilting".

[Previous Screen](#)

Product: SKID STEER LOADER

Model: 236B SKID STEER LOADER HEN07630

Configuration: 236B2 Skid Steer Loader HEN06750-UP (MACHINE) POWERED BY 3044C Engine

Disassembly and Assembly

236B, 246B, 246C, 252B, 256C,

262B, 262C, 262C2 and 272C

Skid Steer Loaders Engine Supplement

Media Number -KENR5114-03

Publication Date -01/04/2011

Date Updated -19/04/2011

i03037625

Alternator - Remove and Install

SMCS - 1405-010

S/N - HEN1-UP

S/N - PAT1-UP

S/N - PDT1-UP

S/N - SCP1-UP

Removal Procedure

Start By:

- A. Disconnect the battery. Refer to Disassembly and Assembly, "Battery and Battery Cable - Separate and Connect".

Note: The muffler has been removed for clarity.

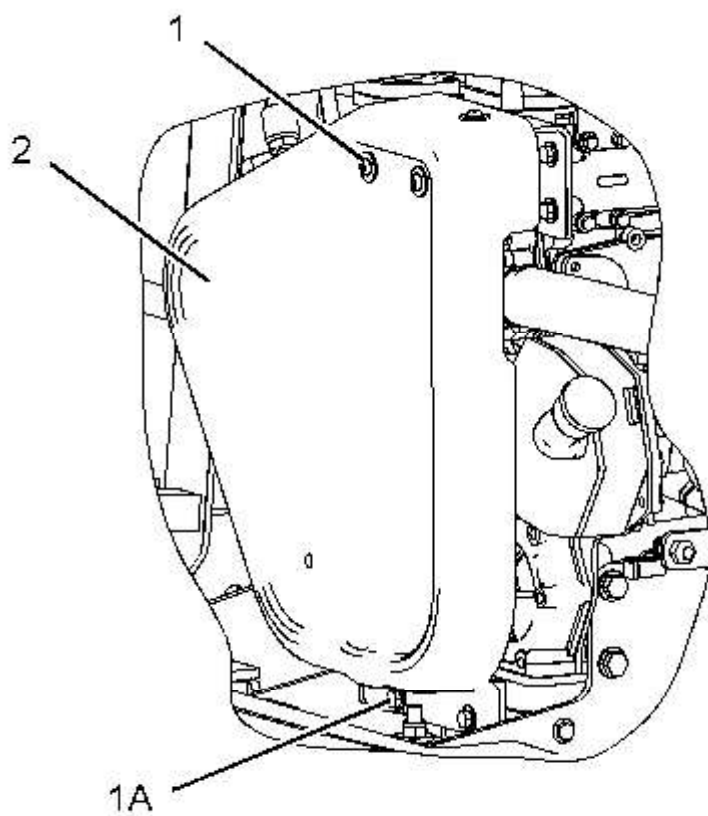


Illustration 1

g01541413

1. Remove bolts (1A) and screws (1) . Remove cover (2) .
-

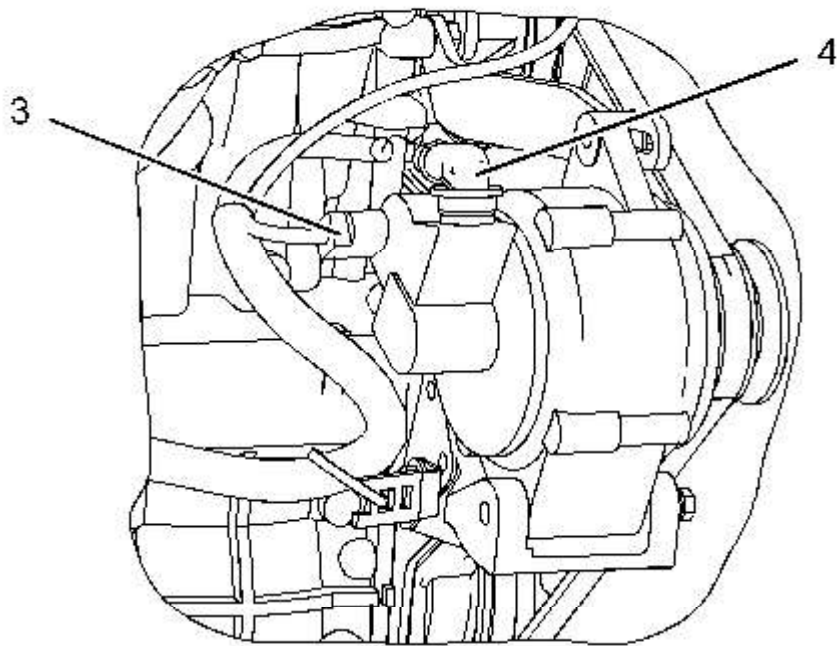


Illustration 2

g01038433

2. Disconnect harness assembly (3) . Raise the boot and disconnect harness assembly (4) .
-

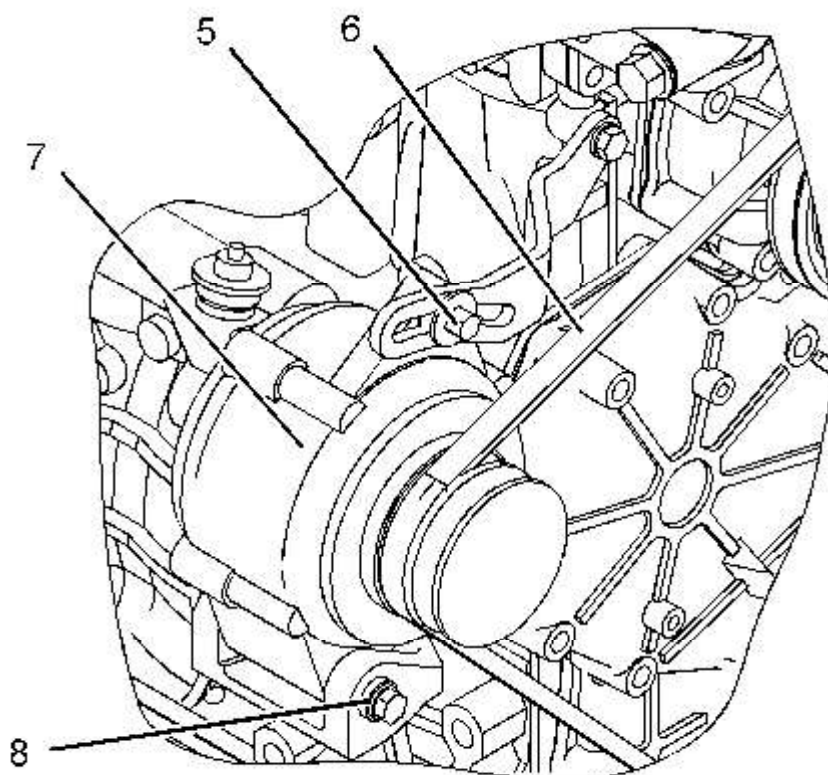


Illustration 3

g01038438

3. Loosen bolts (5) and (8) . Remove belt (6) and remove alternator (7) .

Installation Procedure

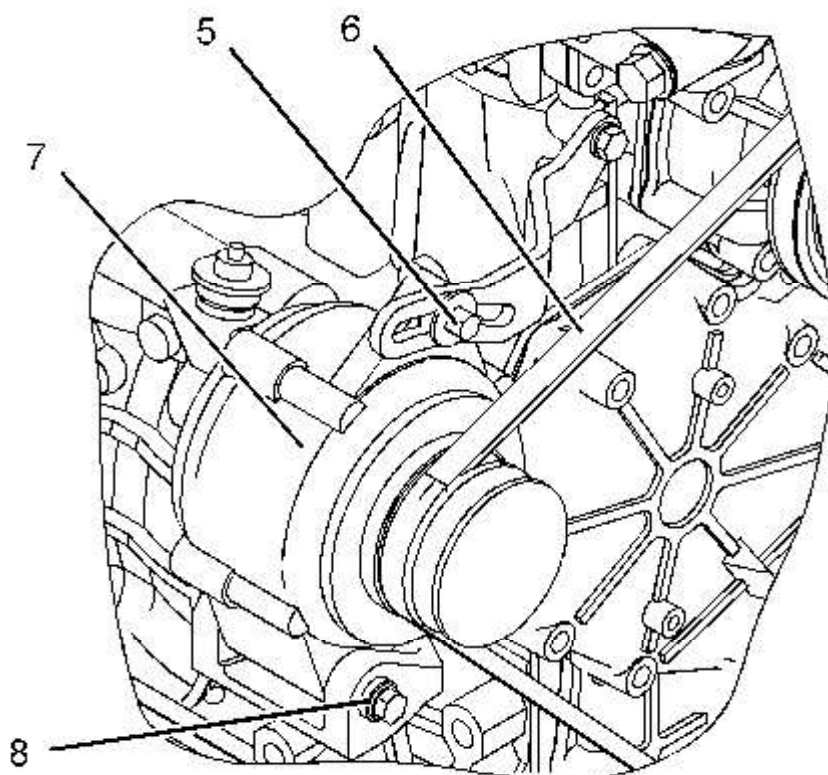


Illustration 4

g01038438

1. Install alternator (7) . Install belt (6) . Refer to Operation and Maintenance Manual, "Belt - Inspect/Adjust/Replace" for more information. Tighten bolts (5) and (8) .
-

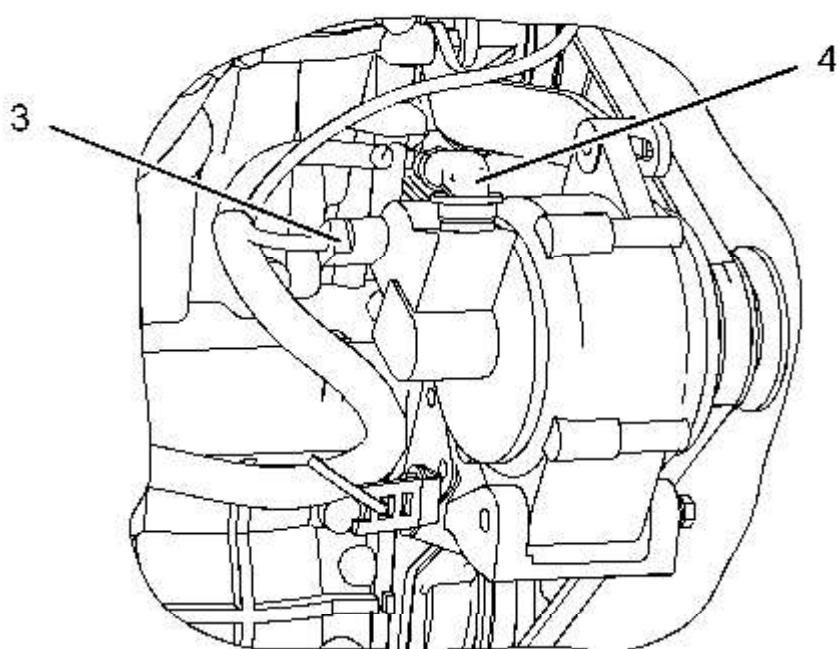


Illustration 5

g01038433

2. Connect harness assembly (3) . Raise the boot and connect harness assembly (4) .
-

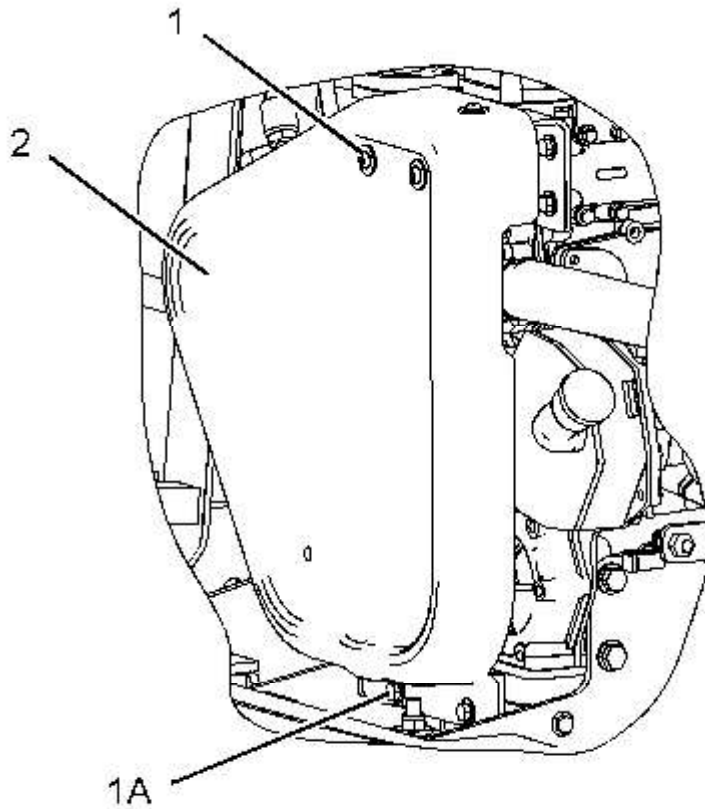


Illustration 6

g01541413

3. Install cover (2) and install screws (1) . Tighten screws (1) to a torque of $6 \pm 1 \text{ N}\cdot\text{m}$ ($53 \pm 9 \text{ lb in}$).
4. Install bolts (1A) . Tighten bolts (1A) to a torque of $15 \pm 3 \text{ N}\cdot\text{m}$ ($11 \pm 2 \text{ lb ft}$).

End By: Connect the battery. Refer to Disassembly and Assembly, "Battery and Battery Cable - Separate and Connect".