



# Service Manual

---

## 252B SKID STEER LOADER

---

S/N SCP00001-04599

KENR5114 236B, 246B, 272C Skid Steer Loaders Engine Supplement ____	2
KENR6941 C3.4 Engines for Caterpillar Built Machines _____	126
RENr4863 236B, 262B Skid Steer Loaders Engine Supplement _____	465
RENr4864 236B, 236B2, 262B Skid Steer Loaders Power Train _____	589
RENr4868 236B, 236B2, 262B Skid Steer Loaders Machine Systems ____	687
RENr7582 3044C Industrial Engine Caterpillar Built Machines _____	887
SENr9823 3044C Engine for Caterpillar Built Machines _____	1088
UENr3262 Seal Installation _____	1277

Air Cleaner - Remove and Install _____	2
Alternator - Remove and Install _____	4
Battery and Battery Cable - Separate and Connect _____	11
Cab - Tilt _____	14
Electric Starting Motor - Remove and Install _____	22
Engine - Install _____	25
Engine - Remove _____	40
Engine Enclosure - Remove and Install _____	56
Fuel Priming Pump and Primary Filter _____	61
Gear Motor (Fan) - Install _____	66
Gear Motor (Fan) - Remove _____	70
Muffler - Remove and Install _____	75
Pump Mounting - Remove and Install _____	80
Radiator and Hydraulic Oil Cooler - Install _____	87
Radiator and Hydraulic Oil Cooler - Remove _____	97
System Pressure - Release _____	107
Water Pump - Remove and Install _____	109
Water Temperature Regulator - Remove and Install _____	120

[Previous Screen](#)

Product: SKID STEER LOADER

Model: 252B SKID STEER LOADER SCP

Configuration: 236B 246B 252B 262B SKID STEER LOADER SCP00001-04599 (MACHINE) POWERED BY 3044C Engine

## **Disassembly and Assembly 236B, 246B, 246C, 252B, 256C, 262B, 262C, 262C2 and 272C Skid Steer Loaders Engine Supplement**

Media Number -KENR5114-03

Publication Date -01/04/2011

Date Updated -19/04/2011

i02667975

## **Air Cleaner - Remove and Install**

SMCS - 1051-010

### **Removal Procedure**

1. Tilt the radiator. Refer to Operation and Maintenance Manual, "Radiator Tilting".

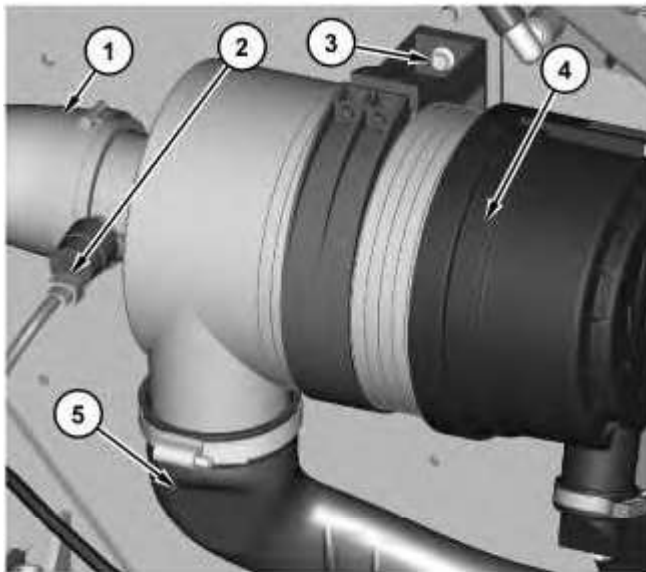


Illustration 1

g01340815

2. Disconnect harness assembly (2). Disconnect hoses (1) and (5). Remove bolts (3) and air cleaner (4) .

## Installation Procedure

1. Tilt the radiator. Refer to Operation and Maintenance Manual, "Radiator Tilting".


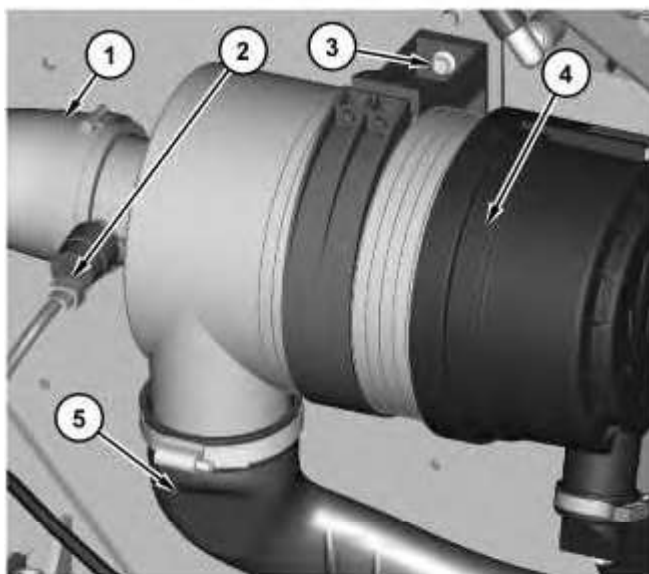


Illustration 2

g01340815

 2. Position air cleaner (4) and install bolts (3). Connect hoses (1) and (5). Connect harness assembly (2) .
3. Tilt the radiator back to the original position. Refer to Operation and Maintenance Manual, "Radiator Tilting".



[Previous Screen](#)

Product: SKID STEER LOADER

Model: 252B SKID STEER LOADER SCP

Configuration: 236B 246B 252B 262B SKID STEER LOADER SCP00001-04599 (MACHINE) POWERED BY 3044C Engine

### **Disassembly and Assembly 236B, 246B, 246C, 252B, 256C, 262B, 262C, 262C2 and 272C Skid Steer Loaders Engine Supplement**

Media Number -KENR5114-03

Publication Date -01/04/2011

Date Updated -19/04/2011

i03037625

## **Alternator - Remove and Install**

SMCS - 1405-010

S/N - HEN1-UP

S/N - PAT1-UP

S/N - PDT1-UP

S/N - SCP1-UP


## **Removal Procedure**

### **Start By:**

- A. Disconnect the battery. Refer to Disassembly and Assembly, "Battery and Battery Cable - Separate and Connect".

**Note:** The muffler has been removed for clarity.

---

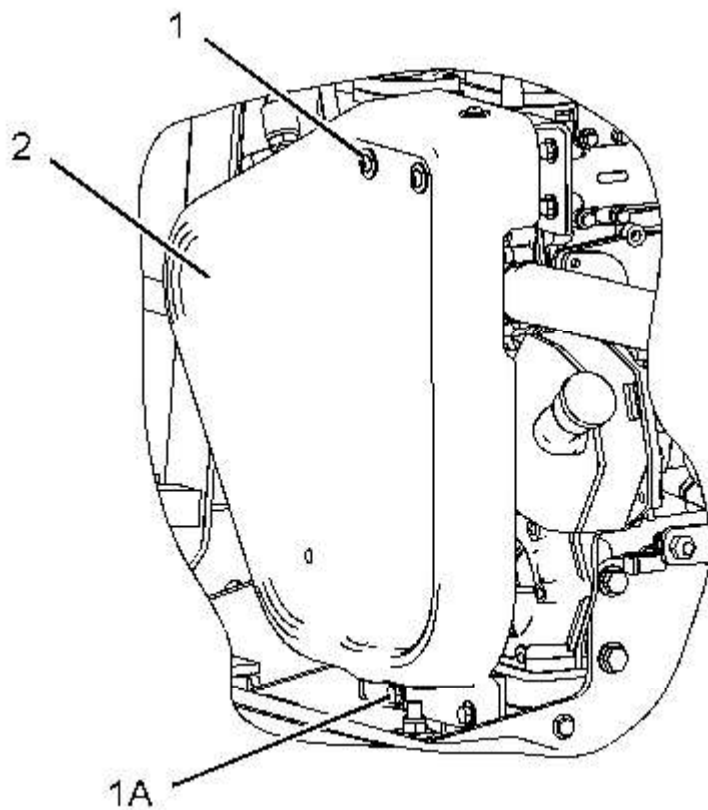


---

Illustration 1

g01541413

1. Remove bolts (1A) and screws (1) . Remove cover (2) .
-

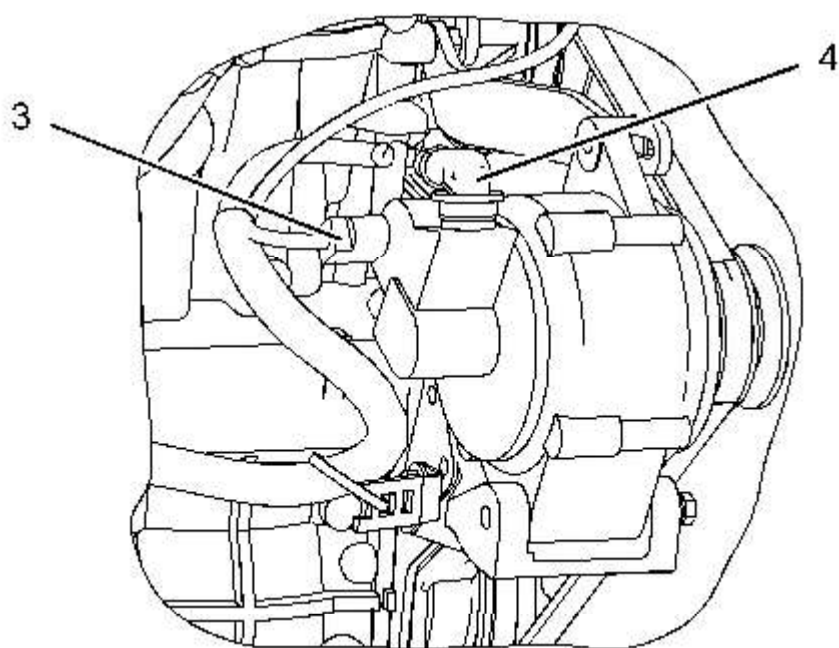


---

Illustration 2

g01038433

2. Disconnect harness assembly (3) . Raise the boot and disconnect harness assembly (4) .
-



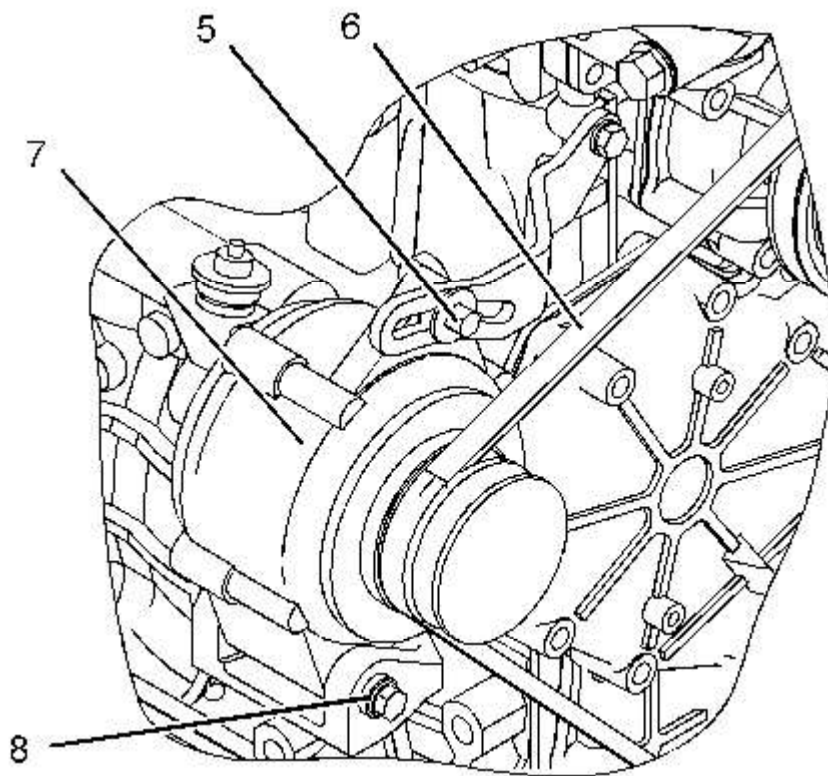

---


Illustration 3

g01038438

3. Loosen bolts (5) and (8) . Remove belt (6) and remove alternator (7) .

## Installation Procedure

---

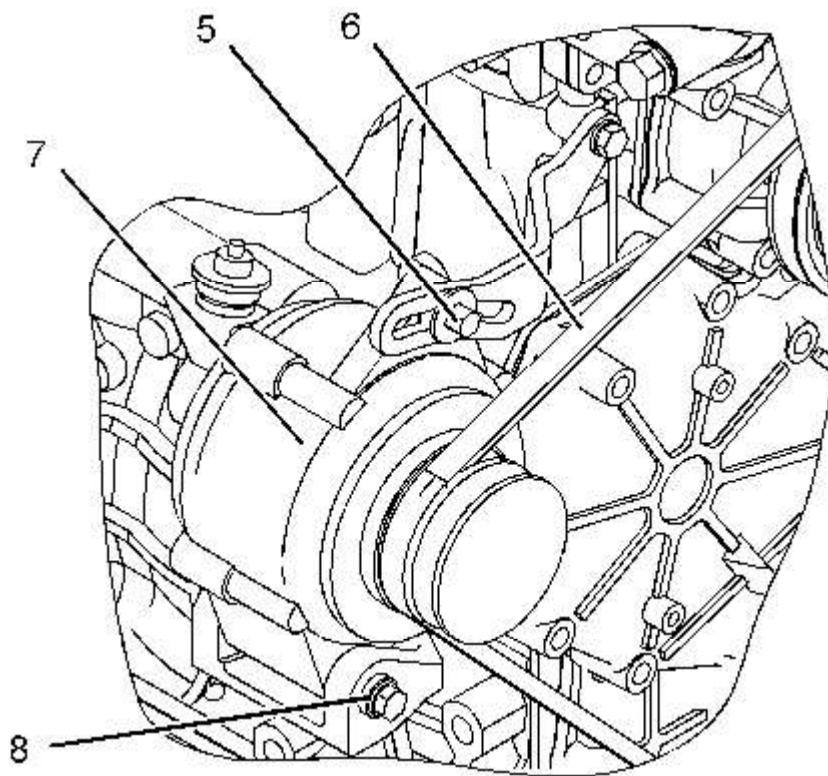

---

Illustration 4

g01038438

1. Install alternator (7) . Install belt (6) . Refer to Operation and Maintenance Manual, "Belt - Inspect/Adjust/Replace" for more information. Tighten bolts (5) and (8) .
-