
Service and Parts Manual

SPM660

CMT27

SERIAL NUMBER

ALWAYS GIVE TRUCK SERIAL
NUMBER WHEN ORDERING PARTS

CLARK Material Handling
Company

IMPORTANT: Read and understand the contents of this manual before operating the equipment.

RECEIPT INSPECTION

This equipment was thoroughly inspected and tested prior to leaving the factory. Before placing the equipment in service it should be thoroughly checked for damage or loss occurring in transit. If any such damage or loss is evident, a claim must be made against the carrier.

Refer to: Damage in Transit information enclosed with the packing slip.

PAGE	CONTENTS
2	RECEIPT INSPECTION
3	OPERATING INSTRUCTIONS SAFETY INFORMATION
4	PREVENTATIVE MAINTENANCE
5	PARTS LIST - PUMP
7	PARTS LIST - FRAME