
Service and Parts Manual

SPM 642

CTT 3

SERIAL NUMBER

ALWAYS GIVE TRUCK SERIAL
NUMBER WHEN ORDERING PARTS

CLARK Material Handling
Company

IMPORTANT: Read and understand the contents of this manual before operating the equipment.

RECEIPT INSPECTION

This equipment was thoroughly inspected and tested prior to leaving the factory. Before placing the equipment in service it should be thoroughly checked for damage or loss occurring in transit. If any such damage or loss is evident, a claim must be made against the carrier.

Refer to: Damage in Transit information enclosed with the packing slip.

PAGE	CONTENTS
1	RECEIPT INSPECTION
2	DECALS
3	PRE-OPERATION INSTRUCTIONS / SAFETY INFORMATION
4	OPERATING INSTRUCTIONS
5	GENERAL MATERIAL HANDLING GUIDELINES PLANNED MAINTENANCE
6	PLANNED MAINTENANCE CON'T
7	OPERATOR CONTROLS LUBRICATION
8	BODY ASSEMBLY
10	DRIVE UNIT ASSEMBLY
12	STEERING UNIT ASSEMBLY
14	STEERING COLUMN ASSEMBLY
16	WIRING DIAGRAM

ITEM NUMBER	PART NUMBER	QTY	DESCRIPTION
	3798346	2	Decal ▪ 3" Clark Logo (Not Shown)
2	2348906	1	Decal ▪ 5" Clark Logo (Not Shown)
3	1747748	1	Decal ▪ Battery Warning (Not Shown)
4	2783039	1	Decal ▪ No Riding (Not Shown)

SAFETY INFORMATION

Important: All designated operators of this equipment MUST read and understand the contents of this manual before operating the equipment.

- Do not operate this Tow Tractor unless you have been trained and authorized to do so.
- Do not operate this Tow Tractor until you have checked its condition. Give special attention to the tires, battery, controls, switches, brakes steering mechanism, guards, and safety devices.
- Report the need for repairs to your supervisor immediately and do not operate the Tow Tractor until the repairs are made. Neglect may cause a minor repair to become a major service problem and cause the Tow Tractor to become unsafe.
- Operate this Tow Tractor from a seated position only. Do not operate Tow Tractor while standing.
- Do not exceed the rated capacity of the Tow Tractor as marked on the nameplate.
- Always look in the direction of travel. Use caution when load interferes with visibility.
- Extreme caution must be used when towing loosely stacked / packaged loads.
- Watch clearance when turning near walls, racks, pillars and other obstacles.
- Start, stop, change direction, travel, and brake smoothly. Slow down for turns on uneven or slippery surfaces. Be aware that the Tow Tractor behaves differently without a load than with a load.
- The Tow Tractor is designed for level surface use only.
- Yield right of way to pedestrians. Slow down and sound the horn at aisle intersections and where vision is obstructed.
- Do not carry passengers.
- Before you leave the truck unattended, apply the parking brake and shut off all power.

PRE-OPERATION INSTRUCTIONS

- Complete the warranty validation form included with the manual and return to Clark Warranty coverage may be void if the validation form is not returned completed to Clark.
- Remove any packing material and check the unit for visible damage
- Open the drive unit compartment and inspect the wiring harness for damage and loose connections
- Open the battery compartment and check that all connections are tight. Check that the battery or cables have not been damaged. The battery should be fully charged before the vehicle is placed into service.
- Refer to the operating instructions and confirm the Tow Tractor operates properly before use.

REMEMBER: A SAFE OPERATOR IS A SMART OPERATOR