
Service and Parts Manual

SPM 626

CWP 20/22

SERIAL NUMBER

**ALWAYS GIVETRUCK SERIAL
NUMBER WHEN ORDERING PARTS**

CLARK Material Handling
company

IMPORTANT: Read and understand the contents of this manual before operating the equipment.

RECEIPT INSPECTION

This equipment was thoroughly inspected and tested prior to leaving the factory. Before placing the equipment in service it should be thoroughly checked for damage or loss occurring in transit. If any such damage or loss is evident, a claim must be made against the carrier.

Refer to: Damage in Transit information enclosed with the packing slip.

PAGE	CONTENTS
1	RECEIPT INSPECTION
2	Decals
3	PRE-OPERATION INSTRUCTIONS / SAFETY INFORMATION AND OPERATING INSTRUCTIONS
4	CONTROL SYSTEM
5	BATTERY DISCHARGE INDICATOR - OPERATION
6	BODY ASSEMBLY PARTS LIST
7	BODY ASSEMBLY & LUBRICATION POINTS
8	DRIVE UNIT PARTS LIST
9	DRIVE UNIT DIAGRAM
10	CWP20 PANEL ASSEMBLY & PARTS LIST
11	CWP22 PANEL ASSEMBLY & PARTS LIST
12	CWP20 WIRING DIAGRAM / 3 Speed
13	CWP22 WIRING DIAGRAM / Electronic Controller
14	PLANNED MAINTENANCE
15	BATTERY MAINTENANCE
16	TROUBLE SHOOTING GUIDE

ITEM NUMBER	PART NUMBER	QTY	DESCRIPTION
1	2348906	1	Decal • 5" Clark Logo White (Not Shown)
2	2389040	2	Decal • 5" Clark Logo Black (Not Shown)
3	2812621	1	Decal • Operator Warning (Not Shown)
4	1747748	1	Decal • Battery Warning (Not Shown)
5	2777635	1	Decal • No Riding (Not Shown)

PRE-OPERATION INSTRUCTIONS

1. Open drive unit cover and check the wiring harness and hydraulic hoses for damage or loose connections.
2. Open the battery compartment and check that all connections are tight. Check that the batteries have not been damaged. Charge battery(s) for one shift. Refer to Battery Maintenance Instructions (page 15).
3. Refer to the Operator's Manual on unit and check

that the truck operates satisfactorily. **Important notice:** During initial cylinder assembly, hydraulic fluid is used to lubricate all the components. This assembly fluid may be present, or accumulated in the upper headnut portion of the cylinder during the break-in period or normal use. A small amount of fluid in this area is normal and should not be mistaken for cylinder seal leakage.

4. Complete the Warranty Validation Form provided with this manual and return it to Clark

SAFETY INFORMATION

1. Do not operate this truck unless you have been trained and authorized to do so.
2. Do not operate this truck until you have checked its condition. Give special attention to tires, battery, controls, lifting systems (including switches), brakes, steering mechanism, guards and safety devices.
3. Report the need for truck repairs to your supervisor promptly. Do not operate the truck. Neglect may cause a minor repair to become a major service problem or cause the truck to become unsafe.
4. Do not exceed the rated capacity of the vehicle as marked on the nameplate. Do not lift with the fork tips or one fork only, and be sure load is centered.
5. Do not handle unstable or loosely stacked loads. Use special care when handling long, high or wide loads, to avoid tipping, loss of load, or striking bystanders.
6. Always look in direction of travel. Keep a clear view and when load obstructs visibility, travel with load trailing (except when climbing ramps).
7. Watch swing clearance when turning near walls, racks, pillars or other obstacles.
8. Start, stop, change direction, travel and brake smoothly. Slow down for turns and on uneven or slippery surfaces that could cause truck to slide or tip. Be aware that the truck behaves differently without a load than with a load.
9. Observe applicable traffic regulations and yield right of way to pedestrians. Slow down and sound horn at all aisle intersections and where vision is obstructed.
10. Do not ride on truck unless equipped with a rider platform.
11. Do not carry passengers.
12. Before you leave the truck, fully lower lifting mechanism, shut off power and remove the key.
13. Do not leave truck unattended on ramp.

OPERATING INSTRUCTIONS

Refer to **OPERATOR'S MANUAL** enclosed in the pouch on the control handle. If **OPERATOR'S MANUAL** is missing contact your authorized Clark distributor for Parts & Service Department. (see page 6 for part number).

REMEMBER: A safe operator is a smart operator!