



# **PARTS MANUAL**

**AGROFARM 100 ECOLINE  
TRACTOR**

**PRINTED BY :**  
**[heavy-equipmentmanual.com](http://heavy-equipmentmanual.com)**

# COLINE Tractor Parts Manual

## Agrofarm 100 ECOLINE

### B0 - ENGINE

#### GENERAL

ENGINE..... B0.00.0 (1)

#### CYLINDER BLOCK

SUPPORTS..... B0.01.0 (1)

SERIE GUARNIZIONI..... B0.01.1

FASTENINGS..... B0.01.2

BUSH..... B0.01.5

KURBELGEHAEUSE..... B0.01.6

BLEEDING TUBE..... B0.01.7

CRANKCASE BREATHER..... B0.01.8

OIL FILLER NECK..... B0.01.11

ACCESSORIES..... B0.01.12

KURBELGEHAEUSE..... B0.01.12

ACCESSORIES..... B0.01.14

ACCESSORIES..... B0.01.15

FILLER CAP..... B0.01.16

PISTON COOL.NOZZLE..... B0.01.19

FLANGE..... B0.01.20

FLANGE..... B0.01.30

BLEEDING TUBE..... B0.01.32

#### CRANKSHAFT

COOLANT PUMP DRIVEBELT AND BELT TENSIONER..... B0.02.0 (1)

COOLANT PUMP AND COMPRESSOR DRIVEBELT..... B0.02.1 (1)

FASTENINGS..... B0.02.2

V-GROOVED PULLEY..... B0.02.3

CRANKSHAFT..... B0.02.5

FLYWHEEL..... B0.02.6

COUNTERWEIGHTS..... B0.02.8

CRANKSHAFT..... B0.02.12

#### CYLINDERS - PISTONS - CONNECTING RODS

PISTON..... B0.03.0

CONNECTING ROD..... B0.03.2

#### TIMING

FASTENINGS..... B0.04.0

BUSH..... B0.04.2

CAMSHAFT..... B0.04.4

VALVE DRIVE..... B0.04.5

GEARCASE..... B0.04.6

GEARCASE..... B0.04.9

CAMSHAFT..... B0.04.11

#### CYLINDER HEAD

FASTENINGS.....	B0.05.0
FASTENINGS.....	B0.05.1
ENGINE MOUNTING.....	B0.05.3
CLOSING COMPONENTS.....	B0.05.6
CLOSING COMPONENTS.....	B0.05.7
CYLINDER HEAD.....	B0.05.9
ROCKER ARMS COVER.....	B0.05.11
<b>LUBRICATION</b>	
FASTENINGS.....	B0.06.0
OIL SUCTION PIPE.....	B0.06.2
BLANKING PARTS.....	B0.06.2
OIL PAN.....	B0.06.3
CLOSING COMPONENTS.....	B0.06.5
BLANKING PARTS.....	B0.06.5
CLOSING COMPONENTS.....	B0.06.6
OELKUEHLERGEHAEUSE.....	B0.06.7
ACCESSORIES.....	B0.06.12
OIL COOLER BOX.....	B0.06.14
OIL RETURN.....	B0.06.15
ACCESSORIES.....	B0.06.22
<b>FUEL INJECTION SYSTEM</b>	
FASTENINGS.....	B0.07.0
FASTENINGS.....	B0.07.1
FASTENINGS.....	B0.07.2
HIGH PRESSURE PIPE.....	B0.07.4
FUEL INJECT. PUMP.....	B0.07.5
FUEL FILTER.....	B0.07.6
FUEL FILTER.....	B0.07.7
FUEL INJECTOR.....	B0.07.9
ROLLER TAPPET.....	B0.07.10
FUEL LINE.....	B0.07.11
FUEL PUMP.....	B0.07.12
FUEL PUMP.....	B0.07.14
PILOTED CHECK VALVE.....	B0.07.14
HOLDING DEVICE FOR LEADS.....	B0.07.16
CONNECTION.....	B0.07.17
ROLLER TAPPET.....	B0.07.20
SPIN-ON FILTER.....	B0.07.22
SEPARATOR.....	B0.07.24
CLOSING COMPONENTS.....	B0.07.29
<b>MECHANICAL - ELECTRONIC GOVERNOR</b>	
FASTENINGS.....	B0.08.0
FASTENINGS.....	B0.08.2
CONTROL ROD.....	B0.08.2

SHUTDOWN DEVICE.....	B0.08.4
CONTROLLER.....	B0.08.7
CONTROLLER.....	B0.08.8
SHUTDOWN DEVICE.....	B0.08.10
PIPING.....	B0.08.11
INTERMEDIATE GEAR.....	B0.08.12
ACCESSORIES.....	B0.08.13
<b>COOLING</b>	
ADAPTER.....	B0.09.0
FASTENINGS.....	B0.09.1
FASTENINGS.....	B0.09.2
NARROW V-BELT.....	B0.09.5
SCREW PLUG.....	B0.09.6
CLOSING COMPONENTS.....	B0.09.7
DRIVING PARTS.....	B0.09.9
DRIVING PARTS.....	B0.09.10
FAN SUPPORT.....	B0.09.12
FAN SUPPORT.....	B0.09.13
COOLING WATER PUMP.....	B0.09.15
COOLING WATER PUMP.....	B0.09.20
FAN SUPPORT.....	B0.09.22
<b>INTAKE - EXHAUST MANIFOLDS</b>	
THERMO STARTER.....	B0.10.0
MANIFOLD.....	B0.10.1
EXHAUST PIPE.....	B0.10.2
MANIFOLD.....	B0.10.4
CLOSING COMPONENTS.....	B0.10.5
FASTENINGS.....	B0.10.6
CLOSING COMPONENTS.....	B0.10.7
CLOSING COMPONENTS.....	B0.10.13
SEALING.....	B0.10.15
THERMO STARTER.....	B0.10.16
<b>TURBOCHARGER</b>	
TURBOCHARGER.....	B0.11.0
RETURN LINE.....	B0.11.1
OIL LUBRICATION PIPE.....	B0.11.2
TURBOCHARGER.....	B0.11.3
CLOSING COMPONENTS.....	B0.11.5
CLOSING COMPONENTS.....	B0.11.6
CLOSING COMPONENTS.....	B0.11.7
RETURN LINE.....	B0.11.10
<b>Electrical accessories</b>	
FASTENINGS.....	B0.12.0
FASTENINGS.....	B0.12.2

GENERATOR.....	B0.12.3
CLOSING COMPONENTS.....	B0.12.4
ACCESSORIES.....	B0.12.5
V-GROOVED PULLEY.....	B0.12.7
OIL PRESSUR.SWITCH.....	B0.12.8
STARTER.....	B0.12.9
ACCESSORIES.....	B0.12.10
OIL PRESSUR.SWITCH.....	B0.12.11
TEMPER.TRANSMITTER.....	B0.12.13
COVER.....	B0.12.14
TEMPER.TRANSMITTER.....	B0.12.15
GENERATOR.....	B0.12.16
GENERATOR.....	B0.12.17
STARTER.....	B0.12.20
ACCESSORIES.....	B0.12.28

**Agrofarm 100 ECOLINE**

Ref: B0.00.0 (1)

Section: B0 - ENGINE

**ENGINE**

---


Fig.	P/n	QTY	Name
------	-----	-----	------

---

**Notes:**

[Agrofarm 100 ECOLINE]

1	25007152	1	engine ON ORDERING PLEASE ENGINE NO. REQUIRED
---	----------	---	---

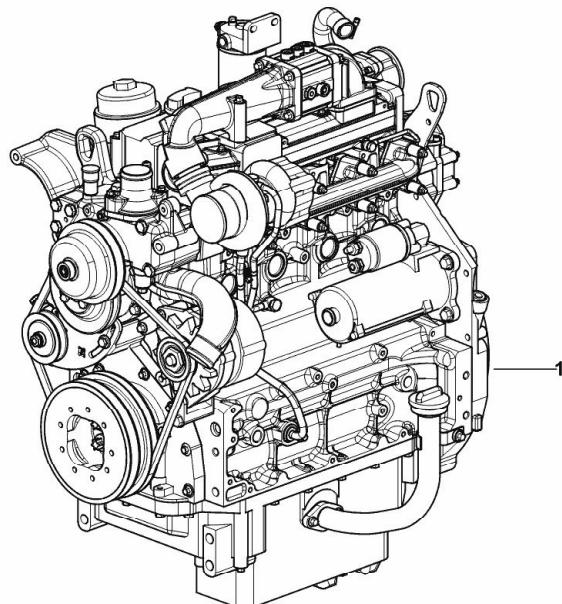**9\_N9219\_01\_0-A-001**

**Agrofarm 100 ECOLINE**

Section: B0 - ENGINE

Ref: B0.01.0 (1)


**SUPPORTS**

Fig.	P/n	QTY	Name
------	-----	-----	------

**Notes:**

[Agrofarm 100 ECOLINE]

19	0.014.9247.3/20	1	bracket
20	0.010.6442.0/10	1	bracket
21	2.0112.322.2	4	screw m 10 p.1.5x65
22	2.1475.003.2	4	washer 10

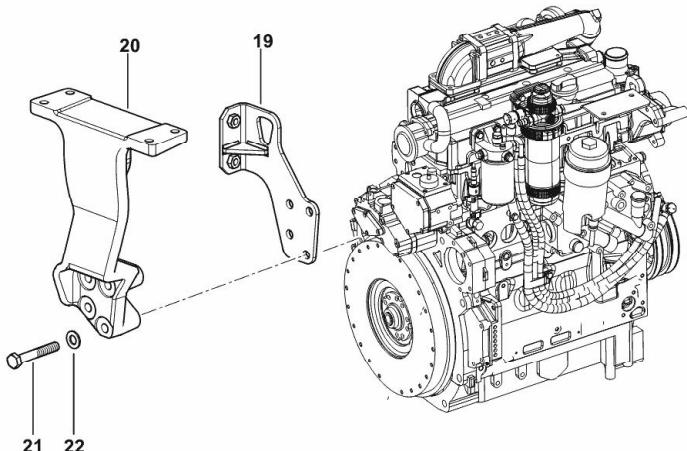

9\_N9116\_01\_0-B-001

**Agrofarm 100 ECOLINE**

Ref: B0.01.1

**Section: B0 - ENGINE  
SERIE GUARNIZIONI**

Fig.	P/n	QTY	Name
------	-----	-----	------

**Notes:**


[Agrofarm 100 ECOLINE]

**Engine serial number:**

10442699 10442701 10448724 10448735 10449473 10498497 10498511 10498522 10498523 10511634 10543279  
10543282 10543319 10724873 10724874 10724875 10724883 10724884 10724886 10726912 10731235 10731240  
10731244 10733426 10733428 10733431 10733434 10733437 10733438 10735989 10735996 10735998 10736002  
10736006 10740262 10740293 10740301 10740306 10740307 10742191 10742200 10742202 10744386 10744391  
10744393 10744395 10744397 10744398 66000045 66000058 66000148 66000198 66000200 66000274 66000291  
66000293 66000317 66000326 66000364 66000368 66000374 66000382 66000386 66000388 66000390 66000393  
66000398 66000400 66000402 66000404 66000414 66000416 66000515 66000568

002 ©

1 02937585 1 gasket set  
THE KIT DOES NOT CONTAIN ALL THE GASKETS:  
SEE SM 0199-99-9449

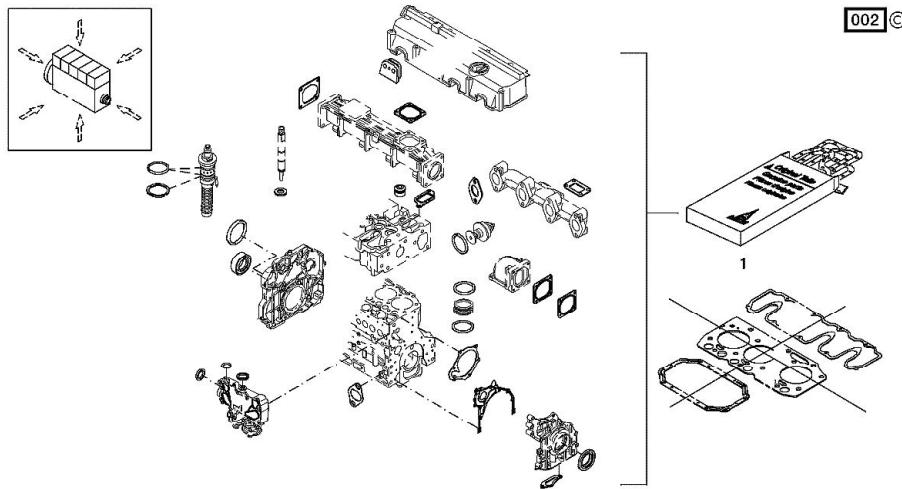

## Agrofarm 100 ECOLINE

Ref: B0.01.2

### Section: B0 - ENGINE FASTENINGS

Fig.	P/n	QTY	Name
------	-----	-----	------

#### Notes:


[Agrofarm 100 ECOLINE]

#### Engine serial number:

10442699 10442701 10448724 10448735 10449473 10498497 10498511 10498522 10498523 10511634 10543279  
10543282 10543319 10724873 10724874 10724875 10724883 10724884 10724886 10726912 10731235 10731240  
10731244 10733426 10733428 10733431 10733434 10733437 10733438 10735989 10735996 10735998 10736002  
10736006 10740262 10740293 10740301 10740306 10740307 10742191 10742200 10742202 10744386 10744391  
10744393 10744395 10744397 10744398 66000045 66000058 66000148 66000198 66000200 66000274 66000291  
66000293 66000317 66000326 66000364 66000368 66000374 66000382 66000386 66000388 66000390 66000393  
66000398 66000400 66000402 66000404 66000414 66000416 66000515 66000568

003 ©

1	01183645	12	screw EN 1662 -F-M8X35-10.9-ZNAL-A
2	04504325	1	gasket
3	01181406	1	bushing H 2341 -B11X8-FE/ZN12C*

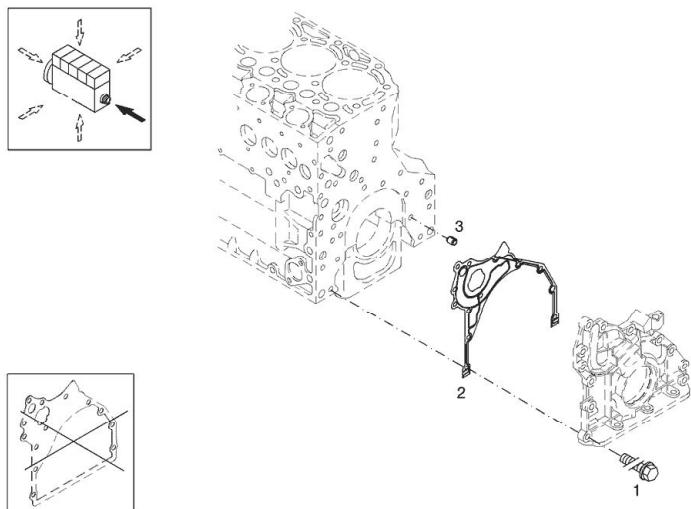

## Agrofarm 100 ECOLINE

Ref: B0.01.5

Section: B0 - ENGINE

### BUSH



Fig.	P/n	QTY	Name
------	-----	-----	------

#### Notes:

[Agrofarm 100 ECOLINE]

#### Engine serial number:

10442699 10442701 10448724 10448735 10449473 10498497 10498511 10498522 10498523 10511634 10543279  
10543282 10543319 10724873 10724874 10724875 10724883 10724884 10724886 10726912 10731235 10731240  
10731244 10733426 10733428 10733431 10733434 10733437 10733438 10735989 10735996 10735998 10736002  
10736006 10740262 10740293 10740301 10740306 10740307 10742191 10742200 10742202 10744386 10744391  
10744393 10744395 10744397 10744398 66000045 66000058 66000148 66000198 66000200 66000274 66000291  
66000293 66000317 66000326 66000364 66000368 66000374 66000382 66000386 66000388 66000390 66000393  
66000398 66000400 66000402 66000404 66000414 66000416 66000515 66000568

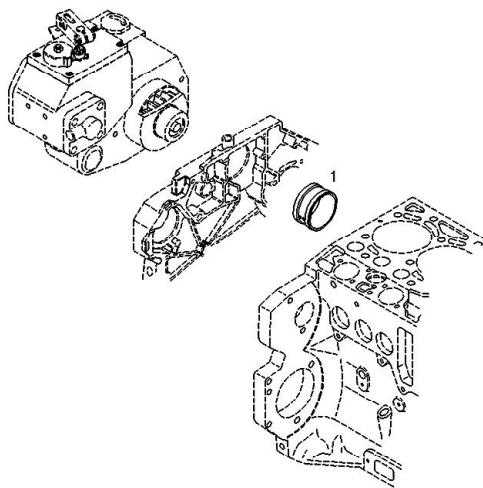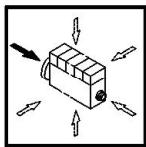

002

1 02111679

1 bush

0507 2810