



# **PARTS MANUAL**

## **AGROLUX 60 TRACTOR**

PRINTED BY :  
[heavy-equipmentmanual.com](http://heavy-equipmentmanual.com)

## Agrolux 60

 
### ACCESSORIES

#### GENERAL

|                                               |          |
|-----------------------------------------------|----------|
| 4-WAY AUXILIARY DISTRIBUTOR.....              | 0E.00.0  |
| 4-WAY AUXILIARY DISTRIBUTOR.....              | 0E.00.2  |
| PILOTED CHECK VALVE.....                      | 0E.00.3  |
| 6-WAY AUXILIARY DISTRIBUTOR.....              | 0E.00.4  |
| 6-WAY AUXILIARY DISTRIBUTOR.....              | 0E.00.6  |
| PILOTED CHECK VALVE.....                      | 0E.00.7  |
| AUXILIARY HYDRAULIC DISTRIBUTOR.....          | 0E.00.9  |
| EXHAUST PIPE.....                             | 0E.00.11 |
| PILOTED CHECK VALVE.....                      | 0E.00.12 |
| THREE-POINT COUPLING.....                     | 0E.00.13 |
| 3 POINT HITCH.....                            | 0E.00.14 |
| 3-POINT LINKAGE WITH AUTOMATIC COUPLERS.....  | 0E.00.15 |
| 3 POINT HITCH.....                            | 0E.00.16 |
| 3 POINT HITCH.....                            | 0E.00.17 |
| TOWING BAR.....                               | 0E.00.23 |
| REAR OSCILLATING HITCH.....                   | 0E.00.24 |
| REAR OSCILLATING HITCH.....                   | 0E.00.25 |
| REAR OSCILLATING HITCH.....                   | 0E.00.27 |
| FRONT TOWING HITCH.....                       | 0E.00.28 |
| FRONT TOWING HITCH.....                       | 0E.00.29 |
| REAR TOWING HITCH.....                        | 0E.00.30 |
| PIN FOR REAR TOW HOOK.....                    | 0E.00.31 |
| REAR TOWING HITCH.....                        | 0E.00.32 |
| REAR TOWING HITCH.....                        | 0E.00.34 |
| REAR TOWING HITCH (GRASSI) CAT. " C ".....    | 0E.00.35 |
| REAR TOWING HITCH CAT: "D" GRASSI.....        | 0E.00.36 |
| REAR TOWING HITCH CAT: "D2" GRASSI.....       | 0E.00.38 |
| REAR TOWING HITCH.....                        | 0E.00.44 |
| REAR TOWING HITCH.....                        | 0E.00.45 |
| BALLAST.....                                  | 0E.00.46 |
| FRONT WEIGHT CARRIER.....                     | 0E.00.47 |
| FRONT BALLAST KG. 250.....                    | 0E.00.52 |
| BALLAST LOCK BAR.....                         | 0E.00.53 |
| HYDRAULIC BREAKING FOR TRAILER.....           | 0E.00.55 |
| HYDRAULIC BREAKING FOR TRAILER.....           | 0E.00.56 |
| HYDRAULIC BREAKING FOR TRAILER.....           | 0E.00.57 |
| HYDRAULIC BREAKING FOR TRAILER.....           | 0E.00.58 |
| HYDRAULIC BREAKING FOR TRAILER - ITALY -..... | 0E.00.59 |
| HYDRAULIC BREAKING FOR TRAILER - ITALY -..... | 0E.00.60 |
| HYDRAULIC BREAKING FOR TRAILER - ITALY -..... | 0E.00.61 |

|                                           |                   |
|-------------------------------------------|-------------------|
| LUBRICATOR.....                           | 0E.00.62          |
| TOOL POUCH.....                           | 0E.00.63          |
| REAR TOWING HITCH.....                    | 0.008.8803.3/20.A |
| REAR TOWING HITCH.....                    | 0.008.8805.3/20.A |
| HYDRAULIC DISTRIBUTOR-PARTS.....          | 0.009.2006.4.A    |
| HYDRAULIC DISTRIBUTOR-PARTS.....          | 0.009.2007.4/10.A |
| DRAWBAR COUPLING.....                     | 0.009.3814.4/20.A |
| REAR TOWING HITCH.....                    | 0.010.0336.2.A    |
| TOWING HITCH.....                         | 0.010.1702.3.A    |
| REAR TOWING HITCH CAT: "C" .....          | 0.011.2196.4.A    |
| DRAWBAR COUPLING CAT: "D2" .....          | 0.011.3191.4.A    |
| REAR TOWING HITCH CAT: "D" GRASSI.....    | 0.011.3193.4/10.A |
| 3 - POINT HITCH - ADJUSTABLE RH RODS..... | 0.011.3988.3.A    |
| REAR TOWING HITCH CAT: "C" .....          | 0.011.7514.4.A    |
| ENGAGEMENT.....                           | 0.98309.50.3/10.A |
| VALVE PARTS.....                          | 2.3719.400.0/40.A |
| VALVE PARTS.....                          | 2.3719.550.0/30.A |
| TRAILER BRAKE VALVE.....                  | 2.3719.550.0/40.A |



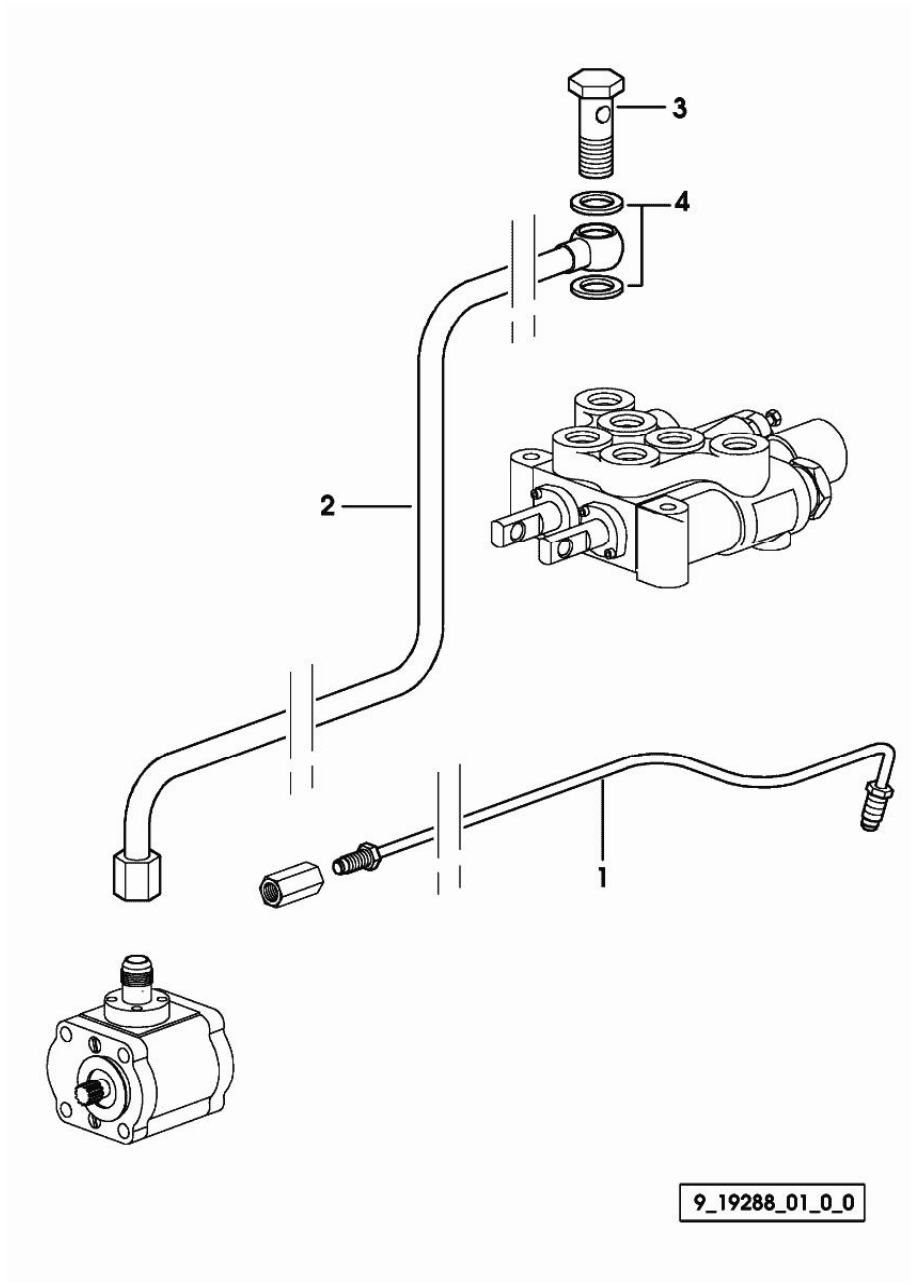

## Agrolux 60

Section: ACCESSORIES

Ref: 0E.00.2

 
### 4-WAY AUXILIARY DISTRIBUTOR

| Fig. | P/n | QTY | Name |
|------|-----|-----|------|
|------|-----|-----|------|

#### Notes:

1025 <- X Agrolux F 60 1006 <- X Agrolux F 70 1018 <- X Agrolux F 80 [Agrolux 60]

|   |                 |   |                            |
|---|-----------------|---|----------------------------|
| 1 | 0.009.9319.3/10 | 1 | tube sx/lh/li              |
| 2 | 0.011.8775.3    | 1 | tube                       |
| 3 | 2.3335.008.2    | 1 | pipe union m 18 p.1.5 x 32 |
| 4 | 2.1560.014.0    | 2 | washer 18.2 x 24           |

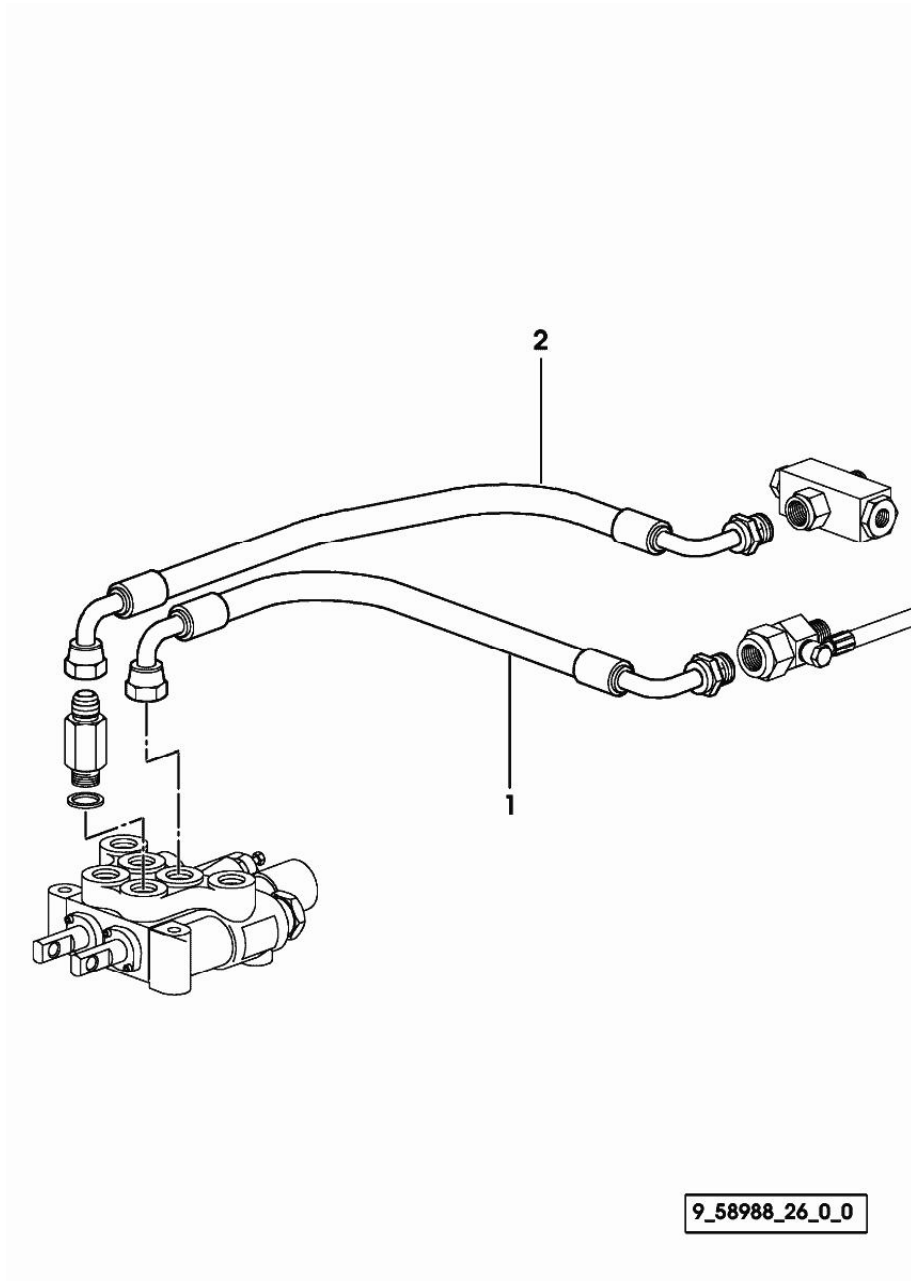

## Agrolux 60

Section: ACCESSORIES

Ref: 0E.00.3

### PILOTED CHECK VALVE

| Fig. | P/n | QTY | Name |
|------|-----|-----|------|
|------|-----|-----|------|

#### Notes:

1036 <- X Agrolux F 60 1029 <- X Agrolux F 70 1048 <- X Agrolux F 80 - FOR 4-WAY DISTRIBUTOR  
[Agrolux 60]

 
|   |              |   |      |
|---|--------------|---|------|
| 1 | 0.011.3059.3 | 1 | tube |
| 2 | 0.011.3060.3 | 1 | tube |

## 6-WAY AUXILIARY DISTRIBUTOR

1025 <- X Agrolux F 60    1006 <- X Agrolux F 70    1018 <- X Agrolux F 80    [Agrolux 60]

|    |                 |    |                                                                                 |
|----|-----------------|----|---------------------------------------------------------------------------------|
| 1  | 0.009.2007.4/10 | 1  | pool valve - SALAMI<br>COMPONENT PARTS SEE COMPONENTS LIST<br>☞ 0.009.2007.4/10 |
| 2  | 2.0112.221.2    | 2  | screw m 8 p.1.25 x 60                                                           |
| 3  | 2.0112.205.2    | 1  | screw m 8 p.1.25 x 16                                                           |
| 4  | 2.1011.105.2    | 2  | nut m 8 p.1.25                                                                  |
| 5  | 2.1470.004.2    | 4  | lock washer 8                                                                   |
| 6  | 2.3261.009.2    | 3  | pipe fitting m 18 p.1.5-3/4"                                                    |
| 7  | 2.1560.014.0    | 8  | washer 18.2 x 24                                                                |
| 9  | 0.009.8971.3/30 | 1  | tube                                                                            |
| 10 | 0.009.8972.3/30 | 1  | tube                                                                            |
| 11 | 0.009.8973.3/30 | 1  | tube                                                                            |
| 12 | 2.1560.054.0    | 6  | gasket 21 x 26                                                                  |
| 13 | 0.98309.50.3/10 | 6  | coupling<br>COMPONENT PARTS SEE COMPONENTS LIST<br>☞ 0.98309.50.3/10            |
| 14 | 0.013.7997.0    | 6  | plug                                                                            |
| 15 | 2.1410.015.1    | 12 | circlip 38x1.75                                                                 |
| 18 | 0.008.1490.4    | 3  | control                                                                         |
| 19 | 0.009.9394.0    | 3  | lever                                                                           |
| 20 | 0.150.6722.0    | 3  | grip m 10 p.1.5                                                                 |
| 21 | 2.0312.015.2    | 2  | screw m 5 p.0.8x45                                                              |
| 22 | 2.1474.006.2    | 6  | spring washer 5                                                                 |
| 23 | 0.009.9286.3/20 | 1  | tube                                                                            |
| 24 | 2.3339.346.2    | 3  | pipe fitting m 18 p.1.5-3/4"                                                    |
| 25 | 2.3339.651.2/10 | 1  | pipe union m 18                                                                 |
| 26 | 0.009.9387.3/20 | 1  | tube                                                                            |
| 27 | 0.009.9388.3/20 | 1  | tube                                                                            |
| 28 | 2.0312.017.2    | 4  | screw m 5 p.0.8x55                                                              |



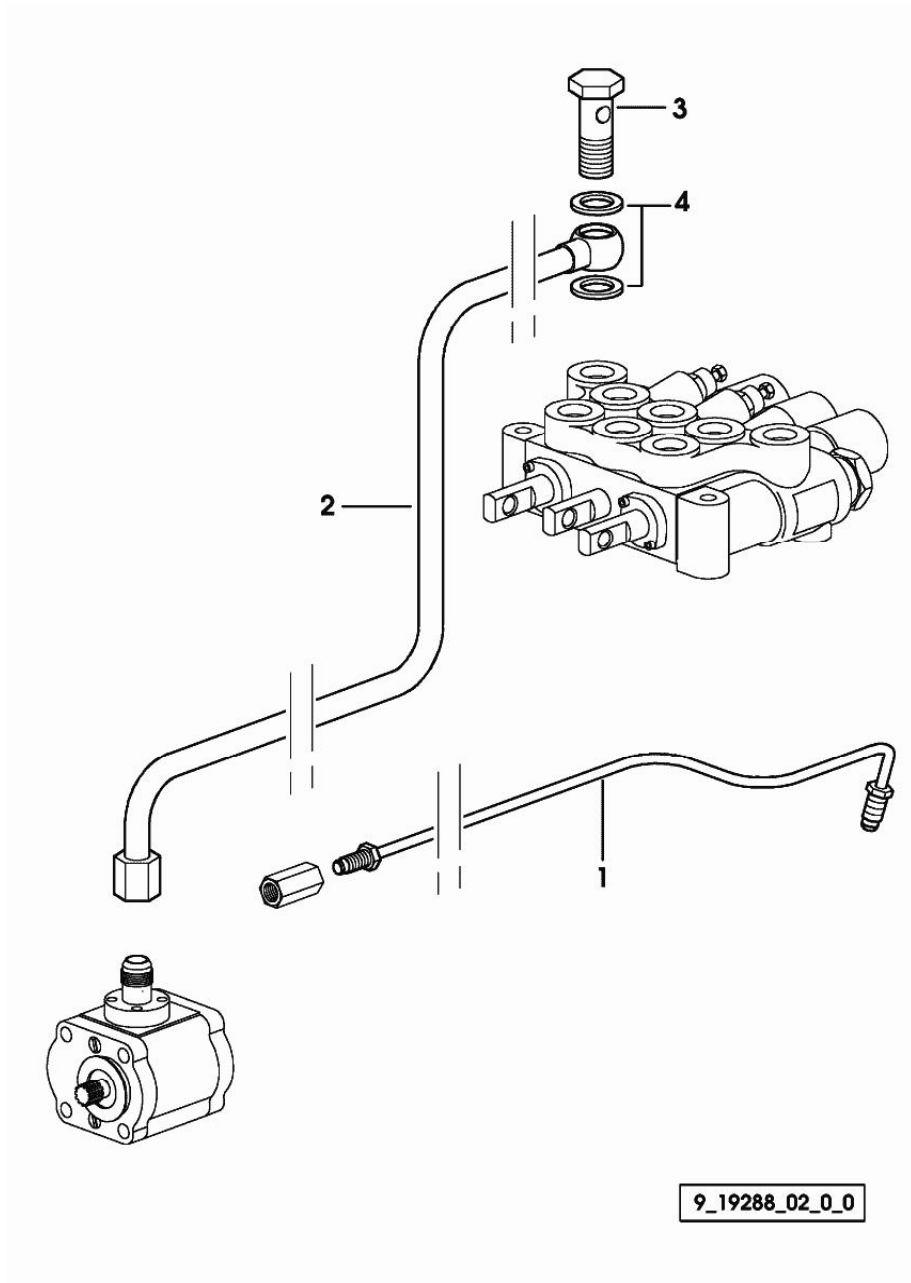

## Agrolux 60

Section: ACCESSORIES

Ref: 0E.00.6

### 6-WAY AUXILIARY DISTRIBUTOR

| Fig. | P/n | QTY | Name |
|------|-----|-----|------|
|------|-----|-----|------|

#### Notes:

1025 <- X Agrolux F 60 1006 <- X Agrolux F 70 1018 <- X Agrolux F 80 [Agrolux 60]

|   |                 |   |                            |
|---|-----------------|---|----------------------------|
| 1 | 0.009.9319.3/10 | 1 | tube sx/lh/li              |
| 2 | 0.011.8776.3    | 1 | tube                       |
| 3 | 2.3335.008.2    | 1 | pipe union m 18 p.1.5 x 32 |
| 4 | 2.1560.014.0    | 2 | washer 18.2 x 24           |

## Section: ACCESSORIES

 
**PILOTED CHECK VALVE**

| Fig. | P/n | QTY | Name |
|------|-----|-----|------|
|------|-----|-----|------|


**Notes:**

- FOR 6-WAY DISTRIBUTOR [Agrolux 60]

|   |              |   |      |
|---|--------------|---|------|
| 1 | 0.011.3111.3 | 1 | tube |
| 2 | 0.011.3112.3 | 1 | tube |

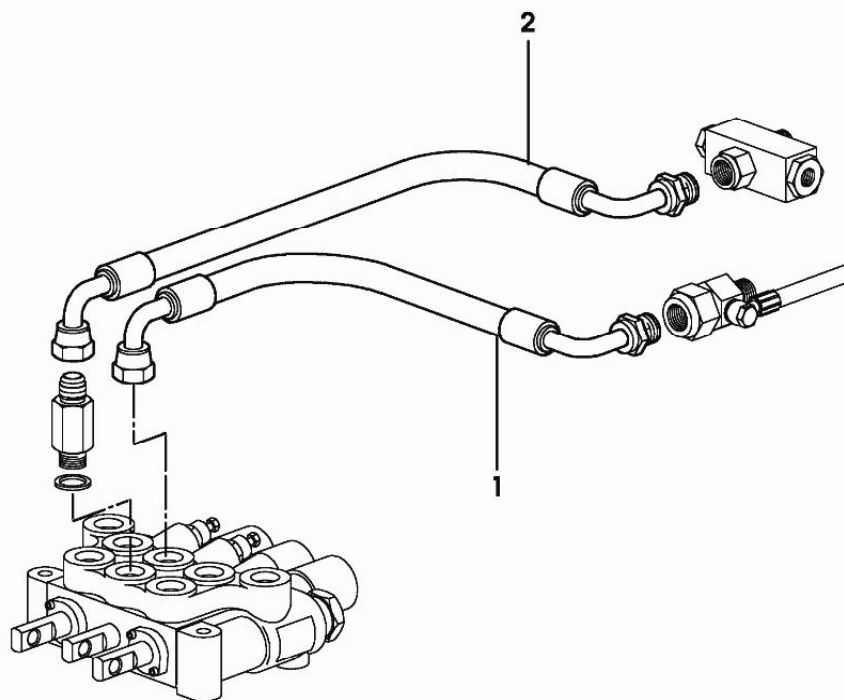

9\_58988\_27\_0\_0

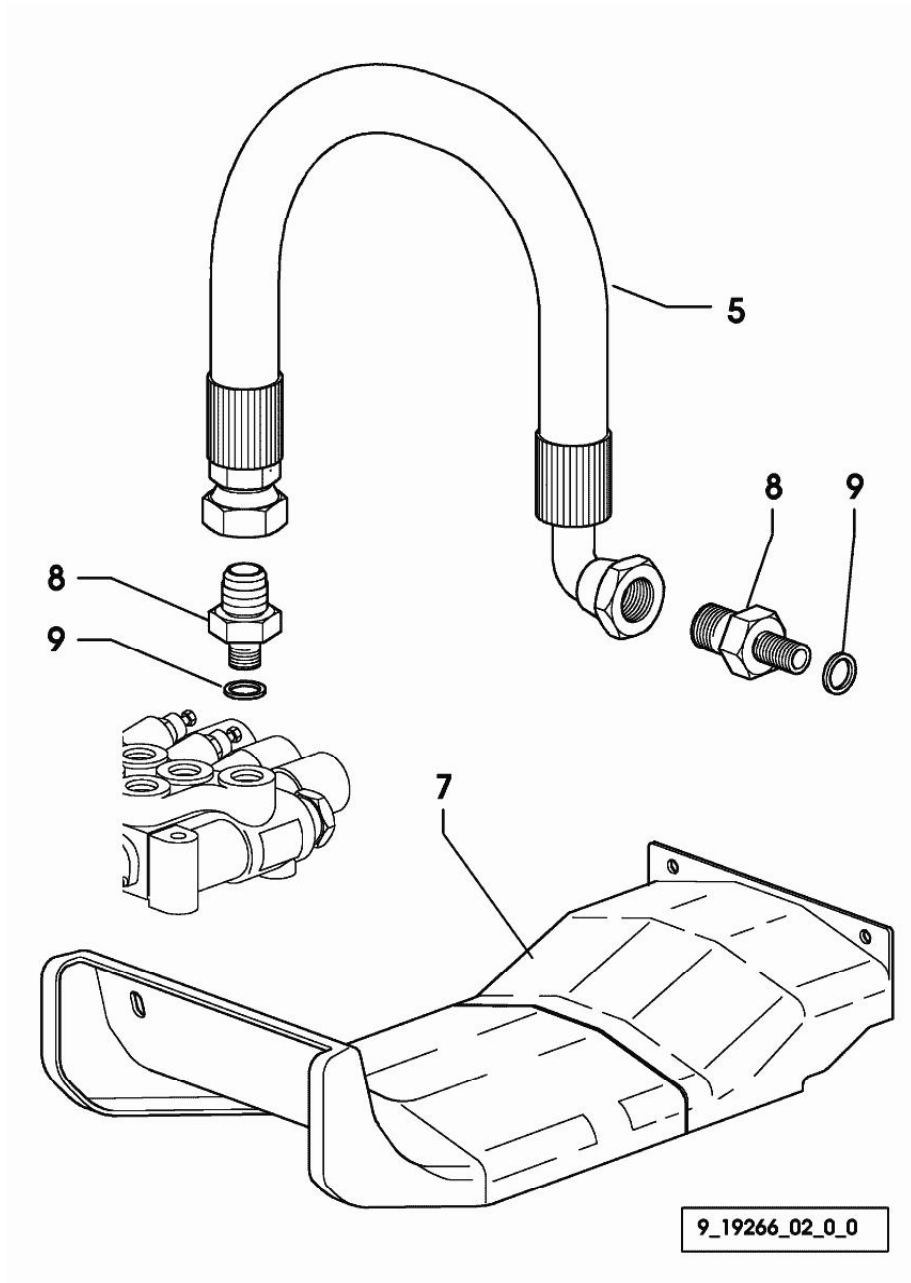 

## Agrolux 60

Section: ACCESSORIES

Ref: 0E.00.9

### AUXILIARY HYDRAULIC DISTRIBUTOR

| Fig. | P/n | QTY | Name |
|------|-----|-----|------|
|------|-----|-----|------|

#### Notes:

1025 <- X Agrolux F 60 1006 <- X Agrolux F 70 1018 <- X Agrolux F 80 [Agrolux 60]

|   |                 |   |                              |
|---|-----------------|---|------------------------------|
| 5 | 0.009.8968.3/20 | 1 | tube                         |
| 7 | 0.009.9391.0/40 | 1 | cover                        |
| 8 | 2.3261.009.2    | 2 | pipe fitting m 18 p.1.5-3/4" |
| 9 | 2.1560.014.0    | 2 | washer 18.2 x 24             |