



PARTS MANUAL

AGROLUX F 60 TRACTOR

PRINTED BY :
heavy-equipmentmanual.com

 
Agrolux F 60

ACCESSORIES

GENERAL

4-WAY AUXILIARY DISTRIBUTOR.....	0E.00.0
4-WAY AUXILIARY DISTRIBUTOR.....	0E.00.1
4-WAY AUXILIARY DISTRIBUTOR.....	0E.00.2
PILOTED CHECK VALVE.....	0E.00.3
6-WAY AUXILIARY DISTRIBUTOR.....	0E.00.4
6-WAY AUXILIARY DISTRIBUTOR.....	0E.00.5
6-WAY AUXILIARY DISTRIBUTOR.....	0E.00.6
PILOTED CHECK VALVE.....	0E.00.7
4 - 6 - WAY AUXILIARY DISTRIBUTOR.....	0E.00.8
AUXILIARY HYDRAULIC DISTRIBUTOR.....	0E.00.9
AUXILIARY HYDRAULIC DISTRIBUTOR.....	0E.00.10
EXHAUST PIPE.....	0E.00.11
PILOTED CHECK VALVE.....	0E.00.12
3 POINT HITCH.....	0E.00.18
3 POINT HITCH - LIFTING ARMS.....	0E.00.19
THREE-POINT COUPLING - TOP/LOWER LINK - AUTOM.....	0E.00.20
3 - POINT HITCH - ADJUSTABLE RH RODS.....	0E.00.21
3-POINT HITCH WITH HYDRAULIC LIFT ROD.....	0E.00.22
TOWING BAR.....	0E.00.23
REAR OSCILLATING HITCH CAT. " A ".....	0E.00.26
REAR OSCILLATING HITCH.....	0E.00.27
FRONT TOWING HITCH.....	0E.00.29
REAR TOWING HITCH.....	0E.00.30
PIN FOR REAR TOW HOOK.....	0E.00.31
REAR TOWING HITCH (CRAMER).....	0E.00.33
REAR TOWING HITCH CAT: "D" GRASSI.....	0E.00.36
REAR TOWING HITCH CAT: "D" GRASSI.....	0E.00.37
REAR TOWING HITCH CAT: "D2" GRASSI.....	0E.00.38
REAR TOWING HITCH CAT: "D2" GRASSI.....	0E.00.39
REAR TOWING HITCH (GRASSI) CEE.....	0E.00.40
REAR TOWING HITCH (GRASSI) CAT. " C ".....	0E.00.41
FRAME HOOK HOLDER GRASSI.....	0E.00.42
FRAME HOOK HOLDER.....	0E.00.43
BALLAST.....	0E.00.46
FRONT WEIGHT CARRIER.....	0E.00.47
FRONT BALLAST n. 2.....	0E.00.48
FRONT BALLAST n. 4.....	0E.00.49
FRONT BALLAST n. 8.....	0E.00.50
FRONT WEIGHT CARRIER.....	0E.00.51
WHEEL BALLAST.....	0E.00.54

HYDRAULIC BREAKING FOR TRAILER.....	0E.00.56
HYDRAULIC BREAKING FOR TRAILER.....	0E.00.57
HYDRAULIC BREAKING FOR TRAILER.....	0E.00.58
HYDRAULIC BREAKING FOR TRAILER - ITALY -	0E.00.60
HYDRAULIC BREAKING FOR TRAILER - ITALY -	0E.00.61
LUBRICATOR.....	0E.00.62
TOOL POUCH.....	0E.00.63
HYDRAULIC DISTRIBUTOR-PARTS.....	0.009.2006.4.A
HYDRAULIC DISTRIBUTOR-PARTS.....	0.009.2007.4/10.A
TOWING HITCH.....	0.010.1702.3.A
DRAWBAR COUPLING CAT: "D2"	0.011.3191.4.A
REAR TOWING HITCH CAT: "D" GRASSI.....	0.011.3193.4/10.A
CYLINDER PARTS.....	0.011.3468.4/10.A
3 - POINT HITCH - ADJUSTABLE RH RODS.....	0.011.3988.3.A
REAR TOWING HITCH CAT: "D".....	0.011.5143.4.A
DRAWBAR COUPLING CAT: "D2"	0.011.5144.4.A
FRAME HOOK HOLDER.....	0.012.6368.4/10.A
MECH. DRAWBAR COUPLING EXPORT.....	0.012.6369.4/10.A
DRAWBAR COUPLING GRASSI.....	0.012.6375.4.A
DRAWBAR COUPLING - V.ORLANDI -	0.012.6638.4/10.A
DRAWBAR COUPLING CRAMER.....	0.012.6876.4.A
ENGAGEMENT.....	0.98309.50.3/10.A
VALVE PARTS.....	2.3719.400.0/40.A
VALVE PARTS.....	2.3719.550.0/30.A
TRAILER BRAKE VALVE.....	2.3719.550.0/40.A



Section: ACCESSORIES

4-WAY AUXILIARY DISTRIBUTOR

9_16188_15_0_0


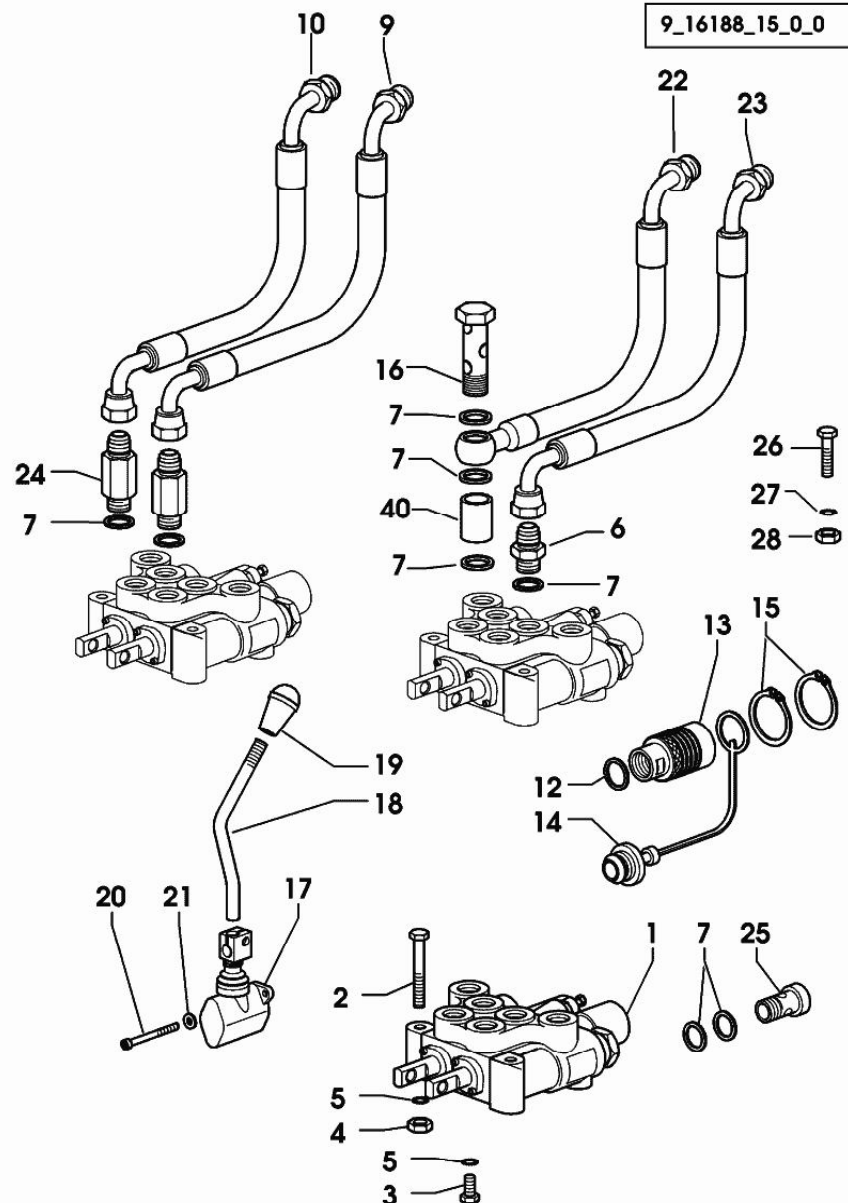


Fig.	P/n	QTY	Name
------	-----	-----	------

Notes:

-> 1026 X Agrolux F60 -> 1007 X Agrolux F70 -> 1019 X Agrolux F80 [Agrolux F 60]

1	0.009.2006.4	1	spool valve - SALAMI COMPONENT PARTS SEE COMPONENTS LIST ☞ 0.009.2006.4
2	2.0112.221.2	2	screw m 8 p.1.25 x 60
3	2.0112.205.2	1	screw m 8 p.1.25 x 16
4	2.1011.105.2	2	nut m 8 p.1.25
5	2.1470.004.2	4	lock washer 8
6	2.3261.009.2	2	pipe fitting m 18 p.1.5-3/4"
7	2.1560.014.0	7	washer 18.2 x 24
9	0.009.8972.3/30	1	tube
10	0.009.9388.3/20	1	tube
12	2.1560.054.0	4	gasket 21 x 26
13	0.98309.50.3/10	4	coupling COMPONENT PARTS SEE COMPONENTS LIST ☞ 0.98309.50.3/10
14	0.013.7997.0	4	plug
15	2.1410.015.1	8	circlip 38x1.75
16	2.3339.820.2/10	1	pipe union m 18 p.1.5 x 68
17	0.008.1490.4	2	control
18	0.012.4145.0	2	lever
19	0.150.6722.0	2	grip m 10 p.1.5
20	2.0312.015.2	4	screw m 5 p.0.8x45
21	2.1474.006.2	4	spring washer 5
22	0.012.7001.3	1	tube
23	0.009.8971.3/30	1	tube
24	2.3339.346.2	1	pipe fitting m 18 p.1.5-3/4"
25	2.3339.651.2/10	1	pipe union m 18
26	2.0112.205.2	2	screw m 8 p.1.25 x 16
27	2.1310.004.2	4	flat washer 8.4x17
28	2.1011.105.2	2	nut m 8 p.1.25
40	2.1549.548.2	1	spacer 19 x 25 x 34 -> 1037 X Agrolux F60 -> 1030 X Agrolux F70 -> 1049 X Agrolux F80

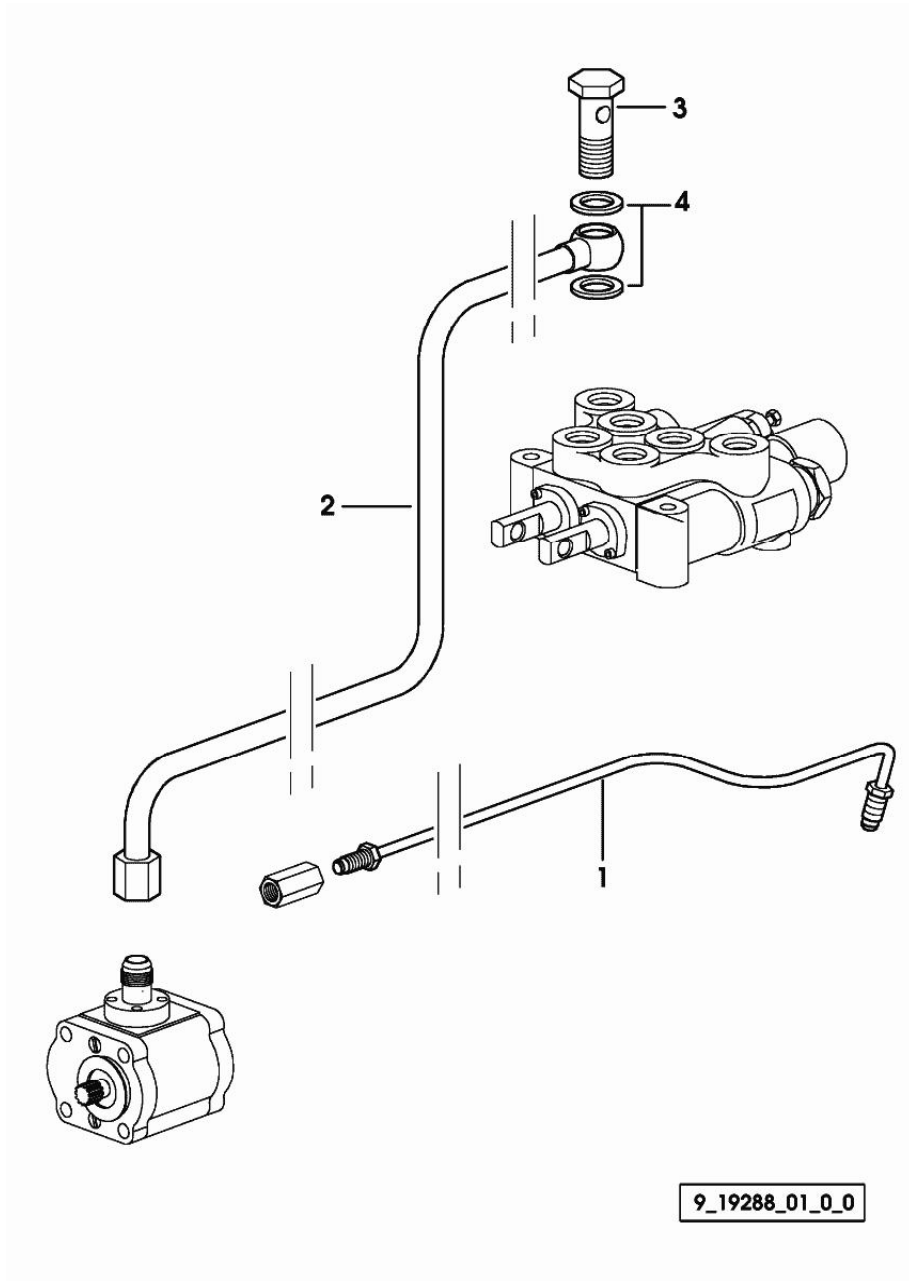

Agrolux F 60

Section: ACCESSORIES

Ref: 0E.00.2

4-WAY AUXILIARY DISTRIBUTOR

Fig.	P/n	QTY	Name
------	-----	-----	------

Notes:

1025 <- X Agrolux F 60 1006 <- X Agrolux F 70 1018 <- X Agrolux F 80 [Agrolux F 60]

1	0.009.9319.3/10	1	tube sx/lh/li
2	0.011.8775.3	1	tube
3	2.3335.008.2	1	pipe union m 18 p.1.5 x 32
4	2.1560.014.0	2	washer 18.2 x 24

Section: ACCESSORIES


PILOTED CHECK VALVE

Fig.	P/n	QTY	Name
------	-----	-----	------

Notes:

1036 <- X Agrolux F 60 1029 <- X Agrolux F 70 1048 <- X Agrolux F 80 - FOR 4-WAY DISTRIBUTOR
[Agrolux F 60]

1	0.011.3059.3	1	tube
2	0.011.3060.3	1	tube

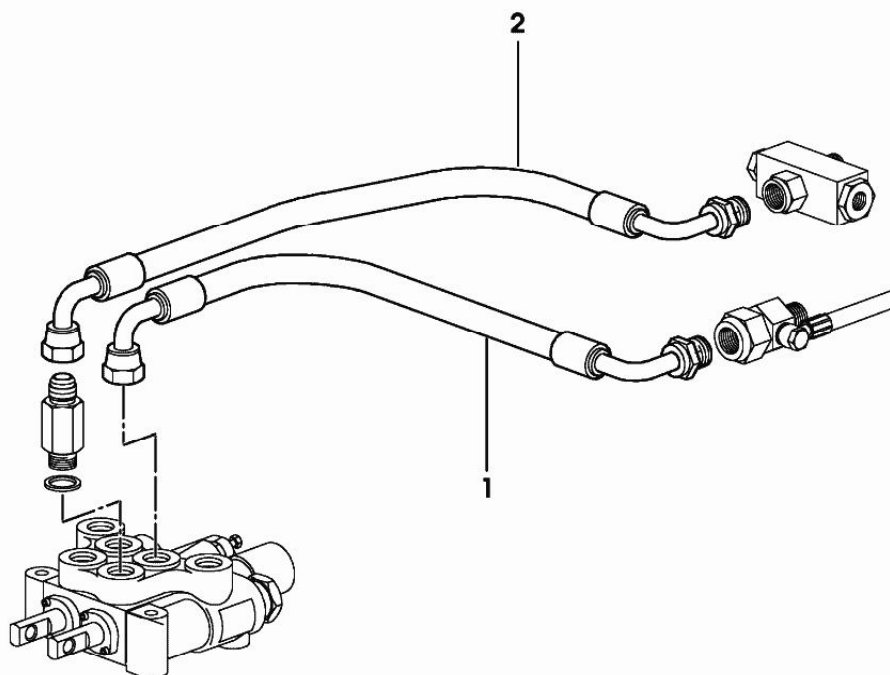

9_58988_26_0_0


Section: ACCESSORIES

6-WAY AUXILIARY DISTRIBUTOR

Fig.	P/n	QTY	Name
------	-----	-----	------

Notes:

1025 <- X Agrolux F 60 1006 <- X Agrolux F 70 1018 <- X Agrolux F 80 [Agrolux F 60]

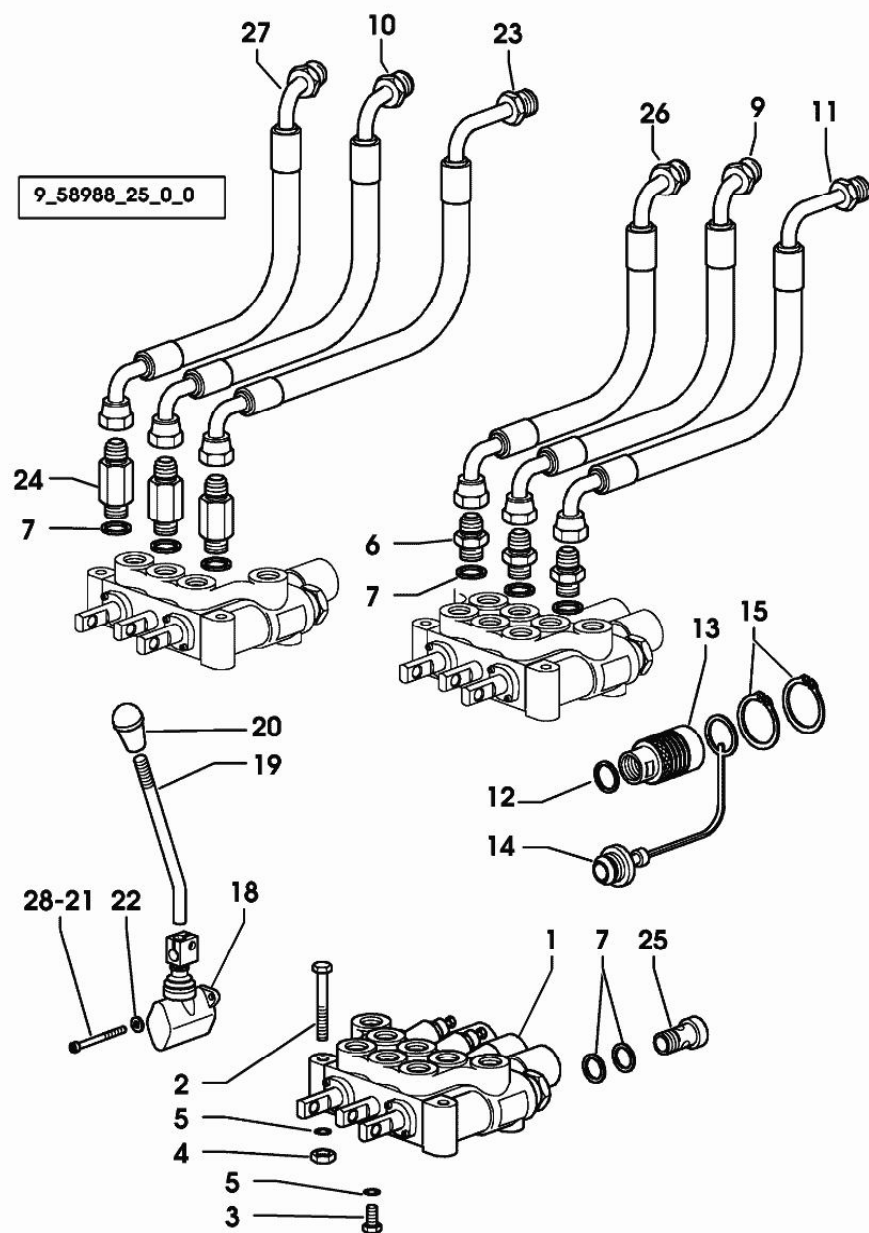

1	0.009.2007.4/10	1	spool valve - SALAMI COMPONENT PARTS SEE COMPONENTS LIST ☞ 0.009.2007.4/10
2	2.0112.221.2	2	screw m 8 p.1.25 x 60
3	2.0112.205.2	1	screw m 8 p.1.25 x 16
4	2.1011.105.2	2	nut m 8 p.1.25
5	2.1470.004.2	4	lock washer 8
6	2.3261.009.2	3	pipe fitting m 18 p.1.5-3/4"
7	2.1560.014.0	8	washer 18.2 x 24
9	0.009.8971.3/30	1	tube
10	0.009.8972.3/30	1	tube
11	0.009.8973.3/30	1	tube
12	2.1560.054.0	6	gasket 21 x 26
13	0.98309.50.3/10	6	coupling COMPONENT PARTS SEE COMPONENTS LIST ☞ 0.98309.50.3/10
14	0.013.7997.0	6	plug
15	2.1410.015.1	12	circlip 38x1.75
18	0.008.1490.4	3	control
19	0.009.9394.0	3	lever
20	0.150.6722.0	3	grip m 10 p.1.5
21	2.0312.015.2	2	screw m 5 p.0.8x45
22	2.1474.006.2	6	spring washer 5
23	0.009.9286.3/20	1	tube
24	2.3339.346.2	3	pipe fitting m 18 p.1.5-3/4"
25	2.3339.651.2/10	1	pipe union m 18
26	0.009.9387.3/20	1	tube
27	0.009.9388.3/20	1	tube
28	2.0312.017.2	4	screw m 5 p.0.8x55


Section: ACCESSORIES

6-WAY AUXILIARY DISTRIBUTOR


Fig.	P/n	QTY	Name
------	-----	-----	------

Notes:

-> 1026 X Agrolux F60 -> 1007 X Agrolux F70 -> 1019 X Agrolux F80 [Agrolux F 60]

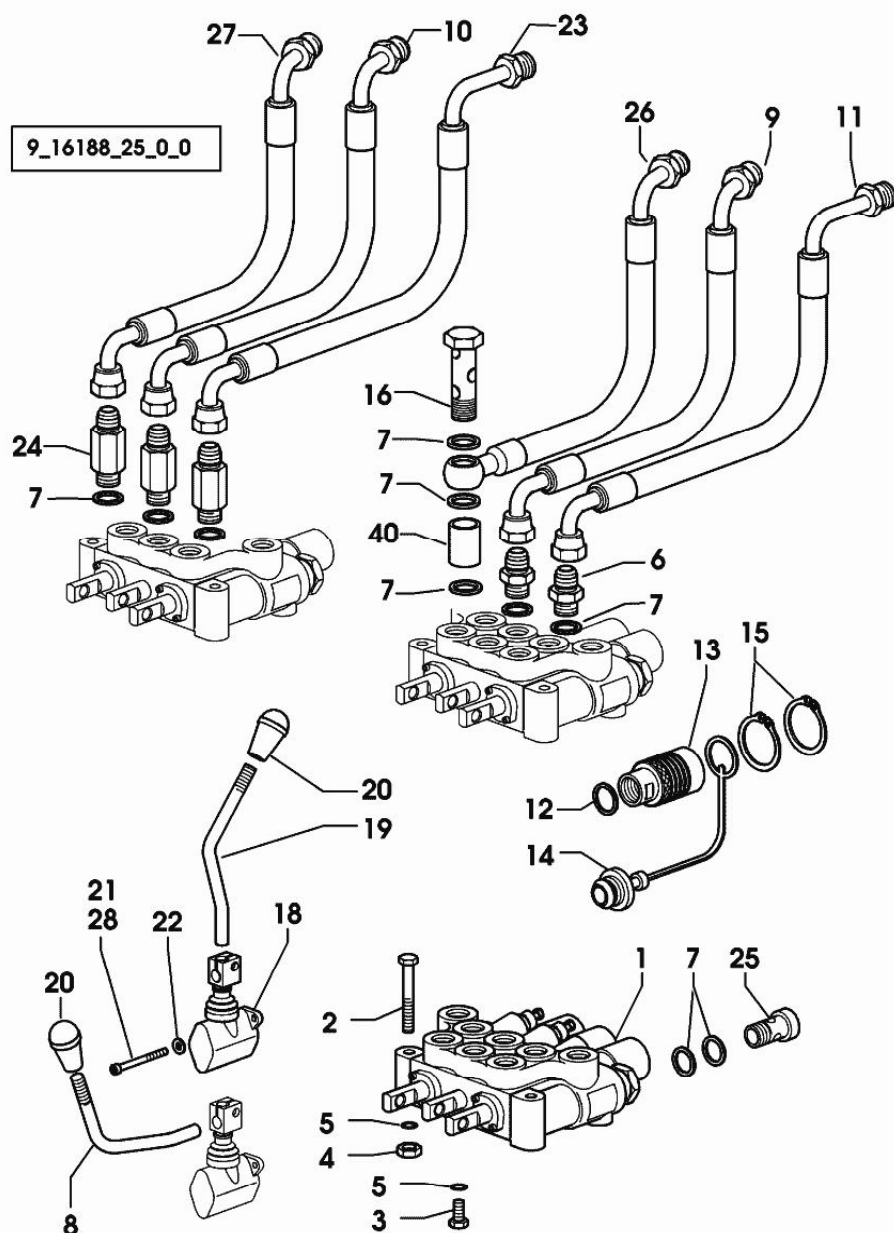

1	0.009.2007.4/10	1	spool valve - SALAMI COMPONENT PARTS SEE COMPONENTS LIST ☞ 0.009.2007.4/10
2	2.0112.221.2	2	screw m 8 p.1.25 x 60
3	2.0112.205.2	1	screw m 8 p.1.25 x 16
4	2.1011.105.2	2	nut m 8 p.1.25
5	2.1470.004.2	4	lock washer 8
6	2.3261.009.2	2	pipe fitting m 18 p.1.5-3/4"
7	2.1560.014.0	9	washer 18.2 x 24
8	0.012.4146.0	1	lever
9	0.009.8971.3/30	1	tube
10	0.009.8972.3/30	1	tube
11	0.009.8973.3/30	1	tube
12	2.1560.054.0	6	gasket 21 x 26
13	0.98309.50.3/10	6	coupling COMPONENT PARTS SEE COMPONENTS LIST ☞ 0.98309.50.3/10
14	0.013.7997.0	6	plug
15	2.1410.015.1	12	circlip 38x1.75
16	2.3339.820.2/10	1	pipe union m 18 p.1.5 x 68
18	0.008.1490.4	3	control
19	0.012.4145.0	2	lever
20	0.150.6722.0	3	grip m 10 p.1.5
21	2.0312.015.2	2	screw m 5 p.0.8x45
22	2.1474.006.2	6	spring washer 5
23	0.009.8973.3/30	1	tube
24	2.3339.346.2	3	pipe fitting m 18 p.1.5-3/4"
25	2.3339.651.2/10	1	pipe union m 18
26	0.012.7001.3	1	tube
27	0.009.9388.3/20	1	tube
28	2.0312.017.2	4	screw m 5 p.0.8x55
40	2.1549.548.2	1	spacer 19 x 25 x 34 -> 1037 X Agrolux F60 -> 1030 X Agrolux F70 -> 1049 X Agrolux F80

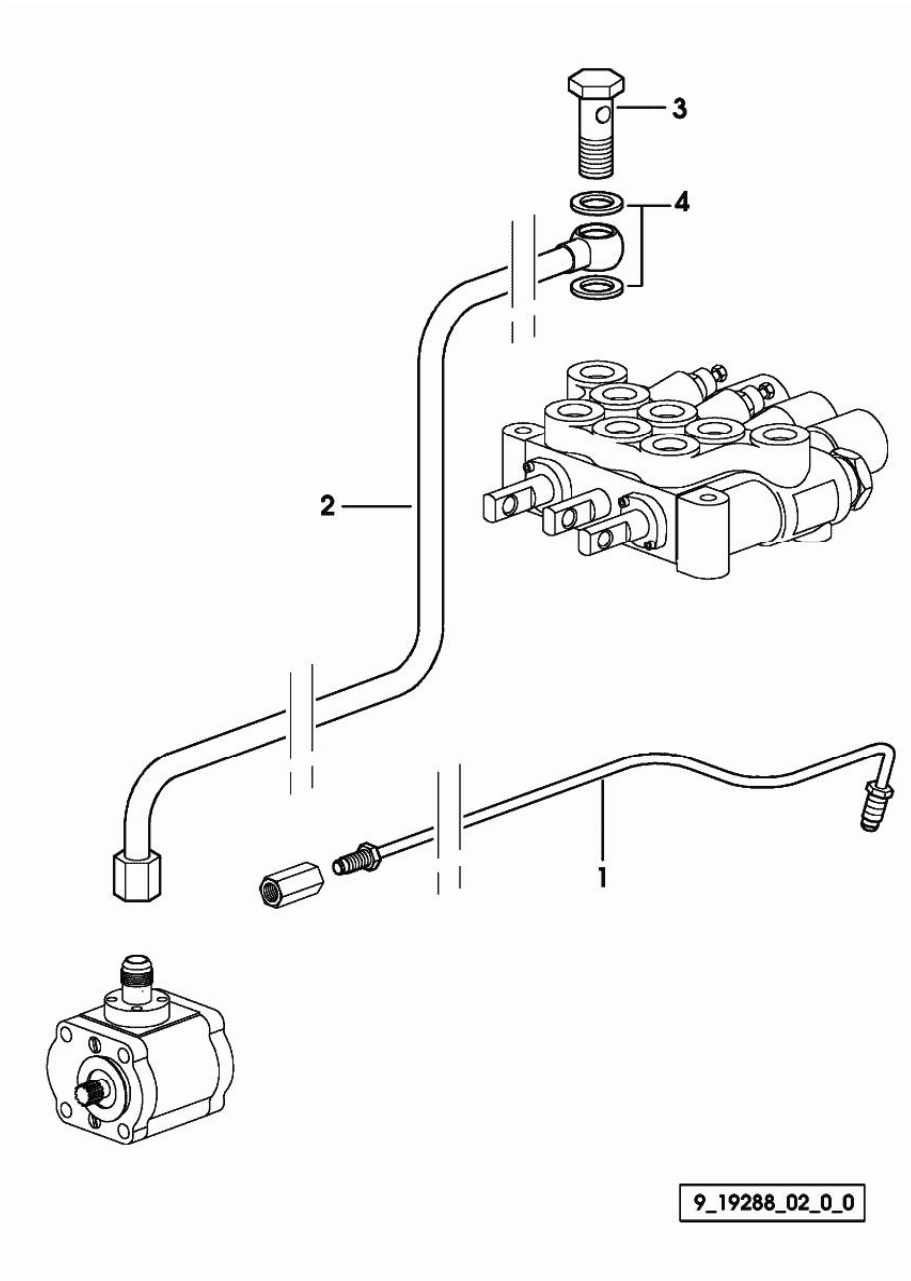

Agrolux F 60

Section: ACCESSORIES

Ref: 0E.00.6

6-WAY AUXILIARY DISTRIBUTOR

Fig.	P/n	QTY	Name
------	-----	-----	------

Notes:

1025 <- X Agrolux F 60 1006 <- X Agrolux F 70 1018 <- X Agrolux F 80 [Agrolux F 60]

1	0.009.9319.3/10	1	tube sx/lh/li
2	0.011.8776.3	1	tube
3	2.3335.008.2	1	pipe union m 18 p.1.5 x 32
4	2.1560.014.0	2	washer 18.2 x 24