



PARTS MANUAL

AGROPLUS 95 TRACTOR

PRINTED BY :
heavy-equipmentmanual.com

Agroplus 95

ACCESSORIES


GENERAL

4-WAY AUXILIARY DISTRIBUTOR SALAMI.....	0E.00.0
4/8-WAY AUXILIARY DISTRIBUTOR SALAMI.....	0E.00.1
4-WAY HYDRAULIC CONTROL VALVE SALAMI.....	0E.00.2
8-WAY AUXILIARY DISTRIBUTOR SALAMI.....	0E.00.3
8-WAY AUXILIARY DISTRIBUTOR SALAMI.....	0E.00.4
4-WAY AUXILIARY DISTRIBUTOR BOSCH.....	0E.00.5
4-WAY CONTROL VALVES - OIL RECOVERY.....	0E.00.6
4-WAY HYDRAULIC CONTROL VALVE BOSCH.....	0E.00.7
8-WAY AUXILIARY DISTRIBUTOR BOSCH.....	0E.00.8
8-WAY CONTROL VALVES - OIL RECOVERY.....	0E.00.9
8-WAY AUXILIARY DISTRIBUTOR BOSCH.....	0E.00.10
4-WAY QUICK COUPLERS.....	0E.00.11
8-WAY QUICK COUPLERS.....	0E.00.12
8-WAY QUICK COUPLERS.....	0E.00.13
OIL REGULATOR CONTROL.....	0E.00.14
BRACKET.....	0E.00.16
3 POINT HITCH.....	0E.00.17
3-POINT LINKAGE WITH AUTOMATIC COUPLERS A = mm 34.....	0E.00.19
3-POINT LINKAGE WITH AUTOMATIC COUPLERS A = mm 34.....	0E.00.20
3-POINT LINKAGE WITH AUTOMATIC COUPLERS A = mm 30.....	0E.00.21
3 POINT HITCH.....	0E.00.22
3-POINT HITCH - ADJUSTABLE RH LIFT RODS.....	0E.00.24
3-POINT HITCH WITH HYDRAULIC LIFT ROD dx/rh/re.....	0E.00.26
3 POINT HITCH.....	0E.00.28
3 POINT HITCH.....	0E.00.29
MANUAL LATERAL STABILIZERS.....	0E.00.30
THREE-POINT HITCH - AUTOMATIC LATERAL STABILIZERS.....	0E.00.31
BRACKET FOR TOP LINK SUPPORT SPRING.....	0E.00.32
TOWING BAR.....	0E.00.33
PICK-UP-HITCH.....	0E.00.34
FRONT TOWING HITCH.....	0E.00.36
FRONT TOWING HITCH.....	0E.00.37
REAR TOWING HITCH.....	0E.00.38
REAR TOWING HITCH CAT. " D2 ".....	0E.00.39
REAR TOWING HITCH CAT: "D2" GRASSI.....	0E.00.40
REAR TOWING HITCH CAT: "D3" GRASSI.....	0E.00.41
REAR TOWING HITCH CAT. " D3 ".....	0E.00.42
DRAWBAR COUPLING CAT: "D" - ITALY.....	0E.00.43
REAR TOWING HITCH CAT: "C".....	0E.00.44
REAR TOWING HITCH EXPORT CH.....	0E.00.45

REAR TOWING HITCH (CRAMER) EXPORT D.....	0E.00.46
REAR OSCILLATING HITCH - FOR MODELS WITH CLEVIS GRASSI.....	0E.00.47
REAR OSCILLATING HITCH CAT. " A ".....	0E.00.48
FRONT WEIGHT CARRIER.....	0E.00.51
BALLAST.....	0E.00.52
BALLAST LOCK BAR.....	0E.00.53
FRONT BALLAST 400 Kg.....	0E.00.54
WHEEL BALLAST.....	0E.00.55
WHEEL BALLAST.....	0E.00.56
PNEUMATIC TRAILER BRAKING.....	0E.00.57
AIR BRAKING FOR 'ITALY' TRAILER.....	0E.00.59
AIR BRAKING FOR 'ITALY' TRAILER.....	0E.00.60
AIR BRAKING FOR 'ITALY' TRAILER.....	0E.00.61
AIR BRAKING FOR 'EXPORT D' TRAILER.....	0E.00.62
AIR BRAKING FOR 'EXPORT D' TRAILER.....	0E.00.63
AIR BRAKING FOR 'EXPORT D' TRAILER.....	0E.00.64
AIR BRAKING FOR 'EXPORT D' TRAILER.....	0E.00.65
AIR BRAKING FOR 'EXPORT D' TRAILER.....	0E.00.66
AIR BRAKING FOR 'EXPORT D' TRAILER.....	0E.00.67
HYDRAULIC BREAKING FOR TRAILER - ITALY -.....	0E.00.68
HYDRAULIC BREAKING FOR TRAILER - ITALY -.....	0E.00.69
HYDRAULIC BREAKING FOR TRAILER - EXPORT F.....	0E.00.70
LUBRICATOR.....	0E.00.71
TOOL POUCH.....	0E.00.72
REAR TOWING HITCH.....	0.007.7956.4.A
REAR TOWING HITCH.....	0.007.7957.4.A
DRAWBAR COUPLING.....	0.008.1742.4/30.A
CYLINDER PARTS.....	0.010.0883.4/20.A
TOWING HITCH.....	0.010.1702.3.A
3 - POINT HITCH - ADJUSTABLE RH RODS.....	0.010.1959.3.A
COUPLING PARTS CUNA.....	0.010.4582.4.A
DISTRIBUTOR CONTROL.....	0.010.8216.4/40.A
ENGAGEMENT.....	0.010.8473.0.A
ENGAGEMENT.....	0.010.9832.0.A
DISTRIBUTOR CONTROL.....	0.011.0123.4/30.A
TANK - PARTS.....	0.011.0212.3.A
DRAWBAR COUPLING CRAMER.....	0.011.0796.4.A
CYLINDER PARTS.....	0.011.1052.4.A
REAR TOWING HITCH CAT: "C".....	0.011.3674.4.A
REAR TOWING HITCH CAT: "D".....	0.011.3676.4.A
SUPPORT GRASSI.....	0.011.3710.4.A
STABILIZER.....	0.011.3849.4/10.A
STABILIZER.....	0.011.3850.4/10.A
REAR TOWING HITCH CAT: "D2".....	0.011.5643.4.A

REAR TOWING HITCH CAT: "D3".....	0.011.5644.4.A
TRAILER BRAKE VALVE.....	0.011.8633.4.A
PICK-UP-HITCH.....	0.012.3998.4/20.A
DRAWBAR COUPLING.....	0.013.1047.4.A
LINKAGE.....	0.014.1405.3.A
VALVE PARTS.....	04398756.A
TRAILER BRAKE VALVE.....	04419935.A
DISTRIBUTOR PARTS.....	2.3729.130.0.A
DISTRIBUTOR PARTS.....	2.3729.140.0.A
DISTRIBUTOR PARTS.....	2.3729.150.0/10.A
DISTRIBUTOR PARTS.....	2.3729.170.0.A
DISTRIBUTOR PARTS.....	2.3729.180.0.A
DISTRIBUTOR PARTS.....	2.3729.190.0.A
DISTRIBUTOR PARTS.....	2.3729.200.0.A
VALVE PARTS.....	2.3729.210.0/20.A
TRAILER BRAKE VALVE.....	2.3729.220.0/10.A
DISTRIBUTOR PARTS.....	2.3729.520.0/10.A


4-WAY AUXILIARY DISTRIBUTOR SALAMI

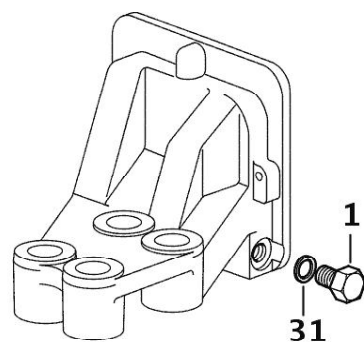

Notes:

[Agroplus 95]

Fig.	P/n	QTY	Name
1	2.3110.401.1	1	plug
2	2.0433.028.7	3	stud bolt m 8 p 1x12- p1.25x130
3	2.3729.190.0	1	spool valve
			COMPONENT PARTS SEE COMPONENTS LIST
			☞ 2.3729.190.0
4	2.3110.404.1	1	plug m 16 p.1.5x14
5	2.1310.006.2	2	flat washer 10.5x21
6	2.0112.305.2	2	screw m 10 p.1.5 x 16
7	0.010.1453.0	2	plug 22
9	2.1560.011.0	1	copper gasket 16.2x20
31	2.1560.005.0	1	copper gasket 10.2 x 14

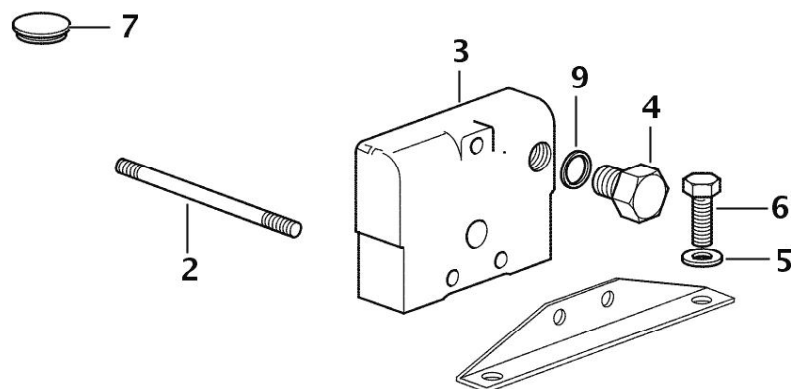

9_77788_16_0_

Section: ACCESSORIES

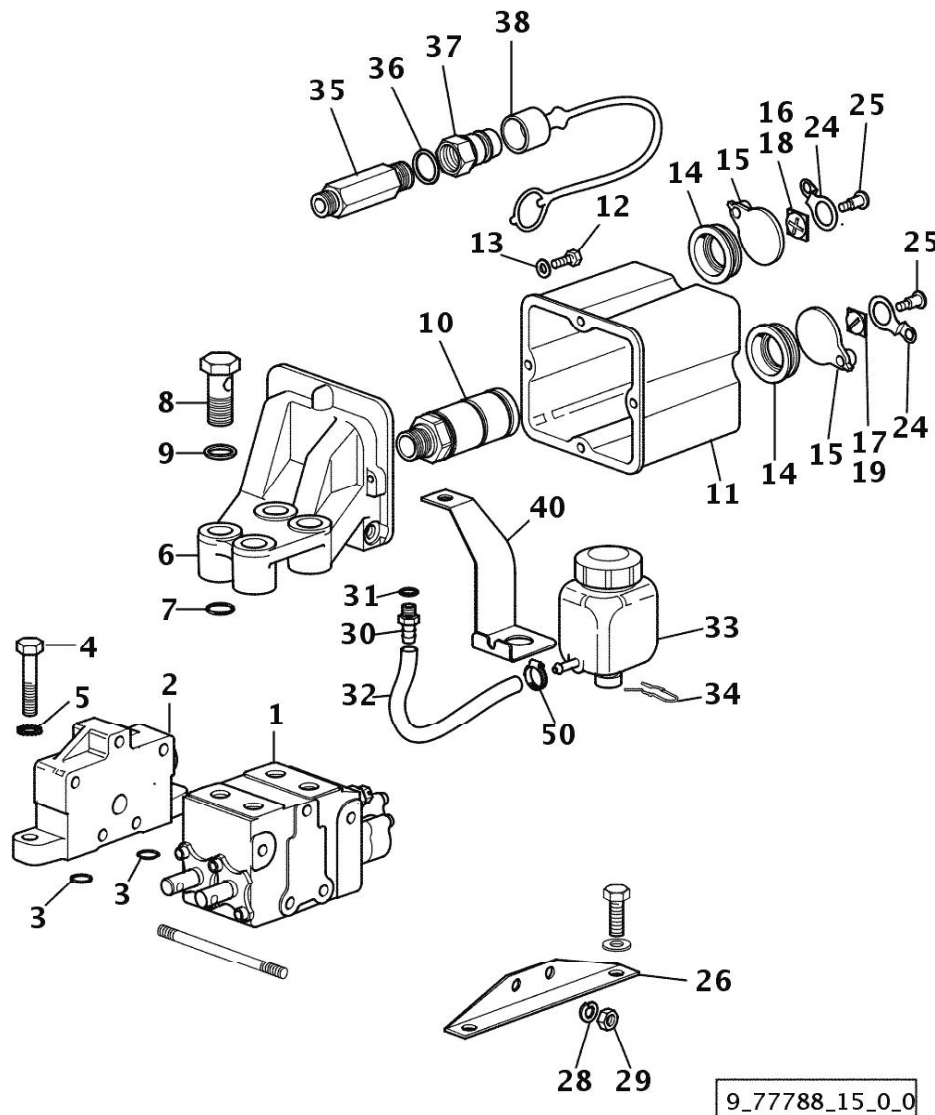
4/8-WAY AUXILIARY DISTRIBUTOR SALAMI

Fig.	P/n	QTY	Name
Notes:			
[Agroplus 95]			
1	2.3729.170.0	1	spool valve COMPONENT PARTS SEE COMPONENTS LIST ☞ 2.3729.170.0
2	0.010.8491.0/20	1	plate
3	2.1531.029.0	2	oil seal 12.37x2.62
4	2.0112.319.2	2	screw m 10 p.1.5 x 50
5	2.1470.006.2	2	lock washer 10
6	0.010.8471.0/20	1	manifold
7	2.1531.052.0	4	oil seal 20.29 x 2.62
8	2.3339.756.2	4	pipe fitting
9	2.1560.014.0	5	washer 18.2 x 24
10	0.010.8473.0	4	coupling FASTER - m 22 p.1.5 / Ø 38 COMPONENT PARTS SEE COMPONENTS LIST ☞ 0.010.8473.0
11	0.010.8474.0	1	guard
12	2.0112.005.2	4	screw m 6 p.1 x 16
13	2.1480.012.2	4	washer 6, d128
14	0.010.8475.0/10	4	dust guard
15	0.010.8476.0	4	cover
16	0.010.8477.0	1	warning light + - RED COLOUR
17	0.010.8478.0	1	warning light (-) - RED COLOUR
18	0.010.8479.0	1	warning light + - COLORE VERDE
19	0.010.8480.0	1	warning light (-) - COLORE VERDE
24	0.010.8485.0/20	4	small leaf spring
25	2.0399.249.3/10	4	screw m 6 x 20
26	0.010.8489.0	1	bracket
28	2.1475.102.2	2	washer 8.4 x 16
29	2.1012.305.7	3	nut m 8 p.1 x 8
30	2.3249.031.2	1	pipe fitting m 10
31	2.1560.005.0	1	copper gasket 10.2 x 14
32	0.012.9660.0	1	tube
33	0.011.0212.3	1	tank COMPONENT PARTS SEE COMPONENTS LIST ☞ 0.011.0212.3
34	0.171.6656.0	1	clip
35	2.3339.791.2/10	1	pipe fitting
36	2.1560.054.0	1	gasket 21 x 26

4/8-WAY AUXILIARY DISTRIBUTOR SALAMI


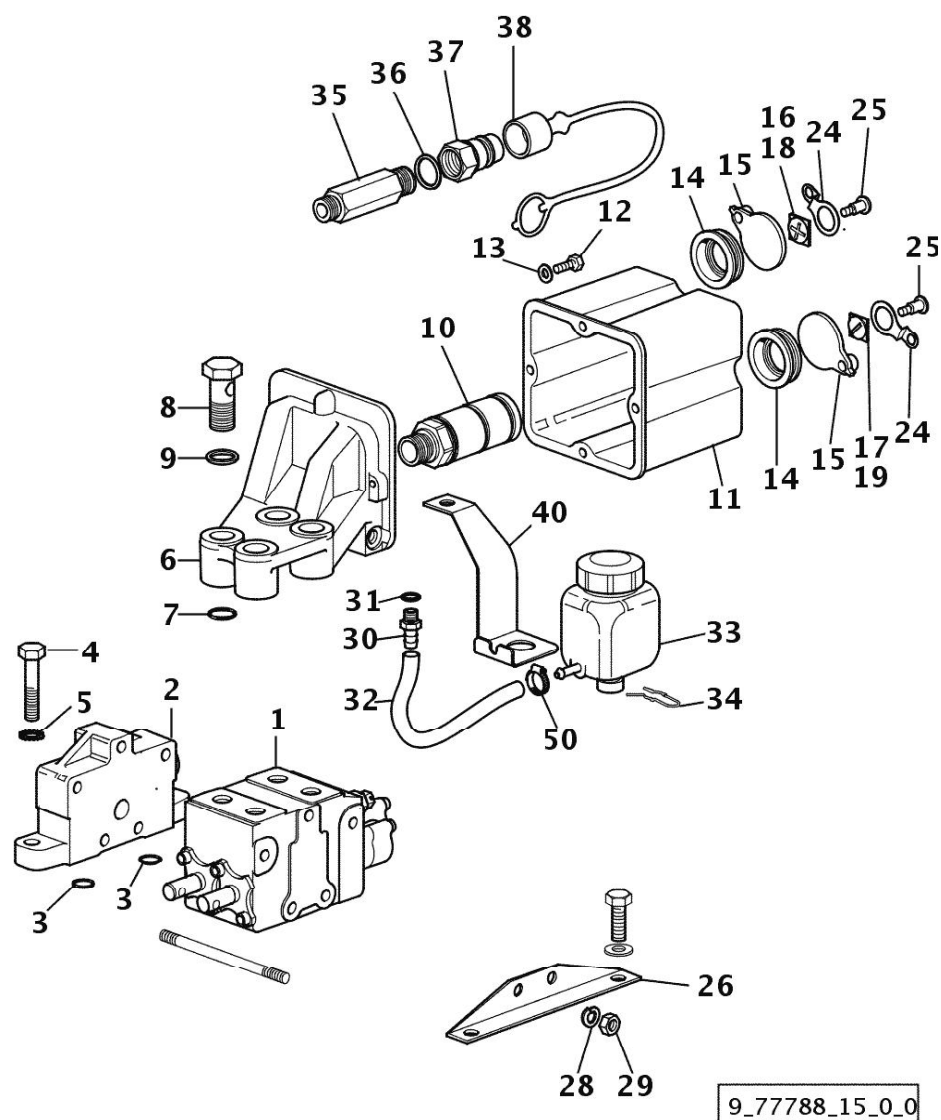


Fig.	P/n	QTY	Name
37	0.98309.51.3/10	1	coupling 1/2
38	0.009.3149.0	1	plug
40	0.011.3192.0	1	bracket
50	2.6850.002.0	1	clamp

4-WAY HYDRAULIC CONTROL VALVE SALAMI

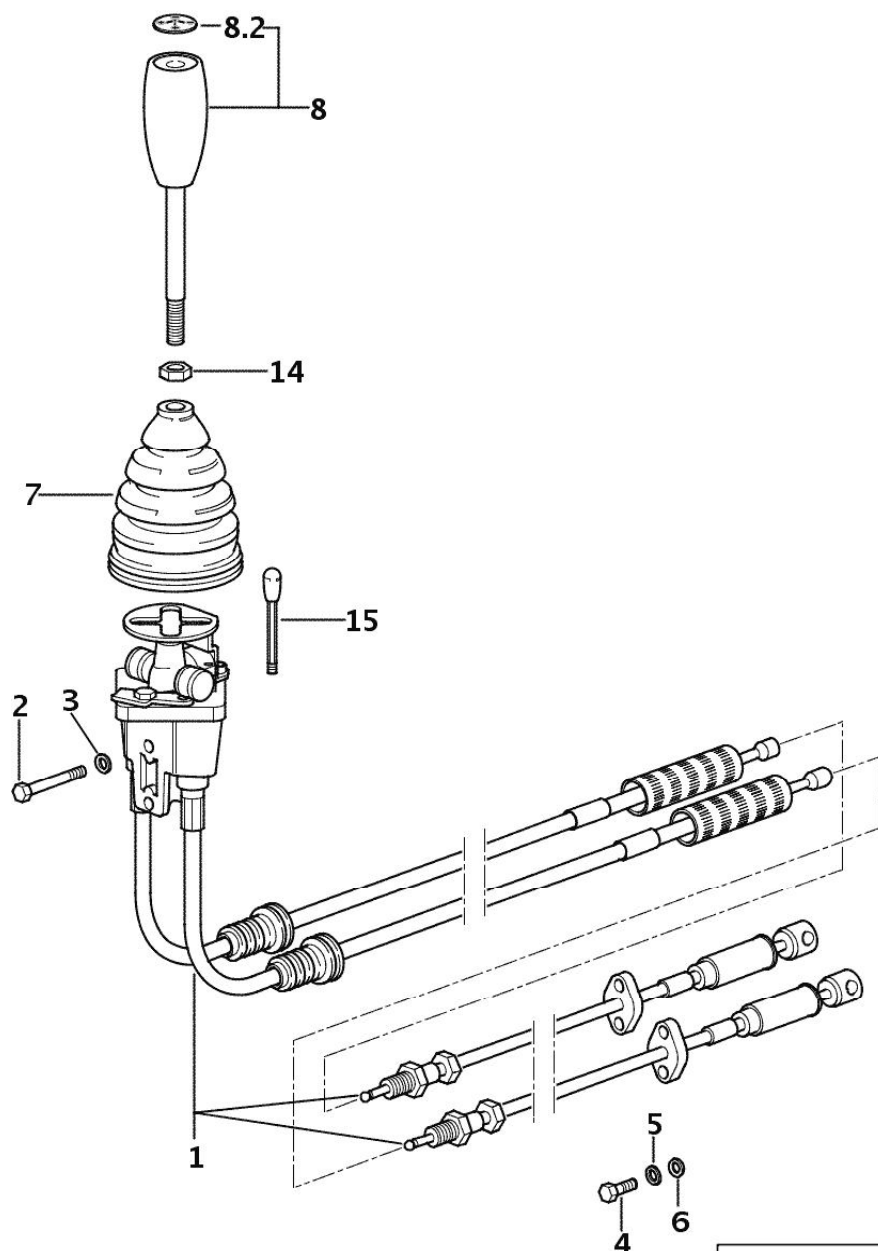

9_77888_16_0_

Notes:

[Agroplus 95]

Fig.	P/n	QTY	Name
1	0.010.8216.4/40	1	lever
	COMPONENT PARTS SEE COMPONENTS LIST		
	☞ 0.010.8216.4/40		
2	2.0112.219.2	2	screw m 8 p.1.25x55
3	2.1470.004.2	2	lock washer 8
4	2.0312.006.2	4	screw m 5 p.0.8 x 20
5	2.1474.006.2	4	spring washer 5
6	2.1310.001.2	4	flat washer 5.3 x 10
7	0.010.8917.0	1	boot
8	0.011.1306.3/10	1	lever
8.2	0.011.1303.0/10	1	cap
14	2.1011.106.2	1	nut m 10 p.1.5
15	0.010.8919.2/10	1	stop


Section: ACCESSORIES

8-WAY AUXILIARY DISTRIBUTOR SALAMI

Fig.	P/n	QTY	Name
------	-----	-----	------


Notes:

[Agroplus 95]

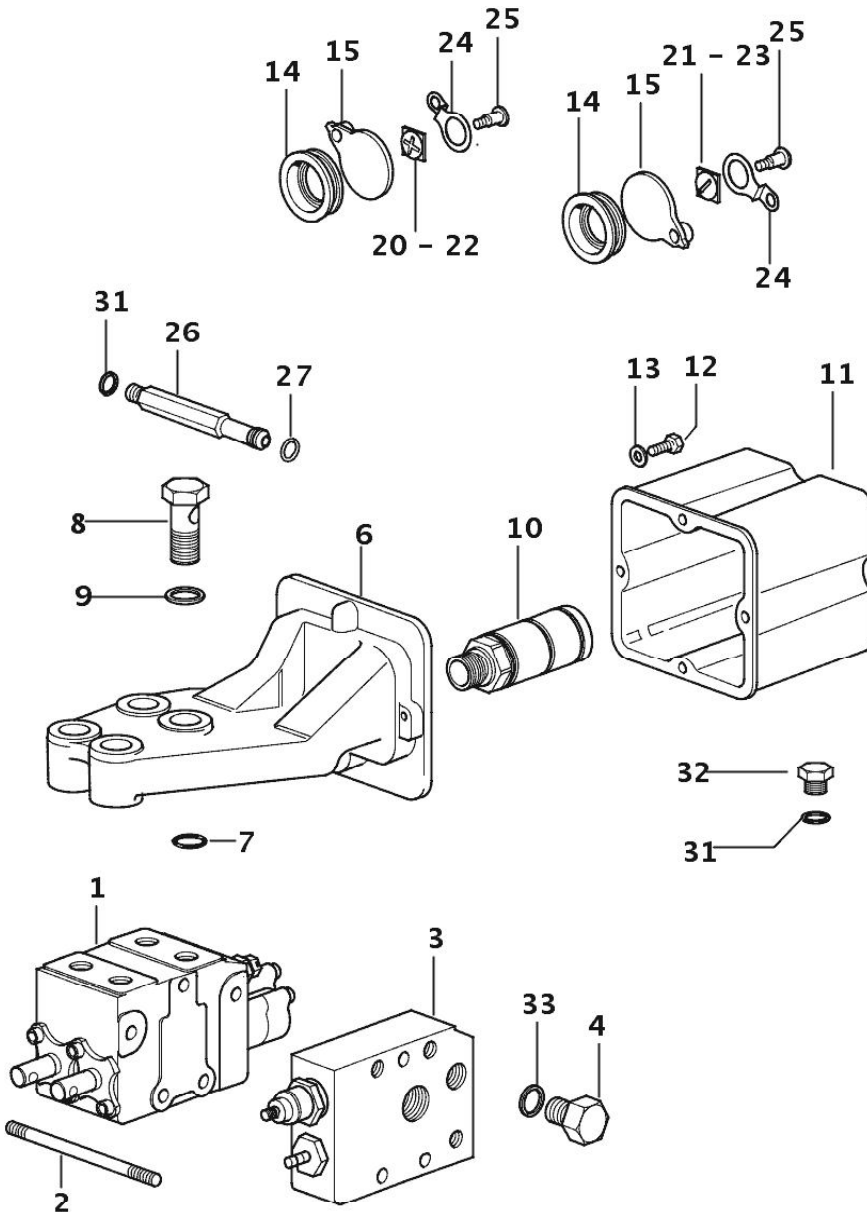

1	2.3729.180.0	1	spool valve COMPONENT PARTS SEE COMPONENTS LIST ☞ 2.3729.180.0
2	2.0433.035.7	3	stud bolt m 8 p.1x200
3	2.3729.200.0	1	spool valve COMPONENT PARTS SEE COMPONENTS LIST ☞ 2.3729.200.0
4	2.3110.404.1	1	plug m 16 p.1.5x14
6	0.010.8472.0/20	1	manifold
7	2.1531.052.0	4	oil seal 20.29 x 2.62
8	2.3339.756.2	4	pipe fitting
9	2.1560.014.0	4	washer 18.2 x 24
10	0.010.8473.0	4	coupling FASTER - m 22 p.1.5 / Ø 38 COMPONENT PARTS SEE COMPONENTS LIST ☞ 0.010.8473.0
11	0.010.8474.0	1	guard
12	2.0112.005.2	4	screw m 6 p.1 x 16
13	2.1480.012.2	4	washer 6, d128
14	0.010.8475.0/10	4	dust guard
15	0.010.8476.0	4	cover
20	0.010.8481.0	1	warning light +
21	0.010.8482.0	1	warning light (-)
22	0.010.8483.0	1	warning light + - YELLOW COLOUR
23	0.010.8484.0	1	warning light (-) - YELLOW COLOUR
24	0.010.8485.0/20	4	small leaf spring
25	2.0399.249.3/10	4	screw m 6 x 20
26	0.010.8490.0	1	guard
27	2.1531.016.0	1	ring 8.74 x 1.78
31	2.1560.005.0	3	copper gasket 10.2 x 14
32	2.3110.301.1	2	plug m 10 p.1.5x8
33	2.1560.011.0	1	copper gasket 16.2x20

9_77788_35_0_

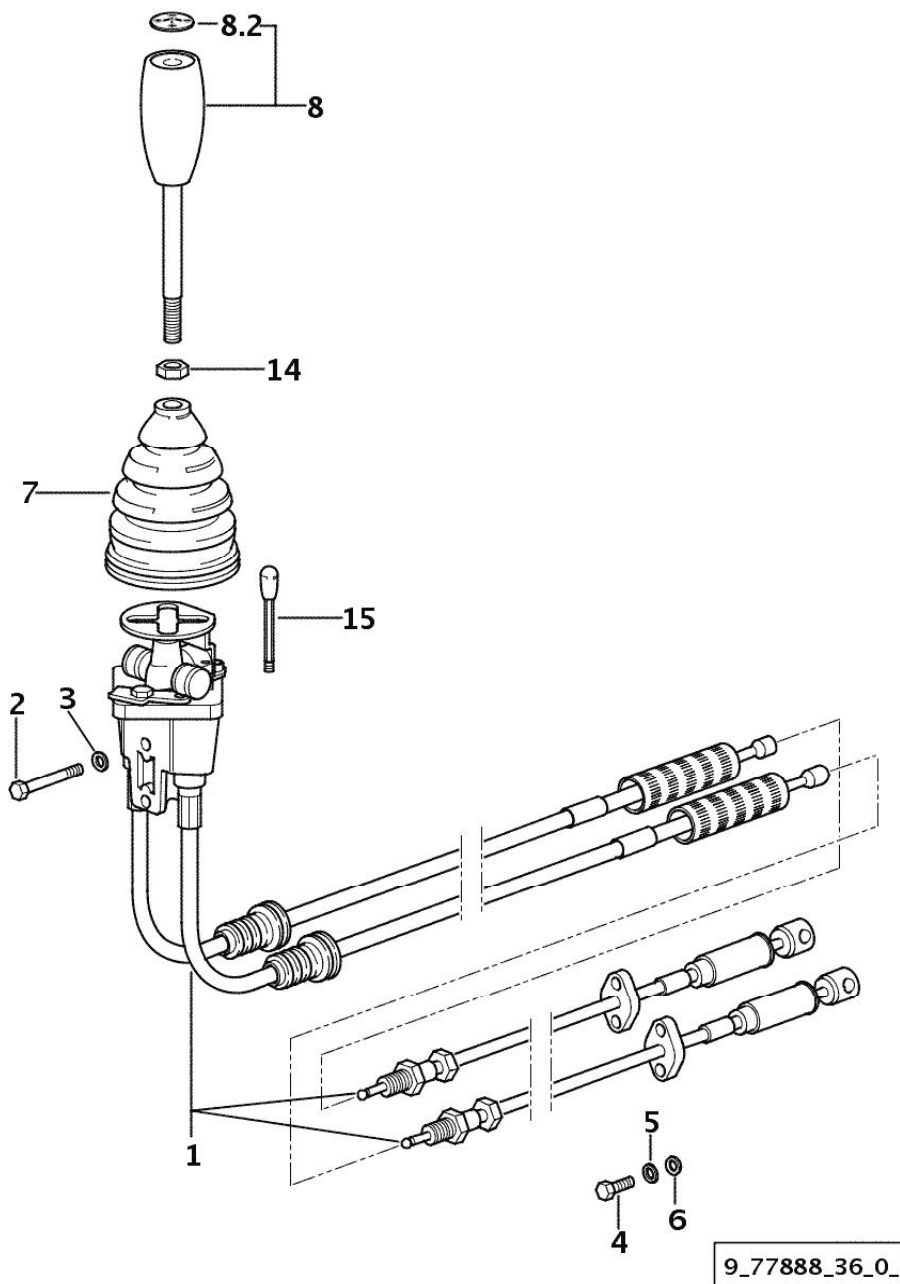

Agroplus 95

Section: ACCESSORIES

Ref: 0E.00.4

8-WAY AUXILIARY DISTRIBUTOR SALAMI

Fig.	P/n	QTY	Name
Notes:			
[Agroplus 95]			
1	0.011.0123.4/30	1	lever
COMPONENT PARTS SEE COMPONENTS LIST			
2	2.0112.219.2	2	screw m 8 p.1.25x55
3	2.1470.004.2	2	lock washer 8
4	2.0312.006.2	8	screw m 5 p.0.8 x 20
5	2.1474.006.2	4	spring washer 5
6	2.1310.001.2	4	flat washer 5.3 x 10
7	0.010.8917.0	1	boot
8	0.010.8918.2/10	1	lever
1011 <- X Agroplus 75			
1009 <- X Agroplus 85			
1013 <- X Agroplus 95			
1012 <- X Agroplus 100			
8	0.011.1307.3/10	1	lever
-> 1012 X Agroplus 75			
-> 1010 X Agroplus 85			
-> 1014 X Agroplus 95			
-> 1013 X Agroplus 100			
8.2	0.011.1305.0/10	1	cap
-> 1012 X Agroplus 75			
-> 1010 X Agroplus 85			
-> 1014 X Agroplus 95			
-> 1013 X Agroplus 100			
14	2.1011.106.2	1	nut m 10 p.1.5
15	0.010.8919.2/10	1	stop