



PARTS MANUAL

M 36.40 COMBINE HARVESTER

PRINTED BY :
heavy-equipmentmanual.com

M 36.40

ENGINE

GENERAL

ENGINE SINGLE PARTS FOR GENERATOR.....	4A.00.20000
ENGINE STARTER MOTOR.....	4A.00.20000
ENGINE SINGLE PARTS FOR STARTER MOTOR.....	4A.00.20000
ENGINE RESILIENT MOUNTING.....	4A.00.20000
ENGINE HYDRAULIC PUMP DRIVE.....	4A.00.20000
ENGINE ADAPTER HOUSING.....	4A.00.20000
MOTOR HYDRAULIKOELKUEHLER.....	4A.00.20000
ENGINE SEALING SET.....	4A.00.20000
ENGINE VENTILATION CHANNEL ASSEMBLY PARTS.....	4A.00.20000
MOTORKUEHLUNG ROTIERENDES KUEHLERSIEB.....	4A.00.20000
MOTORKUEHLUNG RITIERENDES KUEHLERSIEB.....	4A.00.20000
KRAFTSTOFFBEHAELTER.....	4A.00.20000
ZUSATZ-KRAFTSTOFF-BEHAELTER W.....	4A.00.20000
LUFTFILTERANLAGE.....	4A.00.20000
ENGINE SPEED ADJUSTING PARTS.....	4A.00.20000
ENGINE PTO.....	4A.00.20000
ENGINE ASSEMBLY PARTS.....	4A.00.20000
MOTOR KURBELGEHAEUSE.....	4A.00.20000
MOTOR / KURBELGEHAEUSE ENTLUEFTUNG.....	4A.00.20000
MOTOR OELEINFUELLING.....	4A.00.20000
ENGINE CARRIER.....	4A.00.20000
ENGINE OIL PAN.....	4A.00.20000
ENGINE OIL PUMP.....	4A.00.20000
ENGINE CRANKSHAFT.....	4A.00.20000
ENGINE CYLINDER / PISTON.....	4A.00.20000
ENGINE CYLINDER HEAD.....	4A.00.20000
ENGINE CYLINDER HEAD.....	4A.00.20000
ENGINE TIMING GEARS.....	4A.00.20000
ENGINE CAMSHAFT.....	4A.00.20000
ENGINE LUBE OIL COOLER.....	4A.00.20000
ENGINE OIL FILTER.....	4A.00.20000
MOTOR NEBENSTROMFEINFILTER.....	4A.00.20000
ENGINE INJECTION PUMP.....	4A.00.20000
MOTOR / EINZELTEILE ZUR EINSPRITZPUMPE.....	4A.00.20000
MOTOR KRAFTOFF-FOERDERPUMPE.....	4A.00.20000
MOTOR / ANTRIEBSKUPPLG. FUER EINSPRITZPUMPE.....	4A.00.20000
ENGINE FUEL FILTER.....	4A.00.20000
ENGINE INJECTION PIPES.....	4A.00.20000
MOTOR ENSPRITZVENTIL.....	4A.00.20000
MOTOR LECKOELLEITUNGEN.....	4A.00.20000


ENGINE AIR INTAKE PIPES.....	4A.00.20000
ENGINE SPEED ADJUSTING PARTS.....	4A.00.20000
MOTOR HYDR. KUEHLGEBLAESE.....	4A.00.20000
MOTOR KUEHLGEBLAESE.....	4A.00.20000
MOTOR KUEHLGEBLAESEANTRIEB.....	4A.00.20000
ENGINE AIR GUIDE.....	4A.00.20000
MOTOR ABGASSAMMELDAEMPFER.....	4A.00.20000
MOTOR GENERATOR.....	4A.00.20000
MOTOR GENRATORKUEHLUNG.....	4A.00.20000

ENGINE SINGLE PARTS FOR GENERATOR

Fig.	P/n	QTY	Name
------	-----	-----	------

Notes:

 [M 36.40]

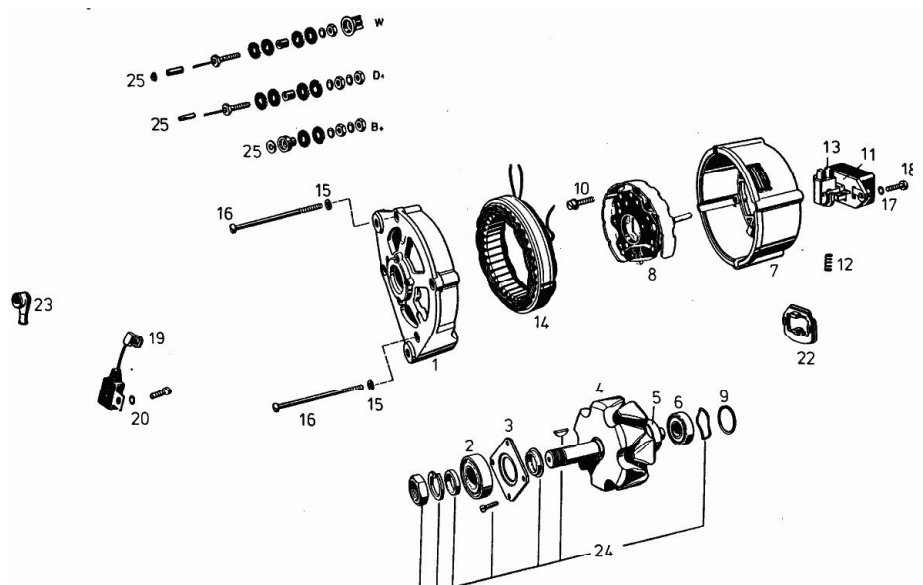

1	01308494	1	cover
2	01136672	1	ball bearing
3	01301090	1	plate
4	01308495	1	impeller
5	01308496	1	-
6	01138536	1	ball bearing
7	01308497	1	bearing
8	01308498	1	rectifier
9	01306420	1	oil seal
10	01306413	3	screw
11	01173069	1	regulator
12	01306481	2	spring
13	01308451	1	gasket set
14	01308499	1	u bolt
15	01107544	4	washer 5,3x10x1,0
16	01308500	4	screw
17	01126724	2	spring disc
18	01123576	2	screw
19	01308397	1	condenser
20	01126725	1	spring disc
21	01105522	1	screw
22	01306486	1	gasket
23	01169028	2	tube
24	01307188	1	spare parts kit
25	01308454	1	spare parts kit

M 36.40

Section: ENGINE

Ref: 4A.00.20000


ENGINE STARTER MOTOR

Fig.	P/n	QTY	Name
------	-----	-----	------

Notes:

[M 36.40]

1	01174633	1	starter 4A.00.20000
2	01102659	3	nut m 10, d934
3	01107286	3	spring washer b10 d137
4	01103255	3	screw

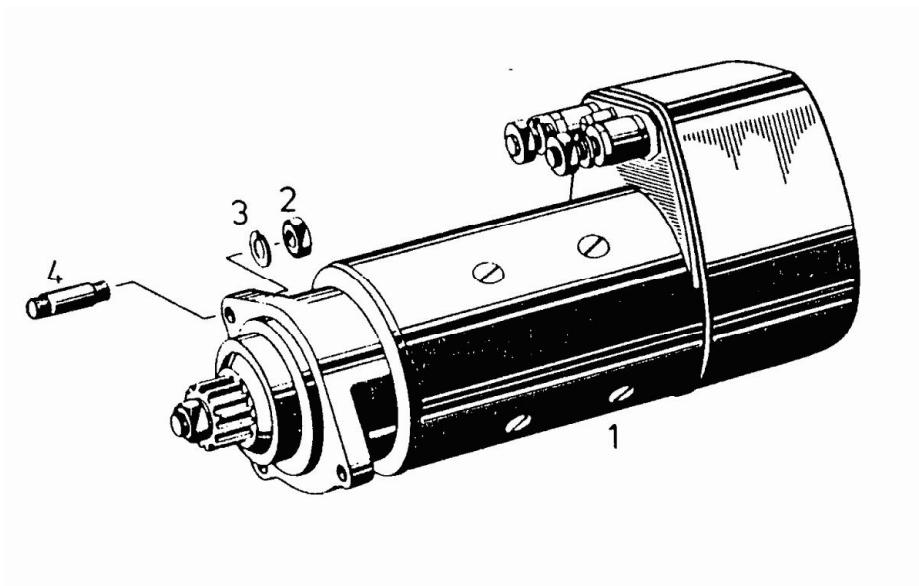 


ENGINE SINGLE PARTS FOR STARTER MOTOR

Fig.	P/n	QTY	Name
------	-----	-----	------

Notes:

 
[M 36.40]

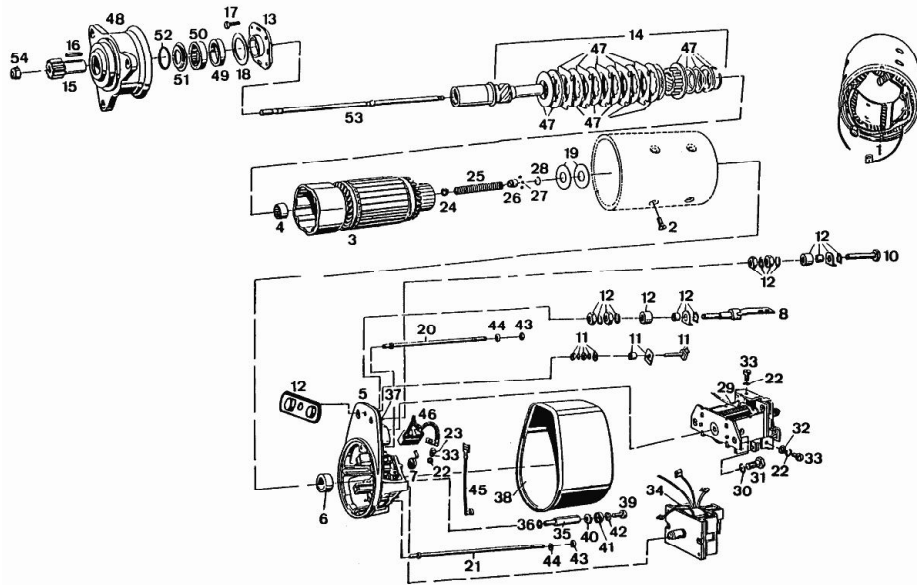

1	01320041	1	"field coil"
2	01132386	8	screw
3	01320042	1	armature
4	01290010	1	bearing
5	01290163	1	support
6	01289971	1	bushing
7	01290139	4	spring
8	01290021	1	guide
10	01290728	1	screw
11	01306445	1	spare parts kit
12	01320043	2	spare parts kit
13	01290150	1	cover
14	01308729	1	coupling
15	02985032	1	pinion
16	01117970	1	spring washer 6x4x32 d6885
16	01309611	1	bushing
17	01308730	4	screw
18	01289921	1	pulley
19	01289918		pulley
19	01289919		washer
19	01289920		pulley
20	01306711	1	screw
21	01306712	3	screw
22	01102796	8	ring 5
23	01306000	2	screw
24	01307289	1	ring
25	01309610	1	spring
26	01309611	1	bushing
27	01289875	11	ball
28	01290129	1	circlip
29	01298635	1	switch
30	01102799	2	washer 8, d128
31	01112307	2	screw m 8 p.1.25 x 15, d933
32	01107089	3	washer 5.3
33	01307966	6	screw
34	01298826	1	magnet
35	01290074	2	adjustable tensioner
36	01289903	2	washer
37	01289945	1	ring
38	01306477	1	pin
39	01136955	2	screw

ENGINE SINGLE PARTS FOR STARTER MOTOR

Fig.	P/n	QTY	Name
40	01289929	2	washer
41	01289992	2	washer
42	01102797	2	washer 6, d128
43	01112813	4	nut m 6
44	01124654	2	washer 6,4 d433
45	01306478	1	electric cable
46	01320044	1	accessories
47	01307085	1	spare parts kit
48	01298791	1	bearing
49	01289970	1	bushing
50	01290012	1	bearing
51	01289957	1	special oil seal
52	01290138	1	spring
53	01306716	1	spare parts kit
54	01309612	1	nut

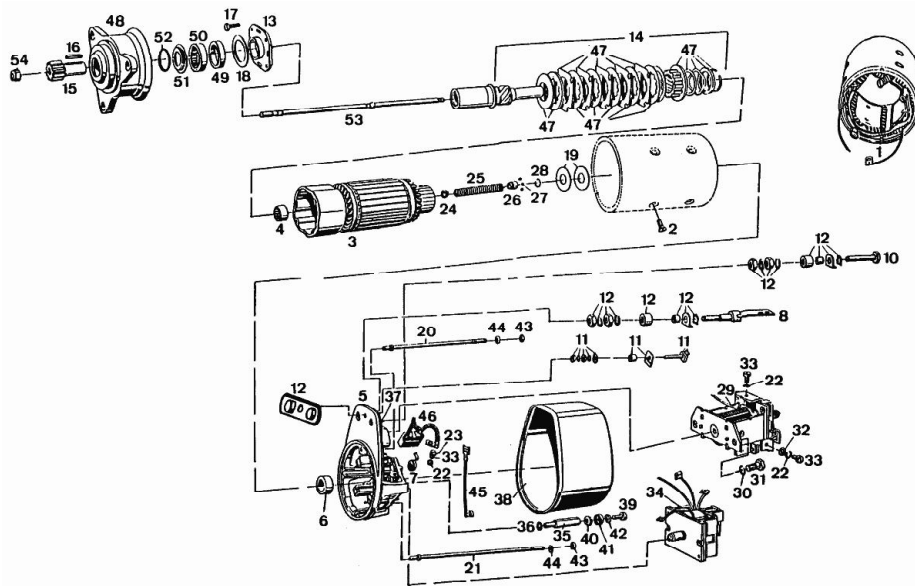 

Section: ENGINE


ENGINE RESILIENT MOUNTING

Fig.	P/n	QTY	Name
------	-----	-----	------

Notes:

[M 36.40]

1	02162088	4	washer
2	01112529	16	screw m 12 x 30, d933
3	02162056	2	foot board
4	02162074	2	foot board
8	02162057	4	bushing
9	02162054	4	rubber buffer

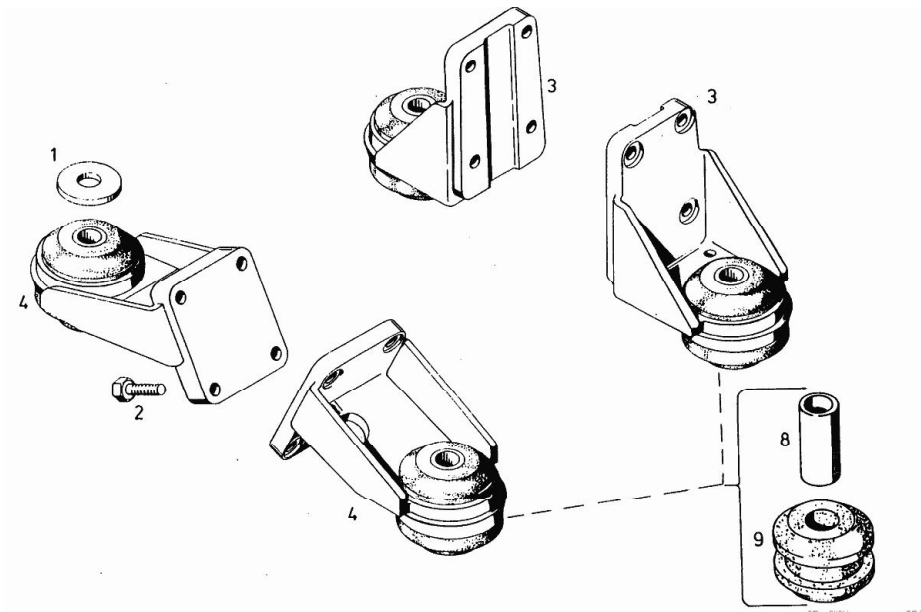 


ENGINE HYDRAULIC PUMP DRIVE

Fig.	P/n	QTY	Name
------	-----	-----	------

Notes:

[M 36.40]

1	02163668	1	flange
2	01112439	3	screw m 10 x 35, d933
3	01107286	3	spring washer b10 d137
4	01107855	2	circlip 80 x 2.5
5	01161116	1	circlip 50x2
6	01163618	1	oil seal 90x4
7	02163670	1	gasket
8	02168074	1	gear
9	02164726	1	ring
10	02163673	1	sleeve
11	01109181	2	ball bearing 16010 d625
12	01107803	1	circlip
16	02168075	1	shaft
17	01107803	1	circlip

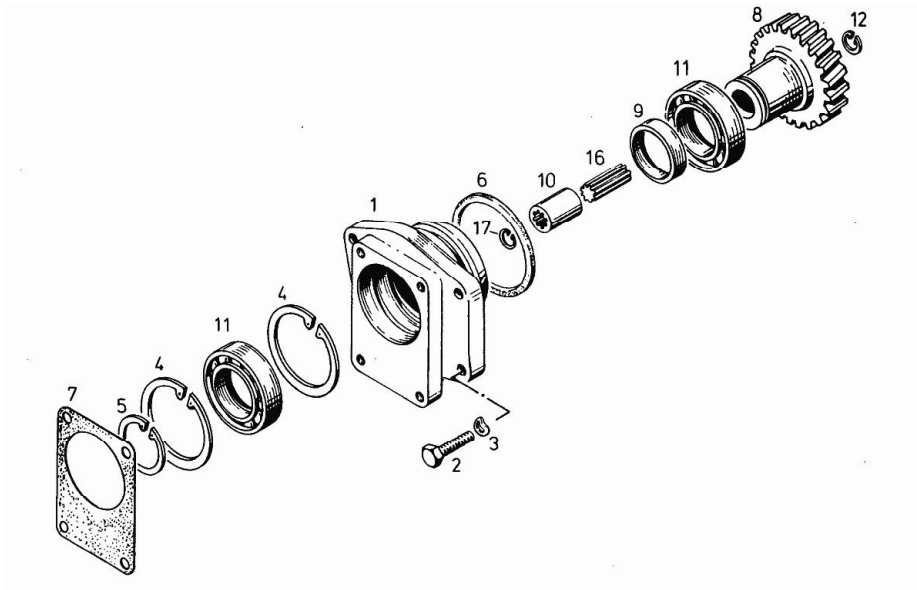 

M 36.40

Ref: 4A.00.20000

Section: ENGINE

ENGINE ADAPTER HOUSING

Fig.	P/n	QTY	Name
------	-----	-----	------

Notes:

[M 36.40]

1	01136443	7	screw
2	01110799	3	screw
3	02246981	1	box
4	02247670	1	plate
5	02247671	1	gasket
6	01102193	2	screw m 8 x 16
7	01001252		loctite

