

KOMATSU

SHOP MANUAL

FORKLIFT TRUCK

BX50 Series

FD20/25-17
FD30-17
FD20H/25H-17
FD30H/35A-17

300001 and up
300001 and up
300001 and up
300001 and up

FORKLIFT TRUCK

BX50 Series

Applicable model	Serial number
FD20/25-17	300001 and up
FD30-17	300001 and up
FD20H/25H-17	300001 and up
FD30H/35A-17	300001 and up

00 Index and foreword

100 Index

Composition of shop manual	2
Table of contents.....	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	BEB17E1-06
00 Index and foreword	BEB17E1-06A
100 Index	BEB17E1-06AA ●
200 Foreword and general information	BEB17E1-01AB
01 Outline	BEB17E1-01B
100 Specifications	BEB17E1-01BA
10 Structure, function and maintenance standard	BEB17E1-03C
100 Engine and cooling system	BEB17E1-01CA
200 Power train	BEB17E1-02CB
300 Steering system	BEB17E1-01CC
400 Brake system	BEB17E1-02CD
500 Undercarriage and frame	BEB17E1-01CE
600 Hydraulic system	BEB17E1-01CF
700 Work equipment	BEB17E1-01CG
801 Electric devices (Part 1)	BEB17E1-03CH
802 Electric devices (Part 2)	BEB17E1-03CI
20 Standard value table	BEB17E1-01D
100 Standard value table	BEB17E1-01DA
30 Testing and adjusting	BEB17E1-02E
100 Testing and adjusting	BEB17E1-02EA
40 Troubleshooting	BEB17E1-03F
100 General information on troubleshooting	BEB17E1-02FA
201 Troubleshooting by failure code (ISO controller system (*))	BEB17E1-02FB
202 Troubleshooting by failure code (EPACS controller system)	BEB17E1-01FC
300 Troubleshooting of electrical system (E-mode)	BEB17E1-02FD
400 Troubleshooting of hydraulic and mechanical system (H-mode)	BEB17E1-01FF
*: Operator Presence Sensing (OPS) system	
50 Disassembly and assembly	BEB17E1-04G
100 General information on disassembly and assembly	BEB17E1-01GA
200 Engine and cooling system	BEB17E1-01GB
300 Power train	BEB17E1-04GC ●
400 Hydraulic equipment	BEB17E1-01GD
500 Work equipment	BEB17E1-01GE
600 Electric devices	BEB17E1-01GF
80 Yearly inspection criteria	BEB17E1-02H
100 Yearly inspection criteria	BEB17E1-02HA

90 Diagrams and drawings
100 Diagrams and drawings

BEB17E1-03J
BEB17E1-03JA

Table of contents

00 Index and foreword	
100 Index	BEB17E1-06AA
Composition of shop manual	2
Table of contents	4
00 Index and foreword	
200 Foreword and general information	BEB17E1-01AB
Safety notice	2
How to read the shop manual	13
Explanation of terms for maintenance standard	15
Handling of electric equipment and hydraulic component	17
Handling of connectors newly used for engines	26
How to read electric wire code	29
Precautions when carrying out operation	32
Standard tightening torque table	35
Conversion table	42
01 Outline	
100 Specifications	BEB17E1-01BA
Specifications	2
Outside view	6
Weight table	7
Lubricant list	8
10 Structure, function and maintenance standard	
100 Engine and cooling system	BEB17E1-01CA
Cooling system	2
200 Power train	BEB17E1-02CB
Power train	2
Power train system diagram	3
Torque converter, Gear pump and Control valve	5
TORQFLOW transmission	16
Transmission control valve Assembly	18
Clutch	21
Clutch transmission	23
Clutch master cylinder	25
Clutch release cylinder	26
Differential	27
300 Steering system	BEB17E1-01CC
Hydraulic steering system	2
Steering valve	3
Power steering cylinder	5
400 Brake system	BEB17E1-02CD
Wheel brake	2
Brake master cylinder	3
Brake booster (FD35A)	4
500 Undercarriage and frame	BEB17E1-01CE
Rear axle	2
Frame	3
600 Hydraulic system	BEB17E1-01CF
Control valve piping diagram (pump – control valve – tank)	2
Work equipment piping diagram (control valve – tilt cylinder/lift cylinder)	3
Brake booster piping diagram	4
Work equipment and steering pump	5
Work equipment control valve	6

Flow divider.....	11
700 Work equipment.....	BEB17E1-01CG
Tilt cylinder.....	2
Lift cylinder.....	5
Component parts	5
Mast, Fork carriage and Fork.....	6
801 Electric devices (Part 1).....	BEB17E1-03CH
ISO controller (Operator Presence Sensing (OPS) system).....	2
EPACS controller	11
Instrument panel	13
802 Electric devices (Part 2).....	BEB17E1-03CI
Sensors.....	2
Switches	5
Lamps	11
Horn and buzzer	14
Flasher.....	17
F/R solenoid valve	18
Relay box.....	19
Diode	23
Fuse load list.....	25
20 Standard value table.....	
100 Standard value table.....	BEB10E1-01DA
Standard value table	2
30 Testing and adjusting.....	
100 Testing and adjusting.....	BEB17E1-02EA
Checking the engine speed	3
Hydraulic piping pressure release procedure	4
Replacement of engine oil and engine oil filter	5
Replacement of fuel filter	6
Cleaning of radiator	7
Check of air cleaner and replacement of cleaner element (2 ton)	8
Tightening torque of cylinder head mounting bolts	9
Adjustment of valve clearance.....	10
Testing of compression.....	11
Replacement of clutch disc.....	12
Oil replacement and strainer cleaning of TORQFLOW transmission	14
Oil level check and oil replacement of differential case	15
Testing power train oil pressure	16
Initial setting of power steering valve.....	21
Checking the steering oil pressure	23
Testing and adjusting the work equipment oil pressure	24
Check of hydraulic tank	26
Adjustment of clutch and brake pedal (Clutch model)	27
Adjustment of inching and brake pedal (TORQFLOW model).....	28
Adjustment of accelerator pedal	29
Adjusting the parking brake lever	30
Adjustment of cables of the forward and backward control lever and the high and low speed lever (Clutch model).....	31
Wheel brake.....	33
Bleeding air.....	34
Measurement of cylinder hydraulic drift and hydraulic forward drift.....	37
Adjustment of mast	38
Checking the lift chain.....	45
Check of drive shaft for looseness, play and damage	46
Check of diode.....	47

40 Troubleshooting

100 General information on troubleshooting	BEB17E1-02FA
Points to remember when troubleshooting	2
Sequence of events in troubleshooting	3
Classification and procedures of troubleshooting	5
Phenomena looking like troubles and troubleshooting No.	6
Information contained in troubleshooting table	8
Locations of fuses	10
201 Troubleshooting by failure code (ISO controller system (*))	BEB17E1-02FB
Failure code display by ISO controller	2
Failure code [!]: 1 flashing, [N]: Flashing, [L]: Flashing]	
Seat switch trouble	6
Failure code [!]: 2 flashings, [N]: Flashing, [L]: OFF]	
F/R lever trouble	10
Failure code [!]: 3 flashings, [N]: OFF, [L]: OFF]	
Parking brake reminder buzzer output abnormality or N (neutral) lamp and lift interlock warning lamp output abnormality	12
Failure code [!]: 4 flashings, [N]: OFF, [L]: Flashing]	
Lift interlock relay output abnormality (1)	16
Failure code [!]: 4 flashings, [N]: Flashing, [L]: Flashing]	
Lift interlock relay output abnormality (2)	18
Failure code [!]: 5 flashings, [N]: OFF, [L]: Flashing]	
Travel interlock relay output abnormality (1)	20
Failure code [!]: 5 flashings, [N]: Flashing, [L]: Flashing]	
Travel interlock relay output abnormality (2)	22
Failure code [!]: 6 flashings, [N]: Flashing, [L]: Flashing]	
Main relay output abnormality	24
Failure code [!]: 7 flashings, [N]: Flashing, [L]: Flashing]	
Controller abnormality	26
202 Troubleshooting by failure code (EPACS controller system)	BEB17E1-01FC
Display of EPACS controller failure code	2
Failure code [LED: OFF] EPACS controller abnormality	4
Failure code [LED: 1 flashing] Initialization is not completed	6
Failure code [LED: 2 flashings] Controller is being initialized	7
Failure code [LED: 3 flashings] Steering wheel angle sensor abnormality	8
Failure code [LED: 4 flashings] Tyre angle sensor abnormality	10
300 Troubleshooting of electrical system (E-mode)	BEB17E1-02FD
E-1 Engine does not start	2
E-2 Engine does not stop	6
E-3 Lift truck cannot travel	8
E-4 Parking brake reminder alarm does not sound or does not stop sounding	14
E-5 Travel direction is not changed normally	18
E-6 Lift truck cannot move work equipment	22
E-7 Work equipment cannot be locked	26
E-8 EPACS is abnormal	30
E-9 Headlamp, clearance lamp, tail lamp and license plate lamp do not light or go off	32
E-10 Turn signal lamps do not light or go off	34
E-11 Brake lamps do not light or go off	36
E-12 Backup lamps do not light or go off	38
E-13 Backup buzzer does not sound or does not stop sounding	41
E-14 Horn does not sound or does not stop sounding	44
E-15 Fuel level is not displayed normally	46
400 Troubleshooting of hydraulic and mechanical system (H-mode)	BEB17E1-01FF
Method of using troubleshooting table	4
Table of failure modes and causes	6
H-1 Lift truck does not start	12
H-2 Travel speed is low, rush force is low, gradeability is low and/or gear is not shifted	13

H-3 Large shocks are made when lift truck starts and gear is shifted	14
H-4 Long time lag is made when lift truck starts and gear is shifted	15
H-5 Torque converter oil temperature is high.....	16
H-6 Lift truck does not turn	17
H-7 Response is low during turning.....	18
H-8 Steering is heavy.....	19
H-9 Lift truck is unstable or large shock is made when it turns.....	20
H-10 Right and left turning radii are different.....	21
H-11 When steering wheel is released it does not return to neutral or it rotates by itself	21
H-12 Steering wheel is turned in reverse or it kicks.....	21
H-13 EPACS does not work.....	22
H-14 Steering wheel vibrates.....	23
H-15 Steering system makes abnormal sound	23
H-16 Oil leaks from steering circuit.....	23
H-17 Service brake does not work or its performance is low.....	24
H-18 Service brake is not reset or it drags	25
H-19 Parking brake does not work or its performance is low	26
H-20 Parking brake is not reset or it drags	27
H-21 Lift cylinder and fork do not lift	28
H-22 Lifting speed or force of lift cylinder and fork is insufficient.....	29
H-23 Fork lifting speed lowers at specific height	30
H-24 Lift cylinder cannot lift load.....	30
H-25 Lift cylinder natural drift is large	30
H-26 Fork lowering speed is too high	31
H-27 Mast does not tilt forward or backward	32
H-28 Forward/backward tilting speed or force of mast is insufficient.....	33
H-29 Tilting speed lowers halfway	34
H-30 Tilt cylinder cannot tilt back of mast with load	34
H-31 Tilt cylinder natural forward drift is large	34
H-32 Mast is unstable during travel with load	34
H-33 Lift and tilt levers do not move smoothly and they are heavy	35
H-34 Engine speed lowers remarkably or engine stalls when work equipment is operated.....	36
H-35 Large shocks are made when work equipment is started and stopped	36
H-36 Abnormal noises comes out from around the work equipment pump or steering pump.....	37
50 Disassembly and assembly	
100 General information on disassembly and assembly	BEB17E1-01GA
Method of using this manual.....	2
Special tool list.....	3
Overall disassembly and assembly	5
How to use LOCTITE.....	7
200 Engine and cooling system	BEB17E1-01GB
Removal and installation of power train	2
300 Power train	BEB17E1-04GC
Removal and installation of drive axle and transfer	2
Alignment of power line (1)	8
Alignment of power line (2).....	10
Disassembly and assembly of clutch.....	12
Disassembly and assembly of clutch master cylinder	14
Disassembly and assembly of clutch booster.....	18
Maintenance standard	23
Disassembly and assembly of clutch transmission.....	28
Disassembly and assembly of torque converter	36
Disassembly and assembly of TORQFLOW transmission	48
Universal joint	57
Disassembly and assembly of differential.....	58
Removal and installation of wheel brake	69

Disassembly and assembly of brake booster	74
400 Hydraulic equipment	BEB17E1-01GD
Steering axle and power steering	2
Flow divider	3
Disassembly and assembly of reservoir assembly	7
Disassembly and assembly of hydraulic pump	8
Disassembly and assembly of solenoid valve	17
Disassembly and assembly of steering valve	21
Disassembly and assembly of steering axle	28
Disassembly and assembly of power steering cylinder	33
Disassembly and assembly of lift cylinder	36
Tilt cylinder	42
Disassembly and assembly of control valve	43
500 Work equipment	BEB17E1-01GE
Disassembly and assembly of mast	2
Remove and installation of lift cylinder	3
Removal and installation of chain	4
600 Electric devices	BEB17E1-01GF
Combination switch	2
80 Yearly inspection criteria	
100 Yearly inspection criteria	BEB17E1-02HA
Yearly inspection criteria	2
90 Diagrams and drawings	
100 Diagrams and drawings	BEB17E1-03JA
Power train hydraulic circuit diagram	2
Work equipment hydraulic circuit diagram	3
Electrical circuit diagram	5