

SERVICE MANUAL

CX50 Forklift Trucks - Export
S/N 133001~

Gasoline/LPG/Dual Fuel (EPA Tier 2) FG35/40Z/40/45/50A-10

Diesel (EPA Tier 2) FD35Y/40ZY/40Y/45Y/50AY-10

CX50



WARNING

Read and observe all warnings on this unit before operating it.

DO NOT operate this equipment unless all factory-installed guards and shields are properly secured in place.

KOMATSU

REVISED: AUGUST 2009

The information and specifications contained herein were accurate at the time of publication, but may change without notice as required for product improvements. Neither Komatsu Forklift U.S.A., LLC, nor its parent company nor any of its subsidiaries will be held responsible for damages due to misuse or inappropriate use of its products. Requests for information, comments and other inquiries should be sent to:

© Copyright 2009, Komatsu Forklift U.S.A. No part of this document may be photocopied or reproduced in any way without prior written consent of Komatsu Forklift U.S.A.

CONTENTS

Page No.

1. Foreword and general information

1.1	SAFETY NOTICE	1-3
1.2	HOW TO READ THE SHOP MANUAL.....	1-14
1.3	EXPLANATION OF TERMS FOR MAINTENANCE STANDARD	1-16
1.4	HANDLING OF ELECTRIC EQUIPMENT AND HYDRAULIC COMPONENTS.....	1-18
1.5	HANDLING OF NEW TYPES OF CONNECTORS USED ON ENGINES	1-26
1.6	HOW TO READ ELECTRIC WIRE CODE	1-29
1.7	PRECAUTIONS WHEN CARRYING OUT OPERATION.....	1-32
1.8	STANDARD TIGHTENING TORQUE TABLES	1-35
1.9	CONVERSION TABLES.....	1-39

2. Specifications

2.1	DIMENSIONAL DIAGRAM	2-3
2.2	DIESEL ENGINE LIFT TRUCK WITH S4D95LE-3 ENGINE (EXPORT)	2-4
2.3	GASOLINE ENGINE LIFT TRUCK WITH EBT-TB45-1A/2A/3A (EXPORT)	2-5
2.4	WEIGHT TABLE.....	2-6
2.5	LUBRICANTS.....	2-7

3. Structure, function and maintenance standard

Engine and cooling system

3.1	COOLING SYSTEM - DIESEL ENGINE.....	3-2
3.2	COOLING SYSTEM - GASOLINE ENGINE.....	3-4
3.3	BRAKE COOLING SYSTEM HYDRAULIC PIPING DIAGRAM	3-6

Power train

3.4	POWER TRAIN OVERVIEW	3-9
3.5	POWER TRAIN SYSTEM DIAGRAM	3-10
3.6	TORQUE CONVERTER.....	3-12
3.7	HYDRAULIC PORT LOCATIONS	3-14
3.8	TRANSMISSION	3-19
3.9	FORWARD (F) CLUTCH	3-24
3.10	REVERSE (R) CLUTCH.....	3-26
3.11	FORWARD 2ND (F2) CLUTCH	3-28
3.12	POWER TRANSMISSION ROUTE	3-31
3.13	TRANSMISSION CONTROL VALVE	3-33
3.14	HYDRAULIC PORT LOCATIONS	3-35
3.15	HYDRAULIC SYSTEM DIAGRAM	3-36
3.16	RELIEF VALVE.....	3-37
3.17	DRIVE SHAFT	3-38
3.18	FRONT AXLE	3-39
3.19	DIFFERENTIAL	3-40
3.20	FINAL DRIVE	3-44

Steering system

3.21	STEERING PIPING DIAGRAM	3-49
3.22	ORBITAL VALVE	3-50
3.23	POWER STEERING CYLINDER	3-51

Brake system

3.24	BRAKE CONTROL.....	3-55
3.25	BRAKE PIPING DIAGRAM.....	3-56

3.26	SERVICE BRAKE	3-57
3.27	ACCUMULATOR CHARGE VALVE	3-59
3.28	BRAKE VALVE	3-64
3.29	SLACK ADJUSTER	3-67
3.30	ACCUMULATOR (FOR BRAKE)	3-70
3.31	PARKING BRAKE	3-71

Undercarriage and frame

3.32	REAR AXLE	3-75
3.33	HYDRAULIC TANK PIPING DIAGRAM	3-76
3.34	FRAME	3-77

Hydraulic system

3.35	CONTROL VALVE PIPING DIAGRAM	3-81
3.36	WORK EQUIPMENT PIPING DIAGRAM	3-82
3.37	ATTACHMENT PIPING DIAGRAM	3-83
3.38	WORK EQUIPMENT AND STEERING PUMP	3-84
3.39	LS VALVE	3-89
3.40	UNLOAD VALVE	3-90
3.41	CONTROL VALVE	3-91
3.42	3-SPOOL VALVE	3-92
3.43	CLOSED CENTER LOAD SENSING SYSTEM (CLSS)	3-97
3.44	FUNCTION AND OPERATION OF EACH VALVE	3-99

Work equipment

3.45	TILT CYLINDER	3-115
3.46	LIFT CYLINDER	3-116
3.47	MAST	3-117
3.48	FORK CARRIAGE	3-124
3.49	FORK	3-125

Electric devices Part 1

3.50	ACCELERATOR PEDAL SENSOR	3-129
3.51	ISO CONTROLLER - OPERATOR PRESENCE SENSING (OPS) SYSTEM	3-130
3.52	INSTRUMENT PANEL	3-136
3.53	ENGINE STARTING CIRCUIT	3-138
3.54	ENGINE STOPPING CIRCUIT	3-139
3.55	ELECTRICAL SYSTEM WIRING DIAGRAM	3-140

Electric devices Part 2

3.56	SENSORS	3-143
3.57	SWITCHES	3-144
3.58	LAMPS	3-150
3.59	HORN AND BUZZER	3-153
3.60	FLASHER	3-156
3.61	F/R SOLENOID VALVE AND F2 SOLENOID VALVE	3-157
3.62	RELAY BOX	3-158
3.63	DIODE	3-163
3.64	FUSE	3-167
3.65	BATTERY	3-169

4. Standard value table

4.1	LIFT TRUCK WITH S4D95LE-3 ENGINE (EXPORT)	4-3
4.2	LIFT TRUCK WITH EBT-TB45-1A/2A/3A ENGINE (EXPORT)	4-5

5. Testing and adjusting

5.1	CHECK OF TROUBLESHOOTING SOFTWARE FUNCTIONS AND FAILURE CODES	5-3
-----	---	-----

5.2	HYDRAULIC PIPING PRESSURE RELEASE PROCEDURE	5-6
5.3	REPLACEMENT OF ENGINE OIL AND ENGINE OIL FILTER	5-7
5.4	CLEANING OF RADIATOR	5-8
5.5	CHECK OF AIR CLEANER AND REPLACEMENT OF CLEANER ELEMENT	5-9
5.6	OIL LEVEL CHECK AND OIL REPLACEMENT OF DIFFERENTIAL CASE	5-10
5.7	OIL REPLACEMENT AND STRAINER CLEANING OF TORQFLOW TRANSMISSION.	5-11
5.8	TESTING POWER TRAIN OIL PRESSURE	5-12
5.9	CHECK OF HYDRAULIC TANK.	5-15
5.10	MEASUREMENT OF WEAR AMOUNT OF SERVICE BRAKE DISC	5-17
5.11	CHECK OF PARKING BRAKE.	5-18
5.12	AIR BLEEDING PROCEDURE.	5-19
5.13	ADJUSTMENT OF BRAKE PEDAL	5-20
5.14	ADJUSTMENT OF INCHING PEDAL.	5-21
5.15	MEASUREMENT OF CYLINDER HYDRAULIC DRIFT AND HYDRAULIC FORWARD DRIFT	5-22
5.16	ADJUSTMENT OF MAST.	5-23
5.17	ADJUSTMENT OF FORK CARRIAGE.	5-26
5.18	CHECK OF DRIVE SHAFT FOR LOOSENESS, PLAY AND DAMAGE	5-28
5.19	CHECK OF DIODE.	5-29

6. Troubleshooting

General information on troubleshooting

6.1	POINTS TO REMEMBER WHEN TROUBLESHOOTING	6-3
6.2	SEQUENCE OF EVENTS IN TROUBLESHOOTING	6-4
6.3	TESTING BEFORE TROUBLESHOOTING	6-5
6.4	CLASSIFICATION AND PROCEDURES OF TROUBLESHOOTING	6-6
6.5	PHENOMENA INDICATING TROUBLE AND TROUBLESHOOTING CODES	6-7
6.6	INFORMATION CONTAINED IN TROUBLESHOOTING TABLE	6-13
6.7	LOCATIONS OF FUSES	6-15

Failure codes: ISO controller (Export)

6.8	FAILURE CODE DISPLAY BY ISO CONTROLLER	6-23
6.9	FAILURE CODE [!]: 1 FLASHING, [N]: FLASHING, [L]: FLASHING	6-26
6.10	FAILURE CODE [!]: 2 FLASHINGS, [N]: FLASHING, [L]: OFF	6-28
6.11	FAILURE CODE [!]: 3 FLASHINGS, [N]: OFF, [L]: OFF	6-30
6.12	FAILURE CODE [!!]: 4 FLASHINGS, [N]: OFF, [L]: FLASHING]	6-34
6.13	FAILURE CODE [!!]: 4 FLASHINGS, [N]: FLASHING, [L]: FLASHING]	6-36
6.14	FAILURE CODE [!!]: 5 FLASHINGS, [N]: OFF, [L]: FLASHING]	6-38
6.15	FAILURE CODE [!!]: 5 FLASHINGS, [N]: FLASHING, [L]: FLASHING]	6-40
6.16	FAILURE CODE [!!]: 6 FLASHINGS, [N]: FLASHING, [L]: FLASHING]	6-42
6.17	FAILURE CODE [!!]: 7 FLASHINGS, [N]: FLASHING, [L]: FLASHING]	6-44

Electrical system (E-mode) EBT-TB45-1A/2A/3A engine (Export)

6.18	E-1 ENGINE DOES NOT START.	6-49
6.19	E-2 ENGINE DOES NOT STOP	6-57
6.20	E-3 LIFT TRUCK CANNOT TRAVEL	6-59
6.21	E-4 PARKING BRAKE REMINDER ALARM DOES NOT SOUND OR DOES NOT STOP SOUNDING	6-62
6.22	E-5 TRAVEL DIRECTION IS NOT CHANGED NORMALLY	6-65
6.23	E-6 LIFT TRUCK CANNOT MOVE WORK EQUIPMENT	6-68
6.24	E-7 WORK EQUIPMENT CANNOT BE LOCKED	6-70
6.25	E-8 EPACS IS ABNORMAL	6-72
6.26	E-9 HEADLAMP, CLEARANCE, TAIL AND LICENSE PLATE LAMPS DO NOT LIGHT OR GO OFF	6-74
6.27	E-10 TURN SIGNAL LAMPS DO NOT LIGHT OR GO OFF	6-76
6.28	E-11 BRAKE LAMPS DO NOT LIGHT OR GO OFF	6-78
6.29	E-12 BACKUP LAMPS DO NOT LIGHT OR GO OFF	6-80
6.30	E-13 BACKUP BUZZER DOES NOT SOUND OR DOES NOT STOP SOUNDING	6-82

6.31	E-14 HORN DOES NOT SOUND OR DOES NOT STOP SOUNDING	6-84
6.32	E-15 FUEL LEVEL IS NOT DISPLAYED NORMALLY	6-86

Electrical system (E-mode) S4D95LE-3 engine (Export)

6.33	E-1 ENGINE DOES NOT START	6-91
6.34	E-2 ENGINE DOES NOT STOP	6-96
6.35	E-3 ENGINE PREHEATER DOES NOT OPERATE NORMALLY	6-98
6.36	E-4 LIFT TRUCK CANNOT TRAVEL	6-100
6.37	E-5 PARKING BRAKE REMINDER ALARM DOES NOT SOUND OR DOES NOT STOP SOUNDING	6-104
6.38	E-6 TRAVEL DIRECTION IS NOT CHANGED NORMALLY	6-106
6.39	E-7 LIFT TRUCK CANNOT MOVE WORK EQUIPMENT	6-110
6.40	E-8 WORK EQUIPMENT CANNOT BE LOCKED	6-115
6.41	E-9 EPACS IS ABNORMAL (NOT USED)	6-120
6.42	E-10 HEADLAMP, CLEARANCE LAMP AND TAIL LAMP DO NOT LIGHT OR GO OFF	6-122
6.43	E-11 TURN SIGNAL LAMPS DO NOT LIGHT OR GO OFF	6-124
6.44	E-12 BRAKE LAMPS DO NOT LIGHT OR GO OFF	6-126
6.45	E-13 BACKUP LAMPS DO NOT LIGHT OR GO OFF	6-128
6.46	E-14 BACKUP BUZZER DOES NOT SOUND OR DOES NOT STOP SOUNDING	6-130
6.47	E-15 HORN DOES NOT SOUND OR DOES NOT STOP SOUNDING	6-132
6.48	E-16 FUEL LEVEL IS NOT DISPLAYED NORMALLY	6-134

Hydraulic and mechanical system (H-mode)

6.49	METHOD OF USING TROUBLESHOOTING TABLE	6-139
6.50	TABLE OF FAILURE MODES AND CAUSES	6-142

7. Disassembly and assembly

General information

7.1	USING THIS CHAPTER	7-3
7.2	SPECIAL TOOL LIST	7-4
7.3	HOW TO USE LOCTITE	7-8

Engine and cooling system

7.4	POWER TRAIN REMOVAL	7-11
7.5	POWER TRAIN INSTALLATION	7-15

Power train components

7.6	FRONT AXLE REMOVAL	7-19
7.7	FRONT AXLE INSTALLATION	7-23
7.8	POWER TRAIN CENTERING	7-26
7.9	TRANSMISSION DISASSEMBLY	7-30
7.10	TRANSMISSION ASSEMBLY	7-34
7.11	TORQUE CONVERTER DISASSEMBLY	7-37
7.12	TORQUE CONVERTER COMPONENT PARTS	7-40
7.13	TORQUE CONVERTER ASSEMBLY	7-42
7.14	DRIVE SHAFT	7-44
7.15	DIFFERENTIAL DISASSEMBLY	7-45
7.16	DIFFERENTIAL ASSEMBLY	7-49
7.17	AXLE HOUSING DISASSEMBLY	7-58
7.18	AXLE HOUSING ASSEMBLY	7-61
7.19	PARKING BRAKE	7-67
7.20	REAR AXLE DISASSEMBLY	7-68
7.21	REAR AXLE ASSEMBLY	7-69
7.22	POWER STEERING CYLINDER DISASSEMBLY	7-72
7.23	POWER STEERING CYLINDER ASSEMBLY	7-74
7.24	BRAKE PEDAL	7-75
7.25	BRAKE VALVE DISASSEMBLY	7-76

7.26	BRAKE VALVE ASSEMBLY	7-78
------	----------------------------	------

Hydraulic equipment

7.27	STEERING VALVE	7-83
7.28	CONTROL VALVE	7-88
7.29	LIFT CYLINDER	7-94
7.30	TILT CYLINDER	7-98

Work equipment

7.31	MAST REMOVAL	7-107
7.32	MAST INSTALLATION	7-107

Electric devices

7.33	COMBINATION SWITCH COMPONENT PARTS	7-115
------	--	-------

8. Yearly inspection criteria

9. Diagrams and drawings

Hydraulic circuit

CX50 HYDRAULIC CIRCUIT DIAGRAM	9-3
--------------------------------------	-----

Electrical circuit

CX50 ELECTRICAL DIAGRAM - EBT-TB45-1A ENGINE - GASOLINE (EXPORT)	9-5
CX50 ELECTRICAL DIAGRAM - EBT-TB45-2A ENGINE - DUAL FUEL (EXPORT)	9-7
CX50 ELECTRICAL DIAGRAM - EBT-TB45-3A ENGINE - LPG (EXPORT)	9-9
CX50 ELECTRICAL DIAGRAM - S4D95LE-3 ENGINE - TIER 2 DIESEL (EXPORT)	9-11

1. FOREWORD AND GENERAL INFORMATION

1.1	Safety notice	1-3
1.2	How to read the shop manual.....	1-14
1.3	Explanation of terms for maintenance standard	1-16
1.4	Handling of electric equipment and hydraulic components	1-18
1.5	Handling of new types of connectors used on engines	1-26
1.6	How to read electric wire code	1-29
1.7	Precautions when carrying out operation	1-32
1.8	Standard tightening torque tables.....	1-35
1.9	Conversion tables.....	1-39

