

# **SERVICE MANUAL**

**DX50 Forklift Truck**

**S/N 55001~**

**FD70/80-10**

# **DX50**



## **WARNING**

Read and observe all warnings on this unit before operating it.

**DO NOT** operate this equipment unless all factory-installed guards and shields are properly secured in place.

# **KOMATSU**

**ISSUED: JULY 2009**

The information and specifications contained herein were accurate at the time of publication, but may change without notice as required for product improvements. Neither Komatsu Forklift USA, LLC nor its parent company nor any of its subsidiaries will be held responsible for damages due to misuse or inappropriate use of its products.

© Copyright 2011, Komatsu Forklift USA, LLC. All rights reserved. No part of this document may be photocopied or reproduced in any way without prior written consent of Komatsu Forklift USA, LLC.

# **FORKLIFT TRUCK**

## **DX50 Series**

<b>Applicable model</b>	<b>Serial number</b>
<b>FD70/80-10</b>	<b>M248-55001 and up</b>

---

<b>00 Index and foreword</b>	
<b>100 Index</b>	

---

Composition of shop manual .....	2
Table of contents .....	4

# Table of contents

00 Index and foreword	
100 Index	
Composition of shop manual.....	2
Table of contents .....	4
200 Foreword and general information	
Safety notice.....	2
How to read the shop manual .....	13
Explanation of terms for maintenance standard .....	15
Handling of electric equipment and hydraulic component.....	17
Handling of connectors newly used for engines.....	26
How to read electric wire code .....	29
Precautions when carrying out operation .....	32
Standard tightening torque table .....	35
Conversion table .....	39
01 Outline	
100 Specifications	
Specification dimension drawing .....	2
Weight table .....	4
Lubricant list .....	5
10 Structure, function and maintenance standard	
100 Engine and cooling system	
Cooling system.....	2
Hydraulic oil cooling system piping diagram .....	4
Brake cooling system hydraulic piping diagram .....	5
Torque converter oil filter.....	6
200 Power train	
Power train .....	2
Power train system diagram.....	3
Torque converter .....	4
Transmission .....	12
Transmission control valve .....	25
Relief valve.....	29
Drive shaft .....	31
Front axle .....	32
Differential .....	34
Final drive.....	37
300 Steering system	
Steering piping diagram (orbit roll valve – power steering cylinder).....	2
Orbit roll valve .....	3
Power steering cylinder.....	5
400 Brake system	
Brake control .....	2
Brake piping diagram (brake – service brake).....	3
Service brake .....	4
Accumulator charge valve.....	7
Brake valve.....	12
Accumulator (for brake).....	17
Parking brake .....	18
500 Undercarriage and frame	
Rear axle.....	2
Hydraulic tank piping diagram .....	4

Frame.....	5
600 Hydraulic system	
Control valve piping diagram (control valve – pump) .....	2
Work equipment piping diagram (control valve – tilt cylinder/lift cylinder) .....	3
Attachment piping diagram .....	4
Work equipment control lever linkage .....	5
Work equipment pump .....	6
Control valve .....	14
OLMS .....	26
Brake and steering pump .....	28
700 Work equipment	
Tilt cylinder .....	2
Lift cylinder .....	3
Mast and fork .....	4
801 Electric devices (Part 1)	
Accelerator pedal sensor .....	2
ISO controller (Operator Presence Sensing (OPS) system) .....	3
EPACS controller .....	10
Instrument panel .....	12
Engine starting circuit .....	14
Engine stopping circuit .....	15
Electrical system wiring diagram .....	16
802 Electric devices (Part 2)	
Sensors .....	2
Switches .....	5
Lamps .....	12
Buzzer .....	16
Flasher .....	20
F/R solenoid valve and F2/R2 solenoid valve .....	21
Relay box .....	22
Resistor .....	28
Diode .....	29
Fuse .....	32
Battery .....	34
20 Standard value table	
100 Standard value table	
Standard value table .....	2
30 Testing and adjusting	
100 Testing and adjusting	
Check of troubleshooting software functions and failure codes .....	3
Hydraulic piping pressure release procedure.....	9
Replacement of engine oil and engine oil filter .....	10
Replacement of fuel filter .....	11
Cleaning of radiator .....	14
Check of air cleaner and replacement of cleaner element.....	15
Oil level check and oil replacement of differential case .....	16
Oil replacement and strainer cleaning of TORQFLOW transmission.....	17
Testing power train oil pressure .....	18
Check of hydraulic tank .....	26
Measurement of wear amount of service brake disc.....	28
Check of parking brake .....	29
Air bleeding procedure .....	31
Adjustment of brake pedal .....	33

Adjustment of inching pedal .....	34
Initialization of orbit-roll valve .....	35
Measurement of cylinder hydraulic drift and hydraulic forward drift .....	36
Adjustment of mast.....	37
Adjustment of fork carriage .....	39
Check of drive shaft for looseness, play and damage.....	40
Installation of wheel (Applicable model: FD80-10) .....	41
Check of diode .....	42
 40 Troubleshooting	
100 General information on troubleshooting	
Points to remember when troubleshooting.....	2
Sequence of events in troubleshooting .....	3
Testing before troubleshooting .....	4
Classification and procedures of troubleshooting.....	5
Phenomena looking like troubles and troubleshooting No. ....	6
Information contained in troubleshooting table.....	10
Locations of fuses .....	12
202 Troubleshooting by failure code (ISO controller system (*)) (Part 2)	
Failure code display by ISO controller.....	2
Failure code [[]: 1 flashing, [N]: Flashing, [L]: Flashing] Seat switch trouble .....	6
Failure code [[]: 2 flashings, [N]: Flashing, [L]: OFF] F/R lever trouble .....	8
Failure code [[]: 3 flashings, [N]: OFF, [L]: OFF] Parking brake reminder buzzer output abnormality or N (neutral) lamp and lift interlock warning lamp output abnormality.....	10
Failure code [[]: 4 flashings, [N]: OFF, [L]: Flashing] Lift interlock relay output abnormality (1) .....	14
Failure code [[]: 4 flashings, [N]: Flashing, [L]: Flashing] Lift interlock relay output abnormality (2) .....	16
Failure code [[]: 5 flashings, [N]: OFF, [L]: Flashing] Travel interlock relay output abnormality (1) .....	19
Failure code [[]: 5 flashings, [N]: Flashing, [L]: Flashing] Travel interlock relay output abnormality (2) .....	22
Failure code [[]: 6 flashings, [N]: Flashing, [L]: Flashing] Main relay output abnormality .....	26
Failure code [[]: 7 flashings, [N]: Flashing, [L]: Flashing] Controller abnormality .....	28
204 Troubleshooting by failure code (EPACS controller system) (Part 2)	
Display of EPACS controller failure code .....	2
Failure code [LED: OFF] EPACS controller abnormality .....	3
Failure code [LED: 1 flashing] Initialization is not completed .....	4
Failure code [LED: 2 flashings] Controller is being initialized .....	5
Failure code [LED: 3 flashings] Steering wheel angle sensor abnormality .....	6
Failure code [LED: 4 flashings] Tire angle sensor abnormality .....	8
301 Troubleshooting of electrical system (E-mode) (Part 1)	
E-1 Engine does not start.....	2
E-2 Engine does not stop.....	6
E-3 Lift truck cannot travel .....	8
E-4 Parking brake reminder alarm does not sound or does not stop sounding .....	12
E-5 Travel direction is not changed normally .....	14
E-6 Lift truck cannot move work equipment .....	18
E-7 Work equipment cannot be locked .....	20
E-8 EPACS is abnormal .....	22
E-9 Headlamp, clearance lamp, tail lamp and license plate lamp do not light or go off.....	24
E-10 Turn signal lamps do not light or go off.....	28
E-11 Brake lamps do not light or go off .....	30
E-12 Backup lamps do not light or go off .....	32
E-13 Backup buzzer does not sound or does not stop sounding.....	35

E-14 Horn does not sound or does not stop sounding .....	38
E-15 Fuel level is not displayed normally .....	40
302 Troubleshooting of electrical system (E-mode) (Part 2)	
E-1 Engine does not start .....	2
E-2 Engine does not stop .....	6
E-3 Lift truck cannot travel .....	8
E-4 Parking brake reminder alarm does not sound or does not stop sounding .....	12
E-5 Travel direction is not changed normally .....	14
E-6 Lift truck cannot move work equipment .....	18
E-7 Work equipment cannot be locked .....	20
E-8 EPACS is abnormal .....	22
E-9 Headlamp, clearance lamp, tail lamp and license plate lamp do not light or go off .....	24
E-10 Turn signal lamps do not light or go off .....	28
E-11 Brake lamps do not light or go off .....	30
E-12 Backup lamps do not light or go off .....	32
E-13 Backup buzzer does not sound or does not stop sounding .....	35
E-14 Horn does not sound or does not stop sounding .....	38
E-15 Fuel level is not displayed normally .....	40
400 Troubleshooting of hydraulic and mechanical system (H-mode)	
Method of using troubleshooting table .....	4
Table of failure modes and causes .....	6
H-1 Lift truck does not start .....	12
H-2 Travel speed is low, rush force is low, gradeability is low and/or gear is not shifted .....	13
H-3 Large shocks are made when lift truck starts and gear is shifted .....	14
H-4 Long time lag is made when lift truck starts and gear is shifted .....	15
H-5 Torque converter oil temperature is high .....	16
H-6 Lift truck does not turn .....	17
H-7 Response is low during turning .....	18
H-8 Steering is heavy .....	19
H-9 Lift truck is unstable or large shock is made when it turns .....	20
H-10 Right and left turning radii are different .....	21
H-11 When steering wheel is released it does not return to neutral or it rotates by itself .....	21
H-12 Steering wheel is turned in reverse or it kicks .....	21
H-13 EPACS does not work .....	22
H-14 Steering wheel vibrates .....	23
H-15 Steering system makes abnormal sound .....	23
H-16 Oil leaks from steering circuit .....	23
H-17 Service brake does not work or its performance is low .....	24
H-18 Service brake is not reset or it drags .....	25
H-19 Parking brake does not work or its performance is low .....	26
H-20 Parking brake is not reset or it drags .....	27
H-21 Lift cylinder and fork do not lift .....	28
H-22 Lifting speed or force of lift cylinder and fork is insufficient .....	29
H-23 Fork lifting speed lowers at specific height .....	30
H-24 Lift cylinder cannot lift load .....	30
H-25 Lift cylinder natural drift is large .....	30
H-26 Fork lowering speed is too high .....	31
H-27 Mast does not tilt forward or backward .....	32
H-28 Forward/backward tilting speed or force of mast is insufficient .....	33
H-29 Tilting speed lowers halfway .....	34
H-30 Tilt cylinder cannot lift load .....	34
H-31 Tilt cylinder natural forward drift is large .....	34
H-32 Mast is unstable during travel with load .....	34
H-33 Lift and tilt levers do not move smoothly and they are heavy .....	35
H-34 Engine speed lowers remarkably or engine stalls when work equipment is operated .....	36
H-35 Large shocks are made when work equipment is started and stopped .....	36

H-36 Another part of work equipment moves when work equipment is relieved singly .....	36
H-37 Work equipment speed or force is low .....	37
H-38 When work equipment and steering are operated, engine speed lowers remarkably or engine stalls .....	37
H-39 Work equipment and steering system do not move .....	38
H-40 Abnormal sound is heard from around work equipment and steering pump .....	38
H-41 Work equipment fine control performance is low or response is low .....	39
H-42 Work equipment is not locked (It operates while operator is not in operator seat) or only work equipment does not move .....	39
H-43 Work equipment (lift-up) does not move, moves but slow or moves but force is low .....	40
H-44 Lift cylinder drift is large (while operator is not in operator seat) .....	41
H-45 Lift cylinder drift is large (while operator is in operator seat) .....	41
H-46 Work equipment (lift-down) lowering speed is low or high or fine control performance is low or response is low .....	42
H-47 Fork does not lower .....	43
H-48 Mast does not tilt/tilts but slow/tilts but force is low .....	44
H-49 Tilt cylinder natural forward drift is large .....	44
H-50 Attachment does not move/moves but low/moves but force is low .....	45
H-51 Attachment cylinder natural drift is large .....	45
H-52 Steering is heavy .....	46
H-53 Large shock is made when steering wheel is returned .....	46
H-54 Work equipment is heavy when work equipment and steering are operated simultaneously .....	47
H-55 Steering is heavy when work equipment and steering are operated simultaneously .....	47
 50 Disassembly and assembly	
100 General information on disassembly and assembly	
Method of using this manual .....	2
Special tool list .....	3
How to use LOCTITE .....	8
200 Engine and cooling system	
Removal and installation of power train .....	2
300 Power train	
Removal and installation of front axle .....	2
Disassembly and assembly of torque converter .....	4
Disassembly and assembly of torqflow transmission .....	11
Disassembly and assembly of drive shaft .....	32
Disassembly and assembly of differential .....	33
Disassembly and assembly axle housing assembly .....	37
Disassembly and assembly of parking brake .....	51
Removal and installation of rear axle and power steering .....	52
Disassembly and assembly of rear axle .....	55
Disassembly and assembly of brake pedal .....	56
Disassembly and assembly of brake valve .....	57
400 Hydraulic equipment	
Disassembly and assembly of orbit roll valve .....	2
Brake and steering pump .....	9
Disassembly and assembly of control valve assembly .....	11
Removal and installation of lift cylinder .....	14
Disassembly and assembly of lift cylinder .....	15
Disassembly and assembly of tilt cylinder .....	16
500 Work equipment	
Removal and installation of mast .....	2
Disassembly and assembly of mast .....	3
600 Electric devices	
Disassembly and assembly of combination switch .....	2



80 Yearly inspection criteria	
100 Yearly inspection criteria	
Yearly inspection criteria .....	2
90 Diagrams and drawings	
100 Hydraulic circuit diagrams	
Hydraulic circuit diagrams.....	3
200 Electrical diagrams and drawings	
Electrical diagrams and drawings .....	3

