

SERVICE MANUAL

DX50 Forklift Truck

S/N 55001~

FD70/80-10

DX50



WARNING

Read and observe all warnings on this unit before operating it.

DO NOT operate this equipment unless all factory-installed guards and shields are properly secured in place.

KOMATSU

ISSUED: JULY 2009

The information and specifications contained herein were accurate at the time of publication, but may change without notice as required for product improvements. Neither Komatsu Forklift USA, LLC nor its parent company nor any of its subsidiaries will be held responsible for damages due to misuse or inappropriate use of its products.

© Copyright 2011, Komatsu Forklift USA, LLC. All rights reserved. No part of this document may be photocopied or reproduced in any way without prior written consent of Komatsu Forklift USA, LLC.

FORKLIFT TRUCK

DX50 Series

Applicable model	Serial number
FD70/80-10	M248-55001 and up

00 Index and foreword	
100 Index	

Composition of shop manual	2
Table of contents	4

Table of contents

00 Index and foreword	
100 Index	
Composition of shop manual.....	2
Table of contents	4
200 Foreword and general information	
Safety notice.....	2
How to read the shop manual	13
Explanation of terms for maintenance standard	15
Handling of electric equipment and hydraulic component.....	17
Handling of connectors newly used for engines.....	26
How to read electric wire code	29
Precautions when carrying out operation	32
Standard tightening torque table	35
Conversion table	39
01 Outline	
100 Specifications	
Specification dimension drawing	2
Weight table	4
Lubricant list	5
10 Structure, function and maintenance standard	
100 Engine and cooling system	
Cooling system.....	2
Hydraulic oil cooling system piping diagram	4
Brake cooling system hydraulic piping diagram	5
Torque converter oil filter.....	6
200 Power train	
Power train	2
Power train system diagram.....	3
Torque converter	4
Transmission	12
Transmission control valve	25
Relief valve.....	29
Drive shaft	31
Front axle	32
Differential	34
Final drive.....	37
300 Steering system	
Steering piping diagram (orbit roll valve – power steering cylinder).....	2
Orbit roll valve	3
Power steering cylinder.....	5
400 Brake system	
Brake control	2
Brake piping diagram (brake – service brake).....	3
Service brake	4
Accumulator charge valve.....	7
Brake valve.....	12
Accumulator (for brake).....	17
Parking brake	18
500 Undercarriage and frame	
Rear axle.....	2
Hydraulic tank piping diagram	4

Frame.....	5
600 Hydraulic system	
Control valve piping diagram (control valve – pump)	2
Work equipment piping diagram (control valve – tilt cylinder/lift cylinder)	3
Attachment piping diagram	4
Work equipment control lever linkage	5
Work equipment pump	6
Control valve	14
OLMS	26
Brake and steering pump	28
700 Work equipment	
Tilt cylinder	2
Lift cylinder	3
Mast and fork	4
801 Electric devices (Part 1)	
Accelerator pedal sensor	2
ISO controller (Operator Presence Sensing (OPS) system)	3
EPACS controller	10
Instrument panel	12
Engine starting circuit	14
Engine stopping circuit	15
Electrical system wiring diagram	16
802 Electric devices (Part 2)	
Sensors	2
Switches	5
Lamps	12
Buzzer	16
Flasher	20
F/R solenoid valve and F2/R2 solenoid valve	21
Relay box	22
Resistor	28
Diode	29
Fuse	32
Battery	34
20 Standard value table	
100 Standard value table	
Standard value table	2
30 Testing and adjusting	
100 Testing and adjusting	
Check of troubleshooting software functions and failure codes	3
Hydraulic piping pressure release procedure.....	9
Replacement of engine oil and engine oil filter	10
Replacement of fuel filter	11
Cleaning of radiator	14
Check of air cleaner and replacement of cleaner element.....	15
Oil level check and oil replacement of differential case	16
Oil replacement and strainer cleaning of TORQFLOW transmission.....	17
Testing power train oil pressure	18
Check of hydraulic tank	26
Measurement of wear amount of service brake disc.....	28
Check of parking brake	29
Air bleeding procedure	31
Adjustment of brake pedal	33

Adjustment of inching pedal	34
Initialization of orbit-roll valve	35
Measurement of cylinder hydraulic drift and hydraulic forward drift	36
Adjustment of mast.....	37
Adjustment of fork carriage	39
Check of drive shaft for looseness, play and damage.....	40
Installation of wheel (Applicable model: FD80-10)	41
Check of diode	42
 40 Troubleshooting	
100 General information on troubleshooting	
Points to remember when troubleshooting.....	2
Sequence of events in troubleshooting	3
Testing before troubleshooting	4
Classification and procedures of troubleshooting.....	5
Phenomena looking like troubles and troubleshooting No.	6
Information contained in troubleshooting table.....	10
Locations of fuses	12
202 Troubleshooting by failure code (ISO controller system (*)) (Part 2)	
Failure code display by ISO controller.....	2
Failure code [[]: 1 flashing, [N]: Flashing, [L]: Flashing] Seat switch trouble	6
Failure code [[]: 2 flashings, [N]: Flashing, [L]: OFF] F/R lever trouble	8
Failure code [[]: 3 flashings, [N]: OFF, [L]: OFF] Parking brake reminder buzzer output abnormality or N (neutral) lamp and lift interlock warning lamp output abnormality.....	10
Failure code [[]: 4 flashings, [N]: OFF, [L]: Flashing] Lift interlock relay output abnormality (1)	14
Failure code [[]: 4 flashings, [N]: Flashing, [L]: Flashing] Lift interlock relay output abnormality (2)	16
Failure code [[]: 5 flashings, [N]: OFF, [L]: Flashing] Travel interlock relay output abnormality (1)	19
Failure code [[]: 5 flashings, [N]: Flashing, [L]: Flashing] Travel interlock relay output abnormality (2)	22
Failure code [[]: 6 flashings, [N]: Flashing, [L]: Flashing] Main relay output abnormality	26
Failure code [[]: 7 flashings, [N]: Flashing, [L]: Flashing] Controller abnormality	28
204 Troubleshooting by failure code (EPACS controller system) (Part 2)	
Display of EPACS controller failure code	2
Failure code [LED: OFF] EPACS controller abnormality	3
Failure code [LED: 1 flashing] Initialization is not completed	4
Failure code [LED: 2 flashings] Controller is being initialized	5
Failure code [LED: 3 flashings] Steering wheel angle sensor abnormality	6
Failure code [LED: 4 flashings] Tire angle sensor abnormality	8
301 Troubleshooting of electrical system (E-mode) (Part 1)	
E-1 Engine does not start.....	2
E-2 Engine does not stop.....	6
E-3 Lift truck cannot travel	8
E-4 Parking brake reminder alarm does not sound or does not stop sounding	12
E-5 Travel direction is not changed normally	14
E-6 Lift truck cannot move work equipment	18
E-7 Work equipment cannot be locked	20
E-8 EPACS is abnormal	22
E-9 Headlamp, clearance lamp, tail lamp and license plate lamp do not light or go off.....	24
E-10 Turn signal lamps do not light or go off.....	28
E-11 Brake lamps do not light or go off	30
E-12 Backup lamps do not light or go off	32
E-13 Backup buzzer does not sound or does not stop sounding.....	35

E-14 Horn does not sound or does not stop sounding	38
E-15 Fuel level is not displayed normally	40
302 Troubleshooting of electrical system (E-mode) (Part 2)	
E-1 Engine does not start	2
E-2 Engine does not stop	6
E-3 Lift truck cannot travel	8
E-4 Parking brake reminder alarm does not sound or does not stop sounding	12
E-5 Travel direction is not changed normally	14
E-6 Lift truck cannot move work equipment	18
E-7 Work equipment cannot be locked	20
E-8 EPACS is abnormal	22
E-9 Headlamp, clearance lamp, tail lamp and license plate lamp do not light or go off	24
E-10 Turn signal lamps do not light or go off	28
E-11 Brake lamps do not light or go off	30
E-12 Backup lamps do not light or go off	32
E-13 Backup buzzer does not sound or does not stop sounding	35
E-14 Horn does not sound or does not stop sounding	38
E-15 Fuel level is not displayed normally	40
400 Troubleshooting of hydraulic and mechanical system (H-mode)	
Method of using troubleshooting table	4
Table of failure modes and causes	6
H-1 Lift truck does not start	12
H-2 Travel speed is low, rush force is low, gradeability is low and/or gear is not shifted	13
H-3 Large shocks are made when lift truck starts and gear is shifted	14
H-4 Long time lag is made when lift truck starts and gear is shifted	15
H-5 Torque converter oil temperature is high	16
H-6 Lift truck does not turn	17
H-7 Response is low during turning	18
H-8 Steering is heavy	19
H-9 Lift truck is unstable or large shock is made when it turns	20
H-10 Right and left turning radii are different	21
H-11 When steering wheel is released it does not return to neutral or it rotates by itself	21
H-12 Steering wheel is turned in reverse or it kicks	21
H-13 EPACS does not work	22
H-14 Steering wheel vibrates	23
H-15 Steering system makes abnormal sound	23
H-16 Oil leaks from steering circuit	23
H-17 Service brake does not work or its performance is low	24
H-18 Service brake is not reset or it drags	25
H-19 Parking brake does not work or its performance is low	26
H-20 Parking brake is not reset or it drags	27
H-21 Lift cylinder and fork do not lift	28
H-22 Lifting speed or force of lift cylinder and fork is insufficient	29
H-23 Fork lifting speed lowers at specific height	30
H-24 Lift cylinder cannot lift load	30
H-25 Lift cylinder natural drift is large	30
H-26 Fork lowering speed is too high	31
H-27 Mast does not tilt forward or backward	32
H-28 Forward/backward tilting speed or force of mast is insufficient	33
H-29 Tilting speed lowers halfway	34
H-30 Tilt cylinder cannot lift load	34
H-31 Tilt cylinder natural forward drift is large	34
H-32 Mast is unstable during travel with load	34
H-33 Lift and tilt levers do not move smoothly and they are heavy	35
H-34 Engine speed lowers remarkably or engine stalls when work equipment is operated	36
H-35 Large shocks are made when work equipment is started and stopped	36

H-36 Another part of work equipment moves when work equipment is relieved singly	36
H-37 Work equipment speed or force is low	37
H-38 When work equipment and steering are operated, engine speed lowers remarkably or engine stalls	37
H-39 Work equipment and steering system do not move	38
H-40 Abnormal sound is heard from around work equipment and steering pump	38
H-41 Work equipment fine control performance is low or response is low	39
H-42 Work equipment is not locked (It operates while operator is not in operator seat) or only work equipment does not move	39
H-43 Work equipment (lift-up) does not move, moves but slow or moves but force is low	40
H-44 Lift cylinder drift is large (while operator is not in operator seat)	41
H-45 Lift cylinder drift is large (while operator is in operator seat)	41
H-46 Work equipment (lift-down) lowering speed is low or high or fine control performance is low or response is low	42
H-47 Fork does not lower	43
H-48 Mast does not tilt/tilts but slow/tilts but force is low	44
H-49 Tilt cylinder natural forward drift is large	44
H-50 Attachment does not move/moves but low/moves but force is low	45
H-51 Attachment cylinder natural drift is large	45
H-52 Steering is heavy	46
H-53 Large shock is made when steering wheel is returned	46
H-54 Work equipment is heavy when work equipment and steering are operated simultaneously	47
H-55 Steering is heavy when work equipment and steering are operated simultaneously	47
 50 Disassembly and assembly	
100 General information on disassembly and assembly	
Method of using this manual	2
Special tool list	3
How to use LOCTITE	8
200 Engine and cooling system	
Removal and installation of power train	2
300 Power train	
Removal and installation of front axle	2
Disassembly and assembly of torque converter	4
Disassembly and assembly of torqflow transmission	11
Disassembly and assembly of drive shaft	32
Disassembly and assembly of differential	33
Disassembly and assembly axle housing assembly	37
Disassembly and assembly of parking brake	51
Removal and installation of rear axle and power steering	52
Disassembly and assembly of rear axle	55
Disassembly and assembly of brake pedal	56
Disassembly and assembly of brake valve	57
400 Hydraulic equipment	
Disassembly and assembly of orbit roll valve	2
Brake and steering pump	9
Disassembly and assembly of control valve assembly	11
Removal and installation of lift cylinder	14
Disassembly and assembly of lift cylinder	15
Disassembly and assembly of tilt cylinder	16
500 Work equipment	
Removal and installation of mast	2
Disassembly and assembly of mast	3
600 Electric devices	
Disassembly and assembly of combination switch	2

80 Yearly inspection criteria	
100 Yearly inspection criteria	
Yearly inspection criteria	2
90 Diagrams and drawings	
100 Hydraulic circuit diagrams	
Hydraulic circuit diagrams.....	3
200 Electrical diagrams and drawings	
Electrical diagrams and drawings	3

