

# SERVICE MANUAL

## CX50 Forklift Trucks

### Dual Fuel/LPG

S/N 133001 - 134755 (EPA Tier 2)  
S/N 134756~ (EPA/CARB 2010)

### FG40ZTU-10

FG40TU/45TU/50ATU-10

### Diesel

S/N 133001~ (EPA Tier 3)

### FD40ZTU-10

FD40TU/45TU/50ATU-10

# CX50



## WARNING

Read and observe all warnings on this unit before operating it.

**DO NOT** operate this equipment unless all factory-installed guards and shields are properly secured in place.

# KOMATSU®

REVISED: MARCH 2014

The information and specifications contained herein were accurate at the time of publication, but may change without notice as required for product improvements. Neither Komatsu Forklift U.S.A. nor its parent company nor any of its subsidiaries will be held responsible for damages due to misuse or inappropriate use of its products. Requests for information, comments and other inquiries should be sent to:

© Copyright 2013, Komatsu Forklift U.S.A., LLC. No part of this document may be photocopied or reproduced in any way without prior written consent of Komatsu Forklift U.S.A.

# CONTENTS

Page No.

## 1. Foreword and general information

|     |                                                                   |      |
|-----|-------------------------------------------------------------------|------|
| 1.1 | Safety notice . . . . .                                           | 1-3  |
| 1.2 | How to read the shop manual . . . . .                             | 1-14 |
| 1.3 | Explanation of terms for maintenance standard. . . . .            | 1-16 |
| 1.4 | Handling of electric equipment and hydraulic components . . . . . | 1-18 |
| 1.5 | Handling of new types of connectors used on engines . . . . .     | 1-26 |
| 1.6 | How to read electric wire code . . . . .                          | 1-29 |
| 1.7 | Precautions when carrying out operation. . . . .                  | 1-32 |
| 1.8 | Standard tightening torque tables . . . . .                       | 1-35 |
| 1.9 | Conversion tables . . . . .                                       | 1-39 |

## 2. Specifications

|     |                                                                        |     |
|-----|------------------------------------------------------------------------|-----|
| 2.1 | Dimensional diagram . . . . .                                          | 2-3 |
| 2.2 | Diesel engine lift truck with SAA4D95LE-5-A engine (UL spec) . . . . . | 2-4 |
| 2.3 | Gasoline engine lift truck with EBT-TB45-2A/3A (UL spec) . . . . .     | 2-5 |
| 2.4 | Weight table . . . . .                                                 | 2-6 |
| 2.5 | Lubricants. . . . .                                                    | 2-7 |

## 3. Structure, function and maintenance standard

### Engine and cooling system

|     |                                                        |     |
|-----|--------------------------------------------------------|-----|
| 3.1 | Cooling system - diesel engine . . . . .               | 3-2 |
| 3.2 | Cooling system - gasoline engine . . . . .             | 3-4 |
| 3.3 | Brake cooling system hydraulic piping diagram. . . . . | 3-6 |

### Power train

|      |                                                       |      |
|------|-------------------------------------------------------|------|
| 3.4  | Power train overview . . . . .                        | 3-9  |
| 3.5  | Power train system diagram. . . . .                   | 3-10 |
| 3.6  | Torque converter . . . . .                            | 3-12 |
| 3.7  | Hydraulic port locations - torque converter . . . . . | 3-14 |
| 3.8  | Transmission . . . . .                                | 3-19 |
| 3.9  | Forward (F) clutch . . . . .                          | 3-24 |
| 3.10 | Reverse (R) clutch . . . . .                          | 3-26 |
| 3.11 | Forward 2nd (F2) clutch. . . . .                      | 3-28 |
| 3.12 | Power transmission route. . . . .                     | 3-31 |
| 3.13 | Transmission control valve. . . . .                   | 3-33 |
| 3.14 | Hydraulic port locations - transmission . . . . .     | 3-35 |
| 3.15 | Hydraulic system diagram . . . . .                    | 3-36 |
| 3.16 | Relief valve. . . . .                                 | 3-37 |
| 3.17 | Drive shaft . . . . .                                 | 3-38 |
| 3.18 | Front axle . . . . .                                  | 3-39 |
| 3.19 | Differential . . . . .                                | 3-40 |

|                                |                                                                   |       |
|--------------------------------|-------------------------------------------------------------------|-------|
| 3.20                           | Final drive . . . . .                                             | 3-44  |
| <b>Steering system</b>         |                                                                   |       |
| 3.21                           | Steering piping diagram . . . . .                                 | 3-49  |
| 3.22                           | Orbital valve . . . . .                                           | 3-50  |
| 3.23                           | Power steering cylinder . . . . .                                 | 3-51  |
| <b>Brake system</b>            |                                                                   |       |
| 3.24                           | Brake control . . . . .                                           | 3-55  |
| 3.25                           | Brake piping diagram . . . . .                                    | 3-56  |
| 3.26                           | Service brake . . . . .                                           | 3-57  |
| 3.27                           | Accumulator charge valve . . . . .                                | 3-59  |
| 3.28                           | Brake valve . . . . .                                             | 3-64  |
| 3.29                           | Slack adjuster . . . . .                                          | 3-67  |
| 3.30                           | Accumulator (for brake) . . . . .                                 | 3-70  |
| 3.31                           | Parking brake . . . . .                                           | 3-71  |
| <b>Undercarriage and frame</b> |                                                                   |       |
| 3.32                           | Rear axle . . . . .                                               | 3-75  |
| 3.33                           | Hydraulic tank piping diagram . . . . .                           | 3-76  |
| 3.34                           | Frame . . . . .                                                   | 3-77  |
| <b>Hydraulic system</b>        |                                                                   |       |
| 3.35                           | Control valve piping diagram . . . . .                            | 3-81  |
| 3.36                           | Work equipment piping diagram . . . . .                           | 3-82  |
| 3.37                           | Attachment piping diagram . . . . .                               | 3-83  |
| 3.38                           | Hydraulic pump . . . . .                                          | 3-84  |
| 3.39                           | LS valve . . . . .                                                | 3-89  |
| 3.40                           | Unload valve . . . . .                                            | 3-90  |
| 3.41                           | Control valve . . . . .                                           | 3-91  |
| 3.42                           | 3-spool valve . . . . .                                           | 3-92  |
| 3.43                           | Closed center Load Sensing System (CLSS) . . . . .                | 3-97  |
| 3.44                           | Function and operation of each valve . . . . .                    | 3-99  |
| <b>Work equipment</b>          |                                                                   |       |
| 3.45                           | Tilt cylinder . . . . .                                           | 3-115 |
| 3.46                           | Lift cylinder - Japan manufacture . . . . .                       | 3-116 |
| 3.47                           | Mast - Japan manufacture . . . . .                                | 3-117 |
| 3.48                           | Fork carriage - Japan manufacture . . . . .                       | 3-124 |
| 3.49                           | Fork - Japan manufacture . . . . .                                | 3-125 |
| <b>Electric devices Part 1</b> |                                                                   |       |
| 3.50                           | Accelerator pedal sensor . . . . .                                | 3-129 |
| 3.51                           | ISO controller - Operator Presence Sensing (OPS) system . . . . . | 3-131 |
| 3.52                           | Instrument panel . . . . .                                        | 3-138 |
| 3.53                           | Engine starting circuit . . . . .                                 | 3-140 |
| 3.54                           | Engine stopping circuit . . . . .                                 | 3-142 |
| 3.55                           | Electrical system wiring diagram . . . . .                        | 3-143 |

## Electric devices Part 2

|      |                                                |       |
|------|------------------------------------------------|-------|
| 3.56 | Sensors .....                                  | 3-147 |
| 3.57 | Switches .....                                 | 3-149 |
| 3.58 | Lamps .....                                    | 3-155 |
| 3.59 | Horn and buzzer .....                          | 3-157 |
| 3.60 | Flasher .....                                  | 3-160 |
| 3.61 | F/R solenoid valve and F2 solenoid valve ..... | 3-161 |
| 3.62 | Relay box .....                                | 3-162 |
| 3.63 | Resistor .....                                 | 3-168 |
| 3.64 | Diode .....                                    | 3-169 |
| 3.65 | Fuse .....                                     | 3-180 |
| 3.66 | Battery .....                                  | 3-182 |

## 4. Standard value table

|     |                                                       |     |
|-----|-------------------------------------------------------|-----|
| 4.1 | Lift truck with SAA4D95LE-5-A engine (UL spec) .....  | 4-3 |
| 4.2 | Lift truck with EBT-TB45-2A/3A engine (UL spec) ..... | 4-5 |

## 5. Testing and adjusting

|      |                                                                           |      |
|------|---------------------------------------------------------------------------|------|
| 5.1  | Check of troubleshooting software functions and failure codes .....       | 5-3  |
| 5.2  | Hydraulic piping pressure release procedure .....                         | 5-6  |
| 5.3  | Replacement of engine oil and engine oil filter .....                     | 5-7  |
| 5.4  | Replacement of fuel filter .....                                          | 5-8  |
| 5.5  | Cleaning of radiator .....                                                | 5-11 |
| 5.6  | Check of air cleaner and replacement of cleaner element .....             | 5-12 |
| 5.7  | Oil level check and oil replacement of differential case .....            | 5-13 |
| 5.8  | Oil replacement and strainer cleaning of Torqflow transmission .....      | 5-14 |
| 5.9  | Testing power train oil pressure .....                                    | 5-15 |
| 5.10 | Check of hydraulic tank .....                                             | 5-18 |
| 5.11 | Measurement of wear amount of service brake disc .....                    | 5-20 |
| 5.12 | Check of parking brake .....                                              | 5-21 |
| 5.13 | Air bleeding procedure .....                                              | 5-22 |
| 5.14 | Adjustment of brake pedal .....                                           | 5-23 |
| 5.15 | Adjustment of inching pedal .....                                         | 5-24 |
| 5.16 | Measurement of cylinder hydraulic drift and hydraulic forward drift ..... | 5-25 |
| 5.17 | Adjustment of mast - Japan manufacture .....                              | 5-26 |
| 5.18 | Adjustment of fork carriage - Japan manufacture .....                     | 5-29 |
| 5.19 | Check of drive shaft for looseness, play and damage .....                 | 5-31 |
| 5.20 | Check of diode .....                                                      | 5-32 |

## 6. Troubleshooting

### General information on troubleshooting

|     |                                               |     |
|-----|-----------------------------------------------|-----|
| 6.1 | Points to remember when troubleshooting ..... | 6-3 |
| 6.2 | Sequence of events in troubleshooting .....   | 6-4 |

|     |                                                                  |      |
|-----|------------------------------------------------------------------|------|
| 6.3 | Testing before troubleshooting. . . . .                          | 6-5  |
| 6.4 | Classification and procedures of troubleshooting . . . . .       | 6-6  |
| 6.5 | Phenomena indicating trouble and troubleshooting codes . . . . . | 6-7  |
| 6.6 | Information contained in troubleshooting table . . . . .         | 6-13 |
| 6.7 | Locations of fuses . . . . .                                     | 6-15 |

### **Failure codes: ISO controller (UL spec)**

|      |                                                                        |      |
|------|------------------------------------------------------------------------|------|
| 6.8  | Failure code display by ISO controller . . . . .                       | 6-23 |
| 6.9  | Failure code [!]: 1 flashing, [N]: Flashing, [L]: Flashing] . . . . .  | 6-26 |
| 6.10 | Failure code [!]: 2 flashings, [N]: Flashing, [L]: OFF . . . . .       | 6-28 |
| 6.11 | Failure code [!]: 3 flashings, [N]: OFF, [L]: OFF . . . . .            | 6-30 |
| 6.12 | Failure code [!]: 4 flashings, [N]: OFF, [L]: Flashing]. . . . .       | 6-34 |
| 6.13 | Failure code [!]: 4 flashings, [N]: Flashing, [L]: Flashing] . . . . . | 6-36 |
| 6.14 | Failure code [!]: 5 flashings, [N]: OFF, [L]: Flashing]. . . . .       | 6-38 |
| 6.15 | Failure code [!]: 5 flashings, [N]: Flashing, [L]: Flashing] . . . . . | 6-40 |
| 6.16 | Failure code [!]: 6 flashings, [N]: Flashing, [L]: Flashing] . . . . . | 6-42 |
| 6.17 | Failure code [!]: 7 flashings, [N]: Flashing, [L]: Flashing] . . . . . | 6-44 |

### **Electrical system (E-mode) SAA4D95LE-5-A engine (UL spec)**

|      |                                                                                     |      |
|------|-------------------------------------------------------------------------------------|------|
| 6.18 | E-1 Engine does not start. . . . .                                                  | 6-47 |
| 6.19 | E-2 Engine does not stop. . . . .                                                   | 6-50 |
| 6.20 | E-3 Lift truck cannot travel . . . . .                                              | 6-52 |
| 6.21 | E-4 Parking brake reminder alarm does not sound or does not stop sounding . . . . . | 6-55 |
| 6.22 | E-5 Travel direction is not changed normally. . . . .                               | 6-57 |
| 6.23 | E-6 Lift truck cannot move work equipment. . . . .                                  | 6-60 |
| 6.24 | E-7 Work equipment cannot be locked . . . . .                                       | 6-62 |
| 6.25 | E-8 Headlamp, clearance lamp and tail lamp do not light or go off . . . . .         | 6-64 |
| 6.26 | E-9 Turn signal lamps do not light or go off . . . . .                              | 6-66 |
| 6.27 | E-10 Brake lamps do not light or go off . . . . .                                   | 6-68 |
| 6.28 | E-11 Backup lamps do not light or go off . . . . .                                  | 6-70 |
| 6.29 | E-12 Backup buzzer (optional) does not sound or does not stop sounding. . . . .     | 6-72 |
| 6.30 | E-13 Horn does not sound or does not stop sounding. . . . .                         | 6-74 |
| 6.31 | E-14 Fuel level is not displayed normally. . . . .                                  | 6-76 |

### **Electrical system (E-mode) EBT-TB45-2A/3A engine (UL spec)**

|      |                                                                                     |      |
|------|-------------------------------------------------------------------------------------|------|
| 6.32 | E-1 Engine does not start. . . . .                                                  | 6-81 |
| 6.33 | E-2 Engine does not stop. . . . .                                                   | 6-88 |
| 6.34 | E-3 Lift truck cannot travel . . . . .                                              | 6-90 |
| 6.35 | E-4 Parking brake reminder alarm does not sound or does not stop sounding . . . . . | 6-90 |
| 6.36 | E-5 Travel direction is not changed normally. . . . .                               | 6-90 |
| 6.37 | E-6 Lift truck cannot move work equipment. . . . .                                  | 6-90 |
| 6.38 | E-7 Work equipment cannot be locked . . . . .                                       | 6-90 |
| 6.39 | E-8 Headlamp, clearance lamp and, tail lamp do not light or go off. . . . .         | 6-90 |
| 6.40 | E-9 Turn signal lamps do not light or go off . . . . .                              | 6-90 |
| 6.41 | E-10 Brake lamps do not light or go off . . . . .                                   | 6-90 |
| 6.42 | E-11 Backup lamps do not light or go off . . . . .                                  | 6-90 |

|      |                                                                                 |      |
|------|---------------------------------------------------------------------------------|------|
| 6.43 | E-12 Backup buzzer (optional) does not sound or does not stop sounding. . . . . | 6-90 |
| 6.44 | E-13 Horn does not sound or does not stop sounding. . . . .                     | 6-90 |
| 6.45 | E-14 Fuel (Gasoline) level is not displayed normally . . . . .                  | 6-90 |

### **Hydraulic and mechanical system (H-mode)**

|      |                                                 |      |
|------|-------------------------------------------------|------|
| 6.46 | Method of using troubleshooting table . . . . . | 6-93 |
| 6.47 | Table of failure modes and causes . . . . .     | 6-96 |

## **7. Disassembly and assembly**

### **General information**

|     |                              |     |
|-----|------------------------------|-----|
| 7.1 | Using this chapter . . . . . | 7-3 |
| 7.2 | Special tool list . . . . .  | 7-4 |
| 7.3 | How to use LOCTITE . . . . . | 7-8 |

### **Engine and cooling system**

|     |                                    |      |
|-----|------------------------------------|------|
| 7.4 | Power train removal . . . . .      | 7-11 |
| 7.5 | Power train installation . . . . . | 7-15 |

### **Power train components**

|      |                                               |      |
|------|-----------------------------------------------|------|
| 7.6  | Front axle removal . . . . .                  | 7-19 |
| 7.7  | Front axle installation . . . . .             | 7-23 |
| 7.8  | Power train centering . . . . .               | 7-26 |
| 7.9  | Transmission disassembly . . . . .            | 7-30 |
| 7.10 | Transmission assembly . . . . .               | 7-34 |
| 7.11 | Torque converter disassembly . . . . .        | 7-37 |
| 7.12 | Torque converter component parts . . . . .    | 7-40 |
| 7.13 | Torque converter assembly . . . . .           | 7-42 |
| 7.14 | Drive shaft . . . . .                         | 7-43 |
| 7.15 | Differential disassembly . . . . .            | 7-44 |
| 7.16 | Differential assembly . . . . .               | 7-48 |
| 7.17 | Axle housing disassembly . . . . .            | 7-57 |
| 7.18 | Axle housing assembly . . . . .               | 7-61 |
| 7.19 | Parking brake . . . . .                       | 7-68 |
| 7.20 | Rear axle disassembly . . . . .               | 7-69 |
| 7.21 | Rear axle assembly . . . . .                  | 7-70 |
| 7.22 | Power steering cylinder disassembly . . . . . | 7-73 |
| 7.23 | Power steering cylinder assembly . . . . .    | 7-75 |
| 7.24 | Brake pedal . . . . .                         | 7-76 |
| 7.25 | Brake valve disassembly . . . . .             | 7-77 |
| 7.26 | Brake valve assembly . . . . .                | 7-79 |

### **Hydraulic equipment**

|      |                                             |      |
|------|---------------------------------------------|------|
| 7.27 | Steering valve . . . . .                    | 7-83 |
| 7.28 | Control valve . . . . .                     | 7-87 |
| 7.29 | Lift cylinder - Japan manufacture . . . . . | 7-93 |
| 7.30 | Tilt cylinder . . . . .                     | 7-97 |

## **Work equipment**

|      |                                                 |       |
|------|-------------------------------------------------|-------|
| 7.31 | Mast removal - Japan manufacture . . . . .      | 7-105 |
| 7.32 | Mast installation - Japan manufacture . . . . . | 7-105 |

## **Electric devices**

|      |                                              |       |
|------|----------------------------------------------|-------|
| 7.33 | Combination switch component parts . . . . . | 7-113 |
|------|----------------------------------------------|-------|

## **8. U.S. manufactured masts**

### **80D/100D/110D-MS 2-Stage Masts**

|     |                                    |      |
|-----|------------------------------------|------|
| 8.1 | Introduction . . . . .             | 8-2  |
| 8.2 | Installation Instructions. . . . . | 8-3  |
| 8.3 | Periodic Maintenance. . . . .      | 8-8  |
| 8.4 | Troubleshooting . . . . .          | 8-9  |
| 8.5 | Service . . . . .                  | 8-10 |

### **80D/100D/110D-MT 3-Stage Masts**

|     |                                    |      |
|-----|------------------------------------|------|
| 8.1 | Introduction . . . . .             | 8-30 |
| 8.2 | Installation Instructions. . . . . | 8-31 |
| 8.3 | Periodic Maintenance. . . . .      | 8-46 |
| 8.4 | Troubleshooting . . . . .          | 8-47 |
| 8.5 | Service . . . . .                  | 8-48 |

### **D-Series Sideshifter**

### **E-Series Sideshifter**

## **9. Yearly inspection criteria**

## **10. Diagrams and drawings**

### **Hydraulic circuit**

|                                          |      |
|------------------------------------------|------|
| CX50 Hydraulic Circuit Diagram . . . . . | 10-3 |
|------------------------------------------|------|

### **Electrical circuit - UL spec**

|                                                                                           |       |
|-------------------------------------------------------------------------------------------|-------|
| CX50 Electrical Diagram - TB45 Engine - Dual Fuel - Tier 2 - S/N 133001 - 134755. . . . . | 10-5  |
| CX50 Electrical Diagram - TB45 Engine - Dual Fuel - CARB 2010 - S/N 134756~ . . . . .     | 10-7  |
| CX50 Electrical Diagram - TB45 Engine - LPG - Tier 2 - S/N 133001 - 134755. . . . .       | 10-9  |
| CX50 Electrical Diagram - TB45 Engine - LPG - CARB 2010 - S/N 134756~ . . . . .           | 10-11 |
| CX50 Electrical Diagram - SAA4D95LE Engine - Diesel - Tier 3 . . . . .                    | 10-13 |

# 1. FOREWORD AND GENERAL INFORMATION

|     |                                                               |      |
|-----|---------------------------------------------------------------|------|
| 1.1 | Safety notice .....                                           | 1-3  |
| 1.2 | How to read the shop manual.....                              | 1-14 |
| 1.3 | Explanation of terms for maintenance standard .....           | 1-16 |
| 1.4 | Handling of electric equipment and hydraulic components ..... | 1-18 |
| 1.5 | Handling of new types of connectors used on engines .....     | 1-26 |
| 1.6 | How to read electric wire code .....                          | 1-29 |
| 1.7 | Precautions when carrying out operation .....                 | 1-32 |
| 1.8 | Standard tightening torque tables.....                        | 1-35 |
| 1.9 | Conversion tables.....                                        | 1-39 |

