

SERVICE MANUAL

FH-2 Series Forklift Truck

Serial No. 140001~

FH35-2**FH40-2****FH45-2****FH50-2**

FH-2



WARNING

Read and observe all warnings on this unit before operating it.

DO NOT operate this equipment unless all factory-installed guards and shields are properly secured in place.



KOMATSU®

REVISION: DECEMBER 2019

The information and specifications contained herein were accurate at the time of publication, but may change without notice as required for product improvements. Neither Komatsu Forklift U.S.A. nor its parent company nor any of its subsidiaries will be held responsible for damages due to misuse or inappropriate use of its products.

© Copyright 2017, Komatsu Forklift U.S.A., LLC. No part of this document may be photocopied or reproduced in any way without prior written consent of Komatsu Forklift U.S.A.

CONTENTS

Page No.

00 Foreword

Safety and basic information	00-3
Composition of the shop manual	00-3
Safety notice for operation	00-4
Safety points	00-4
General precautions	00-5
Precautions for preparatory work	00-5
Precautions during work	00-6
Precautions for slinging work and making signals	00-7
Precautions for slinging up	00-8
Precautions for slinging down	00-8
Precautions for using mobile crane	00-8
Precautions for using overhead traveling crane	00-8
Selecting wire ropes	00-9
Precautions for slinging lift truck onto the trailer	00-9
Precautions for jacking-up lift truck to check or replace a tire	00-10
Precautions for slinging lift truck when checking or replacing a tire	00-10
Precautions for inspection and inflation of the tire	00-10
Handling of tires	00-10
Precautions for disconnecting air conditioner piping	00-11
Precautions for installing air conditioner piping	00-11
Precautions to prevent fire	00-12
Fire caused by fuel, oil, coolant or window washer fluid	00-12
Fire caused by accumulation or attachment of flammable material	00-12
Fire coming from electric wiring	00-12
Fire caused by piping	00-12
Fire around the machine due to highly heated exhaust gas	00-12
Explosion caused by lighting equipment	00-12
Action if fire occurs	00-13
Precautions for handling hydraulic equipment	00-14
Select an appropriate workplace	00-14
Disassembly and maintenance work in the field	00-14
Sealing openings to prevent oil leaks	00-14
Preventing intrusion of foreign materials during refilling	00-14
Replacing high temperature hydraulic oil	00-14
Flushing operation	00-15
Cleaning operation	00-15

Precautions for disconnecting and connecting piping	00-16
Precautions for removal and disassembling work	00-16
Parts list for the disassembly of face seal type hoses and tubes	00-16
Parts list for the disconnection of the taper seal type hoses and tubes	00-17
Parts list for the disconnection of the split flange type hoses and tubes	00-18
Parts list for the removal of O-ring boss type joint	00-19
Parts list for the removal of taper pipe thread type joint.	00-20
Precautions for installation and assembling work	00-21
Precautions when work is completed.	00-22
Precautions for handling electrical equipment.	00-23
Handling wiring harnesses and connectors	00-23
Main causes of failure in wiring harness	00-23
Precautions for handling fuel system equipment.	00-25
Select an appropriate workplace	00-25
Seal the openings	00-25
Clean dirty parts.	00-25
Precautions for replacing fuel filter cartridge	00-25
Precautions for handling intake system equipment.	00-26
Select an appropriate workplace	00-26
Seal the openings	00-26
Practical use of KOMTRAX	00-27
Merit of using KOMTRAX.	00-27
How to use KOMTRAX practically	00-27
How to operate KOMTRAX	00-27
Disconnect and connect push-pull type coupler	00-28
Type 1 push-pull type coupler	00-28
Type 2 push-pull type coupler	00-30
Type 3 push-pull type coupler	00-31
Precautions for disconnection and connection of connectors.	00-32
Disconnecting connectors	00-32
Connecting connectors	00-33
Drying wiring harness	00-34
Handling controller	00-35
Precautions for troubleshooting electrical circuits	00-35
Connector coupling and decoupling	00-36
Deutsch connector	00-36
Connector with slide lock	00-37
Connector with pull lock	00-39
Connector with push lock.	00-40
Connector with rotating housing	00-42

How to read electrical wire code	00-43
Type, symbol, and material (Table 1)	00-44
Dimensions (Table 2)	00-45
Color codes (Table 3)	00-47
Types of circuits and color codes	00-48
Explanation of terms for maintenance standard	00-49
Standard dimension and tolerance	00-49
Standard clearance and standard value	00-49
Standard interference	00-49
Repair limit and allowable value or allowable dimension	00-50
Allowable clearance	00-50
Allowable interference	00-50
Abbreviation list	00-51
List of abbreviations used in the text	00-51
List of abbreviations used in the circuit diagrams	00-57
Standard tightening torque tables	00-58
Tightening torque for bolts and nuts	00-58
Tightening torque for O-ring boss piping joints	00-62
Tightening torque for O-ring boss plugs	00-63
Tightening torque for hose (taper seal type and face seal type)	00-64
Tightening torque for face seal joints	00-65
Tightening torque for 102, 107, and 114 series engines	00-65
Tightening torque for 102, 107, and 114 series engines (joint bolts)	00-66
Tightening torque for tapered screws on 102, 107, and 114 series engines	00-66
Conversion tables	00-67

01 General Information

Specification Drawing	01-3
Weight Table	01-5
Lubricants	01-6
Lubrication chart	01-6
Lubricant list	01-7

10 Structure and function

Engine and cooling system	10-3
Variable flow turbocharger	10-3
Piping drawing of EGR system	10-7
Circuit diagram of EGR system	10-9

EGR valve	10-10
EGR cooler	10-12
Layout drawing of KCCV	10-14
KCCV ventilator	10-16
CDR valve	10-17
KDOC muffler	10-20
Cooling system	10-22
Power train	10-24
Power train system diagram	10-25
PTO	10-26
HST piping diagram	10-28
HST pump	10-29
HST charge pump	10-39
Charge safety valve	10-40
HST motor	10-41
Axle	10-51
Differential	10-52
Steering system	10-55
Control valve to power steering cylinder piping diagram	10-55
Orbitrol valve	10-56
Brake system	10-58
Undercarriage and frame	10-72
Rear axle	10-72
Frame	10-73
Hydraulic system	10-74
Control valve piping diagram (tank to control valve)	10-74
Hydraulic tank piping diagram	10-75
Control valve to tilt and lift cylinders piping diagram	10-76
Attachment piping diagram	10-77
Work equipment control lever linkage	10-78
Work equipment and steering pump	10-79
Control valve	10-86
CLSS	10-90
Work equipment	10-106
Mast	10-106
Carriage	10-112
Fork	10-113
Electrical system	10-114
Electrical control system	10-114
HST controller	10-139

System component parts	10-142
Accelerator pedal sensor	10-149
EPACS controller	10-150
Monitor system.	10-154
KOMTRAX system.	10-156
Sensors	10-159
Combination switch	10-169
Seat switch, seat belt switch	10-170
Flasher	10-171
Relay box	10-172

20 Standard value table

Standard value table for engine: FH35-220-3

Performance	20-3
Air intake and exhaust system.	20-3
Electric system.	20-3
Main body	20-4
Fuel system	20-4
Lubrication system.	20-5
Cooling system	20-5

Standard value table for engine: FH40-220-6

Performance	20-6
Air intake and exhaust system.	20-6
Electric system.	20-6
Main body	20-7
Fuel system	20-7
Lubrication system.	20-8
Cooling system	20-8

Standard value table for engine: FH45-220-9

Performance	20-9
Air intake and exhaust system.	20-9
Electric system.	20-9
Main body	20-10
Fuel system	20-10
Lubrication system.	20-11
Cooling system	20-11

Standard value table for engine: FH50-220-12

Performance	20-12
Air intake and exhaust system.	20-12
Electric system.	20-12

Main body	20-13
Fuel system	20-13
Lubrication system	20-14
Cooling system	20-14
Standard value table for machine: FH35-2	20-15
Engine speed	20-15
Pedal and linkage	20-15
Parking brake lever	20-15
Power train	20-16
Tire	20-16
Accumulator	20-16
Brake	20-17
Parking brake	20-17
Steering wheel	20-18
Work equipment	20-18
Standard value table for machine: FH40-2	20-19
Engine speed	20-19
Pedal and linkage	20-19
Parking brake lever	20-19
Power train	20-20
Tire	20-20
Accumulator	20-20
Brake	20-21
Parking brake	20-21
Steering wheel	20-22
Work equipment	20-22
Standard value table for machine: FH45-2	20-23
Engine speed	20-23
Pedal and linkage	20-23
Parking brake lever	20-23
Power train	20-24
Tire	20-24
Accumulator	20-24
Brake	20-25
Parking brake	20-25
Steering wheel	20-26
Work equipment	20-26
Standard value table for machine: FH50-2	20-27
Engine speed	20-27
Pedal and linkage	20-27

Parking brake lever	20-27
Power train	20-28
Tire	20-28
Accumulator	20-28
Brake	20-29
Parking brake	20-29
Steering wheel	20-30
Work equipment	20-30

30 Testing and adjusting

Related information on testing and adjusting	30-3
Tools for testing and adjusting	30-3
Engine and cooling system	30-7
Testing engine speed	30-7
Testing exhaust gas color	30-9
Testing and adjusting valve clearance	30-11
Testing compression pressure	30-13
Testing blowby pressure	30-16
Testing engine oil pressure	30-17
Testing fuel pressure	30-18
Testing fuel return and leakage volume	30-19
Bleeding air from fuel system	30-21
Testing leakage from fuel system	30-23
Replacing engine oil and engine oil filter	30-25
Replacing KCCV filter element	30-26
Replacing fuel filter	30-28
Draining water from fuel pre-filter	30-31
Bleeding air from fuel filter	30-32
Radiator cleaning	30-33
Testing air cleaner and replacing filter element	30-34
Handling cylinder cutout mode operation	30-37
Handling no-injection cranking operation	30-38
Writing compensation values at replacement of fuel injector and engine controller	30-39
Testing alternator belt	30-43
Power train	30-45
Testing HST oil pressure	30-45
Checking oil level and changing oil in differential case	30-47
Changing PTO oil and cleaning strainer	30-48
Steering system	30-49
Initial setting of orbitrol valve	30-49

Brake system	30-50
Bleeding air from brake circuit	30-50
Testing brake oil pressure	30-51
Checking accumulator charge pressure	30-52
Testing braking performance	30-53
Testing wear of service brake disc	30-54
Checking parking brake	30-55
Testing and adjusting brake pedal	30-56
Testing and adjusting brake pedal angle sensor linkage	30-57
Hydraulic system	30-58
Releasing remaining pressure in hydraulic piping	30-58
Inspection of hydraulic tank	30-59
Work equipment	30-61
Bleeding air from lift cylinder	30-61
Adjusting mast	30-63
Adjusting fork carriage	30-66
Adjustment of chain	30-68
Electrical system	30-69
Handling engine controller voltage circuit	30-69
Testing procedure for diode	30-70
Special functions of monitor panel	30-71
KOMTRAX terminal start-up procedure	30-116
When KOMTRAX terminal is replaced	30-116
Radio station establishment on lift truck side	30-116
Troubleshooting radio station establishment	30-119

40 Troubleshooting

Preparing for troubleshooting	40-3
Points to remember when troubleshooting	40-3
Troubleshooting process chart	40-4
Checks before troubleshooting	40-6
Getting a troubleshooting number	40-8
Table of failure symptoms and codes	40-9
Troubleshooting summary table	40-12
Locations of fuses	40-14
Connector list and layout	40-18
Connector pinout tables	40-26
T-box and T-adaptor list	40-66

Troubleshooting by failure code	40-70
Failure codes table	40-70
[2G40ZG] Low) Accumulator Oil Pressure	40-76
[6091NX] HST Oil Filter: Clogging	40-77
[7REAKA] DISC OR SHORT_G) ACC input 1	40-78
[7REHKA] ACC input 2	40-80
[AB00KY] SHORT) Alternator	40-82
[AB00MA] Low) Battery Charge Voltage	40-84
[B@BAZG] Eng Oil press Low	40-86
[B@BCNS] Eng Water Overheat	40-87
[B@CRNS] Overheating HST Oil	40-88
[CA115] Eng Ne & Bkup Speed Sens Err	40-89
[CA122] Chg Air Press Sens High Err	40-90
[CA131] Throttle Sensor High Error	40-92
[CA132] Throttle Sensor Low Error	40-94
[CA144] Coolant Temp Sens High Error	40-97
[CA145] Coolant Temp Sens Low Error	40-99
[CA153] Chg Air Temp Sens High Error	40-101
[CA154] Chg Air Temp Sens Low Error	40-103
[CA187] Sens 2 Supply Volt Low Err	40-105
[CA221] Ambient Press Sens High Err	40-107
[CA222] Ambient Press Sens Low Error	40-109
[CA227] Sens 2 Supply Volt High Err	40-111
[CA234] Eng Overspeed	40-112
[CA238] Ne Speed Sens Sup V Low Err	40-113
[CA239] Ne Speed Sens Sup V High Err	40-115
[CA271] IMV/PCV1 Short Error	40-117
[CA272] IMV/PCV 1 Open Error	40-119
[CA322] Inj #1 (L#1) Open/Short Error	40-121
[CA324] Inj #3 (L#3) Open/Short Error	40-123
[CA331] Inj #2 (L#2) Open/Short Error	40-125
[CA332] Inj #4 (L#4) Open/Short Error	40-127
[CA343] ECM Critical Internal Failure	40-129
[CA351] Injector Drive Circuit Error	40-130
[CA352] Sens 1 Supply Volt Low Err	40-131
[CA356] MAF Sensor High Error	40-133
[CA357] MAF Sensor Low Error	40-135
[CA386] Sens 1 Supply Volt High Err	40-138
[CA428] Water in Fuel Sensor High Error	40-139
[CA429] Water in Fuel Sensor Low Error	40-141
[CA431] Idle Validation Sw Error	40-143

[CA432] Idle Validation Process Err.	40-146
[CA435] Eng Oil Press SW Error	40-149
[CA441] Battery Voltage Low Error	40-151
[CA442] Battery Voltage High Error	40-153
[CA449] Rail Press Very High Error	40-154
[CA451] Rail Press Sensor High Error	40-155
[CA452] Rail Press Sensor Low Error	40-157
[CA466] KVGT Motor D. Position Error	40-159
[CA515] Rail Press Sens Sup V Hi Err	40-161
[CA516] Rail Press Sens Sup V Lo Err	40-163
[CA553] Rail Press High Error	40-165
[CA555] Crankcase Press High Error 1	40-166
[CA556] Crankcase Press High Error 2	40-167
[CA559] Rail Press Low Error	40-168
[CA689] Eng Ne Speed Sensor Error	40-171
[CA691] Intake Air Temp Sens Hi Err	40-174
[CA692] Intake Air Temp Sens Low Err	40-176
[CA697] ECM Int Temp Sens High Error	40-178
[CA698] ECM Int Temp Sens Low Error	40-179
[CA731] Bkup Speed Sens Phase Error	40-180
[CA778] Eng Bkup Speed Sensor Error	40-181
[CA1117] Persistent Data Lost Error	40-184
[CA1695] Sens 5 Supply Volt High Err	40-185
[CA1696] Sens 5 Supply Volt Low Error	40-186
[CA1843] Crankcase Press Sens Hi Err	40-187
[CA1844] Crankcase Press Sens Low Err	40-189
[CA1896] EGR Valve Stuck Error	40-191
[CA1942] Crankcase Press Sens Err.	40-192
[CA1961] EGR_Motor D. IC Temp Err (H).	40-193
[CA2185] Throt Sens Sup Volt High Err.	40-194
[CA2186] Throt Sens Sup Volt Low Err	40-195
[CA2249] Rail Press Very Low Error	40-197
[CA2272] EGR Valve Pos Sens Low Error	40-198
[CA2311] IMV Solenoid Error.	40-200
[CA2349] EGR Valve Solenoid Open Err.	40-201
[CA2353] EGR Valve Solenoid Short Err.	40-203
[CA2357] EGR Valve Servo Error	40-205
[CA2555] Grid Htr Relay Error (Open)	40-206
[CA2556] Grid Htr Relay Error (Short)	40-208
[CA2765] Inj Trim Data error	40-210
[CA3419] MAF Sens Sup Volt High Error	40-211

[CA3421] MAF Sens Sup Volt Low Error	40-213
[CA3724] Motor Driver Power Low Error	40-215
[CA3918] KVGST Stuck Error	40-217
[CA3919] Driver IC Over Temp Err, KVGST	40-218
[CA3921] KVGST Servo Error 2.	40-219
[CA3922] KVGST Motor Driver Open Err.	40-220
[CA3923] KVGST Motor Driver Short Err.	40-222
[D110KA] DISC OR SHORT) H/Con Relay	40-224
[D110KB] SHORT_G) Hst Con Relay	40-226
[D140KB] SHORT_G) Starter Relay	40-228
[D140KY] SHORT) Starter Relay	40-230
[D160KA] DISC) Back Lamp Relay	40-232
[D160KB] SHORT_G) Back Lamp Relay	40-234
[D160KY] SHORT) Back Lamp Relay	40-236
[D161KB] SHORT_G) Back Alarm Relay	40-238
[D161KY] SHORT) Back Alarm Relay	40-239
[D190KB] SHORT_G) ACC Power Relay	40-240
[D190KY] SHORT) ACC Power Relay	40-242
[D19SKB] SHORT_G) Forward Alarm Relay	40-243
[D19SKY] SHORT) Forward Alarm Relay	40-244
[D19TKB] SHORT_G) Overspeed Alarm Relay	40-245
[D19TKY] SHORT) Overspeed Alarm Relay	40-246
[D19UKA] DISC) Pump EPC Cut Relay	40-247
[D19UKB] SHORT_G) Pump EPC Cut Relay	40-249
[D19UKY] SHORT) Pump EPC Cut Relay	40-251
[D5ZTKA] DISC OR SHORT) EPC Earth RET	40-253
[D5ZKKA] DISC OR SHORT) Start Cut SIG	40-255
[D5ZKKB] SHORT_G) Start Cut SIG	40-256
[D811MC] ABNL) KOMTRAX	40-257
[D862KA] DISC) GPS Antenna	40-258
[D8ALKA] DISC) SYS-OPE Lamp (KMTX)	40-259
[D8ALKB] SHORT) SYS-OPE Lamp (KMTX)	40-260
[D8AQKR] ABNL) CAN COMM. (KMTX)	40-261
[D8AQK4] ABNL) CAN COMM. 2 (KMTX)	40-262
[DAF0KT] ABNL) EEPROM (MON)	40-264
[DAF0MB] ABNL) Monitor ROM	40-265
[DAF0MC] ABNL) Monitor	40-266
[DAF3KK] LOW) Power Moni.	40-267
[DAFGMC] ABNL) GPS Module	40-269
[DAFLKA] DISC) Operating Lamp Line	40-270
[DAFLKB] SHORT) Operating Lamp Line	40-271

[DAFQKR] ABNL) CAN COMM. (MON)	40-272
[DAJ000] ABNL) HST Con Memory	40-273
[DAJ0KK] LOW) HST/C Power Supply Volt.	40-274
[DAJ0KT] ABNL) HST Con Memory	40-276
[DAJ0MC] RESET) Controller (HST)	40-277
[DAJ2KK] ABNL) HST/C Output Power	40-278
[DAJ5KX] SHORT_G OR SHORT) H/C Power 1	40-280
[DAJ9KQ] ABNL) Model Selection Line	40-282
[DAJJKB] SHORT_G) H/C Operating States	40-283
[DAJLKA] DISC) Operating Lamp Line	40-284
[DAJLKY] SHORT) Operating Lamp Line	40-285
[DAJRMA] ABNL) Model Selection Line	40-286
[DAJQKR] ABNL) CAN COMM. (HST/C)	40-287
[DB2QKR] ABNL) CAN COMM. (ENG/C)	40-290
[DB2RKR] ABNL) CAN COMM. (H/C~ENG/C)	40-293
[DDDTKA] DISC) Seat SW1	40-296
[DDDTKB] SHORT_G) Seat SW1	40-298
[DDDUKA] DISC) Seat SW2	40-300
[DDDUKB] SHORT_G) Seat SW2	40-302
[DDDVKA] ABNL) Seat SW	40-304
[DDDVKM] OPE-ERROR) Seat SW	40-306
[DDK6KA] DISC) Direction Lever	40-309
[DDK6KY] SHORT) Direction Lever	40-312
[DGS1KA] DISC) HST Temperature	40-314
[DGS1KB] SHORT_G) HST Temperature	40-316
[DH2FKA] DISC OR SHORT_G) Brake P SNSR	40-318
[DH2FKY] SHORT) Brake Press Sensor	40-320
[DHHBKA] DISC OR SHORT_G) HST PA SNSR	40-322
[DHHBKY] SHORT) HST PA Press Sensor	40-324
[DHHCKA] DISC OR SHORT_G) HST PB SNSR	40-326
[DHHCKY] SHORT) HST PB Press Sensor	40-328
[DHPCKA] DISC OR SHORT_G) Lift P SNSR	40-330
[DHPCKY] SHORT) Lift Press Sensor	40-332
[DJF1KA] DISC OR SHORT) Fuel Sensor	40-334
[DJF1L8] MISMATCH) Fuel Sensor	40-335
[DK70KA] DISC OR SHORT_G) Brake Pedal	40-337
[DK70KY] SHORT) Brake Pedal	40-339
[DLT4KA] DISC OR SHORT) Vehicle Speed A	40-341
[DLT4KA+DLT6KA] DISC	40-343
[DLT4LC] ABNL) Vehicle Speed Signal	40-346
[DLT4MA] ABNL) Vehicle Speed Sensor	40-347

[DLT4KA] DISC OR SHORT) Vehicle Speed B	40-348
[DV00KB] SHORT_G) Alarm Buzzer	40-350
[DV00KY] SHORT) Alarm Buzzer	40-352
[DV01KB] SHORT_G) Back Buzzer	40-353
[DV01KY] SHORT) Back Buzzer	40-354
[DW9MKA] DISC) LIFT LOCK SOL	40-355
[DW9MKB] SHORT_G) LIFT LOCK SOL	40-357
[DW9MKY] SHORT) LIFT LOCK SOL	40-359
[DW9NKA] DISC) WORK EQUIP. LOCK SOL	40-360
[DW9NKB] SHORT_G) WORK EQUIP. LOCK SOL	40-362
[DW9NKY] SHORT) WORK EQUIP. LOCK SOL	40-364
[DXATKA] DISC) HST Forward EPC SOL	40-366
[DXATKB] SHORT_G) HST Forward EPC SOL	40-368
[DXATKY] SHORT) HST Forward EPC SOL	40-370
[DXAUKA] DISC) HST Back EPC SOL	40-372
[DXAUKB] SHORT_G) HST Back EPC SOL	40-374
[DXAUKY] SHORT) HST Back EPC SOL	40-376
[DXAVKA] DISC) HST Motor EPC SOL	40-378
[DXAVKB] SHORT_G) HST Motor EPC SOL	40-380
[DXAVKY] SHORT) HST Motor EPC SOL	40-382
[F7FQKR] ABNL) CAN COMM. (IDKey)	40-384
EPACS controller system	40-386
Electrical system (E-mode)	40-394
Hydraulic and mechanical system (H-mode)	40-435
Basic engine (S-mode)	40-482

50 Disassembly and assembly

General information	50-3
Removal and installation	50-3
Disassembly and assembly	50-4
Coating materials list	50-5
Adhesive	50-5
Liquid gasket	50-6
Molybdenum disulfide lubricant	50-7
Seizure prevention compound	50-8
Grease	50-9
Primer	50-10
Adhesive	50-11
Caulking material	50-12