



MASSEY FERGUSON

MF 4600

Series Tractors

Models: 4608 / 4609 / 4610



SERVICE MANUAL

FROM MASSEY FERGUSON

4608 / 4609 / 4610 Service Manual

1 Introduction	1-1
1.1 Introduction	1-3
1.1.1 The service manual	1-3
1.1.2 Replacement parts	1-3
1.1.3 Units of measurement	1-3
1.1.4 Machine identification	1-3
1.1.5 Serial number plate	1-4
1.1.6 Engine identification	1-4
1.1.7 Chassis number	1-5
1.2 Specifications	1-6
1.2.1 Engine specifications	1-6
1.2.2 Electrical specifications	1-6
1.2.3 Transmission specifications	1-7
1.2.4 Power takeoff specifications	1-7
1.2.5 Front axle specifications	1-7
1.2.6 Rear axle specifications	1-8
1.2.7 Brake specifications	1-8
1.2.8 Hydraulic specifications	1-8
1.2.9 Fuel specifications	1-8
1.2.10 Operating slope angle	1-9
1.2.11 Lubrication specifications	1-9
1.2.12 Capacities	1-10
1.2.13 Maximum load capacity	1-10
1.2.14 Wheel bolt torque chart	1-11
1.2.15 Tire inflation pressures	1-12
1.3 General dimensions	1-14
1.3.1 Platform tractor dimensions	1-14
1.3.2 Cab tractor dimensions	1-15
1.4 Lubrication / fill points	1-17
1.4.1 Lubrication and maintenance chart	1-17
1.4.2 Initial lubrication and maintenance chart	1-18
1.4.3 Lubrication fill and drain locations	1-19
1.5 General precautions for disassembly and installation	1-20
1.5.1 Precautions for disassembling and installing	1-20
1.5.2 Precautions when installing according to standards parts	1-20
1.6 Tightening torque chart	1-23
1.7 Conversion table	1-25
2 Safety	2-1
2.1 Introduction	2-3
2.1.1 Safety alert symbol	2-3
2.1.2 Informational messages	2-3
2.1.3 Safety messages	2-3
2.1.4 Safety signs	2-4
2.2 Operation	2-11
2.2.1 Prepare for operation	2-11
2.2.2 Roll over protective structure	2-11
2.2.3 General information	2-11
2.2.4 Personal protective equipment	2-15
2.2.5 Seat instruction	2-15
2.2.6 Shield and guards	2-15

2.2.7	Power takeoff safety	2-16
2.2.8	Exhaust warning	2-17
2.2.9	Flying debris	2-17
2.3	Travel on public roads	2-18
2.4	Maintenance	2-20
2.4.1	General maintenance information	2-20
2.4.2	Fire prevention and first aid	2-21
2.4.3	High pressure leaks	2-22
2.4.4	Engine safety	2-23
2.4.5	Fuel safety	2-24
2.4.6	Battery safety	2-25
2.4.7	Tire safety	2-25
2.4.8	Replacement parts	2-26
3	Engine	3-1
3.1	Component access	3-3
3.1.1	Opening the engine cover	3-3
3.2	Radiator	3-4
3.2.1	Removing the radiator	3-4
3.3	Removing the engine	3-6
3.4	Installing the engine	3-10
3.5	Fuel tank	3-11
3.5.1	Removing the fuel tank	3-11
3.6	Electronic diagnostic tool	3-14
3.6.1	Engine service tool software license	3-14
3.6.2	Connecting the electronic diagnostic tool	3-14
3.7	Engine service manual	3-15
3.7.1	Insert the engine service manual here	3-15
4	Power train	4-1
4.1	Separating the engine from the front transmission	4-3
4.2	Separating the front and mid-transmission housings	4-9
4.3	Separating the mid and rear transmission housings	4-13
4.4	Separating the rear axle from the rear transmission case	4-17
4.5	Attaching the rear axle to the rear transmission case	4-19
4.6	Power shuttle transmission	4-20
4.7	Power train	4-23
4.8	Gear ratios	4-26
4.9	Shuttle clutch	4-28
4.9.1	Assembling precautions for power shuttle	4-29
4.10	Clutch pack	4-30
4.10.1	Reverse clutch pack components	4-30
4.10.2	Disassembling the reverse clutch	4-31
4.11	Input gears	4-32
4.11.1	Removing the input gear	4-32
4.11.2	Disassembling the input gear	4-32
4.11.3	Assembling the input gears	4-33
4.11.4	Disassembling the rear and mid-transmission housing	4-34
4.11.5	Input gears	4-36
4.12	Transmission main change gears	4-40
4.12.1	Assembling precautions for main gear system	4-41
4.12.2	Main shift lever	4-42
4.12.3	Assembling precautions for the main shift lever	4-43
4.12.4	Disassembling the high-low gear	4-44

4.13 Creeper gear	4-45
4.13.1 Creeper gear components	4-45
4.13.2 Disassembling the creeper gear	4-45
4.13.3 Assembling the creeper gear	4-49
4.14 Transmission range change gears	4-53
4.14.1 Range gear shift	4-53
4.14.2 Installing the range gear shift	4-54
4.14.3 Range shift linkage	4-55
4.14.4 Independent power takeoff	4-56
4.14.5 Power takeoff clutch	4-57
4.14.6 Assembling power takeoff precautions	4-58
4.14.7 Four-wheel drive gears, if equipped	4-58
4.14.8 Assembling four-wheel drive, if equipped	4-59
4.14.9 Four-wheel drive gear system	4-60
4.14.10 Two wheel-drive gear system	4-61
4.14.11 Power takeoff speed	4-61
4.14.12 Power takeoff lever	4-63
4.14.13 Power takeoff link check system	4-63
4.14.14 Low profile lever	4-63
5 Cab and platform	5-1
5.1 Platform	5-3
5.1.1 Removing the platform	5-3
5.1.2 Removing the floor mat and steps	5-11
5.1.3 Installing the floor mats and steps	5-12
5.2 Cab	5-13
5.2.1 Removing the cab	5-13
5.2.2 Installing the cab	5-19
5.2.3 Removing the cab roof	5-20
5.2.4 Installing the cab roof	5-20
5.2.5 Opening the roof	5-21
5.2.6 Removing the door	5-22
5.2.7 Installing the door	5-22
5.2.8 Adjusting the door tilt	5-24
5.2.9 Adjusting the opening angles of the door	5-24
5.2.10 Installing the door lock	5-25
5.2.11 Relay position	5-26
5.2.12 Cab lamp	5-27
5.2.13 Wiper and flood light switches	5-27
5.2.14 Air conditioner control panel	5-28
5.2.15 Air conditioning dual pressure switch	5-28
5.2.16 Cab wire harness	5-29
5.2.17 Installing the speaker system	5-29
5.2.18 Installing the antenna assembly	5-31
5.3 Seat	5-34
5.3.1 Removing the seat	5-34
5.3.2 Installing the seat	5-35
5.4 Roll over protective structure	5-36
5.4.1 Removing the roll over protective structure	5-36
5.4.2 Installing the roll over protective structure	5-36
5.5 Steering column	5-37
5.5.1 Removing the steering column	5-37
5.5.2 Installing the steering column	5-37
5.6 Steering wheel	5-38
5.6.1 Removing the steering wheel	5-38
5.6.2 Installing the steering wheel	5-38

5.7 Mirrors	5-39
5.7.1 Adjusting the mirror arm assembly	5-39
5.8 Air conditioning system	5-41
5.8.1 Air conditioner outline	5-41
5.8.2 Air conditioner system specifications	5-41
5.8.3 Drain hoses	5-42
5.8.4 Air conditioner hoses	5-43
5.8.5 Heater hose	5-45
5.8.6 Installing the insulator	5-48
5.8.7 Compressor	5-49
5.8.8 Condenser	5-50
5.8.9 Receiver dryer	5-51
5.8.10 Air conditioner unit	5-51
5.8.11 Expansion valve	5-52
5.8.12 Air conditioning dual pressure switch	5-52
5.8.13 Thermostat	5-53
5.8.14 Air conditioner operation	5-53
5.8.15 Air conditioner inspection and maintenance	5-53
5.8.16 Refrigerant amount check	5-54
5.8.17 Air conditioner compressor belt	5-55
5.8.18 Adjusting the air conditioner compressor belt	5-56
5.8.19 Servicing the condenser	5-56
5.8.20 Changing the air conditioner filter	5-58
5.8.21 Maintenance	5-60
5.8.22 Removing the air conditioner compressor	5-60
5.8.23 Installing the air conditioner compressor	5-61
5.8.24 Removing the condenser	5-62
5.8.25 Installing the condenser	5-63
5.8.26 Removing the receiver dryer	5-63
5.8.27 Installing the receiver dryer	5-64
5.8.28 Removing the air conditioner unit	5-64
5.8.29 Air conditioner control lever cable	5-65
5.8.30 Shutter for inside/outside air control	5-65
5.8.31 Assembling the air conditioner and relative components	5-66
5.8.32 Safety precautions when charging the refrigerant	5-67
5.8.33 Connecting the service gauge manifold	5-69
5.8.34 Evacuating the air conditioning system	5-69
5.8.35 Performing airtight check 1	5-70
5.8.36 Performing the airtight check 2	5-70
5.8.37 Charging from the high pressure side	5-71
5.8.38 Charging from the low pressure side	5-72
5.8.39 Detaching the service gauge manifold	5-74
5.9 Troubleshooting the air conditioner system	5-75
6 Frame and axles	6-1
6.1 Hydrostatic steering	6-3
6.1.1 Construction	6-3
6.1.2 Major components	6-4
6.1.3 Orbit roll disassembly	6-4
6.1.4 Disassembling the gerotor side	6-5
6.1.5 Disassembling the control side	6-6
6.1.6 Inspecting the orbit roll	6-9
6.1.7 Assembling the control side	6-9
6.1.8 Assembling the gerotor side	6-12
6.1.9 Orbit roll specifications	6-14
6.1.10 Troubleshooting	6-14
6.2 Fender	6-17

6.2.1	Removing the fender	6-17
6.2.2	Installing the fender	6-18
6.3	Engine cover	6-19
6.3.1	Removing the engine cover	6-19
6.3.2	Installing the engine cover	6-19
6.3.3	Head lamp and engine cover net	6-19
6.3.4	Side cover	6-20
6.4	Three-point linkage and drawbar	6-21
6.4.1	Three-point linkage	6-21
6.4.1.1	Draw bar	6-26
6.4.1.2	Maintaining drawbar components	6-26
6.4.2	Removing the lift cylinder case	6-27
6.5	Rear axle	6-29
6.5.1	General Information	6-29
6.5.2	Rear axle and brakes	6-29
6.5.3	Rear differential lock system and housing	6-31
6.6	Rear axle housing and differential gears	6-32
6.6.1	Disassembling the rear axle housing	6-32
6.6.2	Inspecting the rear axle and the brakes	6-34
6.6.3	Brake discs	6-34
6.6.4	Separator plates	6-35
6.7	Ring gear and pinion	6-36
6.7.1	Removing the ring gear and the pinion	6-36
6.7.2	Disassembling the ring gear and the pinion	6-37
6.7.3	Inspecting the ring gear and pinion assembly	6-38
6.7.4	Assembling the ring gear and the pinion	6-38
6.7.5	Installing the ring gear and the pinion	6-42
6.7.6	Backlash specification	6-42
6.7.7	Thrust collar specification	6-43
6.7.8	Tooth contact pattern	6-43
6.7.9	Assembling the pinion bevel	6-45
6.8	Brakes	6-46
6.8.1	Disassembling the brakes	6-47
6.8.2	Inspecting the brake discs and the separator plates	6-47
6.8.3	Checking the brake adjustment	6-47
6.8.4	Adjusting the brakes	6-48
6.9	Differential	6-49
6.9.1	Differential lock	6-49
6.10	Front axle	6-51
6.10.1	Removing the front axle	6-51
6.10.2	Front axle component inspection	6-52
6.10.3	Installing the front axle	6-54
6.10.4	Front axle components	6-55
6.10.5	Front axle specifications	6-57
6.10.6	Four-wheel drive shaft components	6-57
6.10.7	Hydraulic steering	6-58
6.10.8	Two-wheel drive front axle component	6-60
6.10.9	Two-wheel drive steering controller system	6-63
6.10.10	Two-wheel drive tie rod system	6-63
6.11	Front differential (four-wheel drive only)	6-64
6.11.1	Disassembling the pinion carrier	6-64
6.11.2	Overhauling the pinion carrier	6-65
6.11.3	Inspecting the pinion carrier	6-66
6.11.4	Assembling the pinion carrier	6-66
6.11.5	Disassembling the differential gears	6-67
6.11.6	Inspecting the differential gears	6-67

6.11.7 Assembling the differential gears	6-68
6.11.8 Final drive components	6-70
6.11.9 Removing the wheel shaft seal/cover	6-71
6.11.10 Installing the wheel shaft seal/cover	6-72
6.11.11 Removing the front axle center section	6-74
6.11.12 Installing the front axle center section	6-74
6.11.13 Removing the front axle bracket oil seal	6-74
6.11.14 Installing the front axle bracket oil seal	6-75
6.12 Final drive housing (four-wheel drive only)	6-76
6.12.1 Disassembling the final drive housing	6-76
6.12.2 Inspecting the final drive housing	6-77
6.12.3 Assembling the final drive housing	6-78
6.12.4 Tie rod assembly	6-80
6.13 Front wheel alignment	6-81
6.13.1 Adjusting the front wheel alignment	6-81
6.13.2 Steering free play	6-81
6.14 Front axle troubleshooting	6-82
7 Electrical	7-1
7.1 Wire color chart	7-3
7.2 Power shuttle general information	7-5
7.3 Wiring diagrams	7-6
7.3.1 Battery wiring diagram	7-7
7.3.2 Instrument panel wiring diagram	7-8
7.3.3 Head lamp wiring diagram	7-9
7.3.4 Controller wiring diagram	7-10
7.3.5 Cab wiring diagram	7-11
7.3.6 Main wiring diagram	7-12
7.3.6.1	7-13
7.3.6.2	7-13
7.3.7 Engine wiring diagram	7-14
7.3.7.1	7-15
7.3.8 Controller area wiring diagram	7-15
7.3.8.1	7-16
7.3.9 Cab1 wiring diagram	7-16
7.3.9.1	7-18
7.3.10 Cab2 wiring diagram	7-18
7.4 Instruments and controls	7-21
7.4.1 Removing the console	7-21
7.4.2 Meter panel switch	7-21
7.4.3 Removing the instrument panel	7-22
7.4.4 Installing the instrument panel	7-24
7.4.5 Instrument panel switch location diagram	7-27
7.4.6 Cab switch location diagram	7-28
7.4.6.1	7-28
7.4.7 Lever guide switch location diagram	7-29
7.4.8 Main fuse box - platform tractor	7-31
7.4.9 Main fuse box - cab tractor	7-33
7.5 Valves	7-35
7.5.1 Power shuttle valve	7-35
7.5.2 Power take-off valve	7-44
7.5.3 Solenoid valves	7-46
7.6 Position of the main electrical parts	7-50
7.6.1 Position of sub-change lever position sensor	7-50
7.6.2 Position of the air conditioner controller panel	7-50
7.6.3 Position of the air conditioner controller unit	7-51

7.6.4	Position of the cabin harness assembly	7-51
7.6.5	Position of the engine harness coupler	7-52
7.6.6	Position of the head lamp	7-52
7.6.7	Position of the horn	7-52
7.6.8	Position of the starter	7-53
7.7	Sensor initial adjustment	7-54
7.7.1	Calibrating the three-point hitch	7-54
7.7.2	Lift arm and draft sensor	7-57
7.7.3	Control lever	7-58
7.7.4	Fuse box	7-58
7.7.5	Depth dial	7-59
7.7.6	Lift lamp	7-59
7.7.7	Main switch	7-60
7.7.8	Calibrating the clutch pedal switch and sensor	7-60
7.7.9	Clutch pedal	7-62
7.7.10	Clutch pedal sensor	7-63
7.7.11	Clutch pedal switch	7-63
7.7.12	Forward/reverse lever	7-64
7.7.13	Calibrating the clutch initial time	7-64
7.7.14	Range shift lever	7-65
7.7.15	Gear shift lever	7-65
7.7.16	Parking lever switch	7-66
7.7.17	Brake pedal switch	7-66
7.7.18	Throttle lever	7-67
7.7.19	Instrument panel	7-67
7.8	Electrical and hydraulic control system	7-68
7.9	Main clutch system	7-70
7.10	Electronic diagnostic tool	7-72
7.10.1	Engine service tool software license	7-72
7.10.2	Connecting the electronic diagnostic tool	7-72
7.11	Fault code tree	7-73
7.12	Diagnostic codes	7-75
7.12.1	SPN 1001 FMI 1	7-75
7.12.2	SPN 1001 FMI 2	7-78
7.12.3	SPN 1001 FMI 3	7-81
7.12.4	SPN 1002 FMI 1	7-84
7.12.5	SPN 1002 FMI 2	7-87
7.12.6	SPN 1002 FMI 3	7-90
7.12.7	SPN 1004 FMI 1	7-93
7.12.8	SPN 1004 FMI 2	7-96
7.12.9	SPN 1004 FMI 3	7-99
7.12.10	SPN 3055 FMI 1	7-102
7.12.11	SPN 3055 FMI 2	7-104
7.12.12	SPN 3057 FMI 1	7-106
7.12.13	SPN 3057 FMI 2	7-108
7.12.14	SPN 3151 FMI 06	7-110
7.12.15	SPN 3151 FMI 07	7-113
7.12.16	SPN 3151 FMI 08	7-115
7.12.17	SPN 3151 FMI 09	7-118
7.12.18	SPN 3152 FMI 04	7-121
7.12.19	SPN 3156 FMI 08	7-124
7.12.20	SPN 3156 FMI 09	7-127
7.12.21	SPN 3351 FMI 21	7-130
7.12.22	SPN 3351 FMI 22	7-133
7.12.23	SPN 3352 FMI 21	7-136
7.12.24	SPN 3352 FMI 22	7-139

8 Hydraulics	8-1
8.1 Hydraulic schematic	8-3
8.1.1 Hydraulic schematic	8-5
8.2 Specifications	8-7
8.2.1 Power shuttle transmission specifications	8-10
8.3 Transmission oil cooler and lubrication	8-11
8.4 General service procedures	8-13
8.4.1 Transmission oil	8-13
8.4.2 Checking the transmission oil level	8-13
8.4.3 Changing the transmission oil and filter	8-13
8.5 Suction filter	8-15
8.5.1 Suction filter specifications	8-15
8.5.2 Suction filter operation	8-16
8.5.3 Suction filter maintenance	8-16
8.6 Gear pump	8-17
8.6.1 Main pump	8-17
8.6.2 Sub pump	8-18
8.7 Cylinders	8-19
8.7.1 Power steering cylinder	8-19
8.7.2 Main cylinder	8-21
8.7.3 Main cylinder specifications	8-23
8.7.4 Assist cylinder, if equipped	8-23
8.8 Valves	8-25
8.8.1 Main relief valve	8-25
8.8.2 Installing the main relief valve	8-26
8.8.3 Main relief valve specifications	8-26
8.8.4 Main control valve	8-27
8.8.5 Steering orbit roll	8-28
8.8.6 Slow return valve	8-29
8.8.7 Assembling precautions for the slow return valve	8-30
8.8.8 Slow return valve specifications	8-30
8.8.9 Safety valve	8-31
8.8.10 Assembling precautions for the safety valve	8-31
8.8.11 Safety valve specifications	8-31
8.8.12 Power takeoff control valve	8-32
8.8.13 Assembling precautions for the power takeoff control valve	8-33
8.8.14 Power takeoff control valve specifications	8-33
8.8.15 Reduce valve	8-34
8.8.16 Assembling precautions for the reduce valve	8-36
8.8.17 Reduce valve specifications	8-37
8.8.18 Control valve	8-37
8.8.19 Assembling precautions for the control valve	8-41
8.8.20 Control valve specifications	8-41
8.8.21 High-low valve (P1 type only)	8-42
8.8.22 Joystick valve (J type only)	8-44
8.8.23 Joystick valve specifications	8-48
8.8.24 Boom valve operation	8-49
8.8.25 Bucket valve operation	8-54
8.8.26 Remote control valve	8-57
8.8.27 Remote control valve specifications	8-57
8.8.28 Removing the remote control valve	8-58
8.8.29 Remote control valve assembly	8-58
8.8.30 Installing the remote control valve	8-59
8.9 Parts and hydraulic diagrams	8-60
8.9.1 Front loader adapter	8-60