

Workshop Service Manual



MASSEY FERGUSON

MF4700

MF4707

MF4708

MF4709

MF4710



Beauvais

AGCO S.A.S. - 41 avenue Blaise Pascal - 60000
Beauvais - France - RC B562 104 539

© AGCO 2016

July 2016
ACT000899D

English

MF4700

1 Introduction	1-1
1.1 General	1-9
1.1.1 Using the manual	1-9
1.1.2 General specifications	1-9
1.1.2.1 MF 4707 model	1-9
1.1.2.2 Model MF 4708	1-11
1.1.2.3 Model MF 4709	1-13
1.1.2.4 Model MF 4710	1-15
1.1.3 Capacities and dimensions of the GTA50 transmission	1-17
1.1.3.1 Capacities	1-17
1.1.3.2 MF 4700/Dimensions and weights	1-19
1.1.3.3 Dimensions and weights	1-21
1.1.3.4 Attachment points for 3-cylinder engines	1-23
1.1.3.5 Attachment points for 4-cylinder engines for MF 4708 tractors with Tier 2/ Stage II engine	1-25
1.1.4 Conversion table	1-26
1.1.5 Tightening torques	1-28
1.1.5.1 Tightening torques for screws and nuts	1-28
1.1.5.2 Tightening torques for hydraulic unions	1-32
1.1.6 Retaining compounds and sealing products	1-35
1.2 Error codes	1-37
1.2.1 Error codes	1-37
1.3 Fuse box, electrical diagrams, harnesses and hydraulics diagrams	1-42
1.3.1 Fuse box	1-42
1.3.1.1 Main fuse boxes: Platform models	1-42
1.3.1.2 Main fuse boxes: Cab models	1-70
1.3.1.3 Additional fuse boxes: Platform models	1-82
1.3.1.4 Additional fuse boxes: Cab models	1-90
1.3.1.5 Fuse boxes on the side of the battery	1-91
1.3.2 AGCO Power Tier 2 engine, mechanical reverse shuttle, platform	1-103
1.3.2.1 AP Tier 2 - Summary of electrical diagrams - Mechanical reverse shuttle	1-103
1.3.2.2 AP Tier 2 - Mechanical reverse shuttle/Electrical power supply with battery isolator	1-103
1.3.2.3 AP Tier 2 - Mechanical reverse shuttle/Electrical power supply without battery isolator	1-104
1.3.2.4 AP Tier 2 - Mechanical reverse shuttle/Instrument panel	1-105
1.3.2.5 AP Tier 2 - Mechanical reverse shuttle/Engine	1-106
1.3.2.6 AP Tier 2 - Mechanical reverse shuttle/Linkage	1-107
1.3.2.7 AP Tier 2 - Mechanical reverse shuttle/Rear power take-off	1-108
1.3.2.8 AP Tier 2 - Mechanical reverse shuttle/Lighting	1-109
1.3.2.9 AP Tier 2 - Mechanical reverse shuttle/Lighting 2	1-110
1.3.2.10 AP Tier 2 - Mechanical reverse shuttle/Fenders and European trailer connector	1-111
1.3.2.11 AP Tier 2 - Mechanical reverse shuttle/Fenders and North America trailer connector	1-112
1.3.2.12 AP Tier 2 - Mechanical reverse shuttle/Work lights	1-113
1.3.2.13 AP Tier 2 - Mechanical reverse shuttle/Power socket	1-114
1.3.2.14 AP Tier 2 - Mechanical reverse shuttle/Front loader	1-115
1.3.2.15 AP Tier 2 - Mechanical reverse shuttle/Linkage console	1-116
1.3.2.16 AP Tier 2 - Mechanical reverse shuttle/Transmission	1-117
1.3.2.17 AP Tier 2 - Mechanical reverse shuttle/Earth	1-118
1.3.3 AGCO Power Tier 2 engine, PowerShuttle, platform	1-119

1.3.3.1	AP Tier 2 - Summary of electrical diagrams — Electrohydraulic reverse shuttle	1-119
1.3.3.2	AP Tier 2 - PowerShuttle/Electrical power supply with battery isolator	1-120
1.3.3.3	AP Tier 2 - PowerShuttle/Electrical power supply without battery isolator	1-121
1.3.3.4	AP Tier 2 - PowerShuttle/Instrument panel	1-122
1.3.3.5	AP Tier 2 - PowerShuttle/Engine	1-123
1.3.3.6	AP Tier 2 - PowerShuttle/Linkage	1-124
1.3.3.7	AP Tier 2 - PowerShuttle/Rear PTO	1-125
1.3.3.8	AP Tier 2 - PowerShuttle/PowerShuttle	1-126
1.3.3.9	AP Tier 2 - PowerShuttle/Lighting	1-127
1.3.3.10	AP Tier 2 - PowerShuttle/Lighting 2	1-128
1.3.3.11	AP Tier 2 - PowerShuttle/Fenders and European trailer connector	1-129
1.3.3.12	AP Tier 2 - PowerShuttle/Fenders and North America trailer connector	1-130
1.3.3.13	AP Tier 2 - PowerShuttle/Work lights	1-131
1.3.3.14	AP Tier 2 - PowerShuttle/Power socket	1-132
1.3.3.15	AP Tier 2 - PowerShuttle/Front loader	1-133
1.3.3.16	AP Tier 2 - PowerShuttle/Linkage console	1-134
1.3.3.17	AP Tier 2 - PowerShuttle/Transmission	1-135
1.3.3.18	AP Tier 2 - PowerShuttle/Earth	1-136
1.3.4	AGCO Power Tier 3 engine, mechanical reverse shuttle, platform	1-137
1.3.4.1	AGCO Power Tier 3 - Mechanical reverse shuttle/Summary	1-137
1.3.4.2	AGCO Power Tier 3 - Mechanical reverse shuttle/Electrical power supply with battery isolator	1-139
1.3.4.3	AGCO Power Tier 3 - Mechanical reverse shuttle/Electrical power supply without battery isolator	1-139
1.3.4.4	AGCO Power Tier 3 - Mechanical reverse shuttle/Instrument panel	1-140
1.3.4.5	AGCO Power Tier 3 - Mechanical reverse shuttle/Engine	1-141
1.3.4.6	AGCO Power Tier 3 - Mechanical reverse shuttle/Engine 2	1-142
1.3.4.7	AGCO Power Tier 3 - Mechanical reverse shuttle/Linkage	1-143
1.3.4.8	AGCO Power Tier 3 - Mechanical reverse shuttle/Rear PTO	1-144
1.3.4.9	AGCO Power Tier 3 - Mechanical reverse shuttle/PowerShuttle	1-145
1.3.4.10	AGCO Power Tier 3 - Mechanical reverse shuttle/PowerShuttle 2	1-146
1.3.4.11	AGCO Power Tier 3 - Mechanical reverse shuttle/Lighting	1-147
1.3.4.12	AGCO Power Tier 3 - Mechanical reverse shuttle/Lighting 2 (ISO)	1-148
1.3.4.13	AGCO Power Tier 3 - Mechanical reverse shuttle/Lighting 2 (SAE)	1-149
1.3.4.14	AGCO Power Tier 3 - Mechanical reverse shuttle/Trailer connector (ISO)	1-150
1.3.4.15	AGCO Power Tier 3 - Mechanical reverse shuttle/Trailer connector (SAE)	1-151
1.3.4.16	AGCO Power Tier 3 - Mechanical reverse shuttle/Work lights	1-152
1.3.4.17	AGCO Power Tier 3 - Mechanical reverse shuttle/Power socket (ISO)	1-153
1.3.4.18	AGCO Power Tier 3 - Mechanical reverse shuttle/Power socket (SAE)	1-154
1.3.4.19	AGCO Power Tier 3 - Mechanical reverse shuttle/Front loader	1-155
1.3.4.20	AGCO Power Tier 3 - Mechanical reverse shuttle/Linkage console	1-156
1.3.4.21	AGCO Power Tier 3 - Mechanical reverse shuttle/Transmission	1-157
1.3.4.22	AGCO Power Tier 3 - Mechanical reverse shuttle/Transmission 2	1-158
1.3.4.23	AGCO Power Tier 3 - Mechanical reverse shuttle/Earth	1-159
1.3.5	AGCO Power Tier 3 engine, PowerShuttle, platform	1-160
1.3.5.1	AGCO Power Tier 3 - PowerShuttle/Summary	1-160
1.3.5.2	AGCO Power Tier 3 - PowerShuttle/Electrical power supply without battery isolator	1-162
1.3.5.3	AGCO Power Tier 3 - PowerShuttle/Electrical power supply with battery isolator	1-162
1.3.5.4	AGCO Power Tier 3 - PowerShuttle/Instrument panel	1-163
1.3.5.5	AGCO Power Tier 3 - PowerShuttle/Engine	1-164
1.3.5.6	AGCO Power Tier 3 - Mechanical reverse shuttle/Engine 2	1-165
1.3.5.7	AGCO Power Tier 3 - PowerShuttle/Linkage	1-166
1.3.5.8	AGCO Power Tier 3 - PowerShuttle/Rear PTO	1-167

1.3.5.9	AGCO Power Tier 3 - PowerShuttle/PowerShuttle	1-168
1.3.5.10	AGCO Power Tier 3 - PowerShuttle/PowerShuttle 2	1-169
1.3.5.11	AGCO Power Tier 3 - PowerShuttle/Lighting	1-170
1.3.5.12	AGCO Power Tier 3 - PowerShuttle/Lighting 2 (ISO)	1-171
1.3.5.13	AGCO Power Tier 3 - PowerShuttle/Lighting 2 (SAE)	1-172
1.3.5.14	AGCO Power Tier 3 - PowerShuttle/Trailer connector (ISO)	1-173
1.3.5.15	AGCO Power Tier 3 - PowerShuttle/Trailer connector (SAE)	1-174
1.3.5.16	AGCO Power Tier 3 - PowerShuttle/Work lights	1-175
1.3.5.17	AGCO Power Tier 3 - PowerShuttle/Power socket (ISO)	1-176
1.3.5.18	AGCO Power Tier 3 - PowerShuttle/Power socket (SAE)	1-177
1.3.5.19	AGCO Power Tier 3 - PowerShuttle/Front loader	1-178
1.3.5.20	AGCO Power Tier 3 - PowerShuttle/Linkage console	1-179
1.3.5.21	AGCO Power Tier 3 - PowerShuttle/Transmission	1-180
1.3.5.22	AGCO Power Tier 3 - PowerShuttle/Transmission 2	1-181
1.3.5.23	AGCO Power Tier 3 - PowerShuttle/Earth	1-182
1.3.6	AGCO Power Tier 4i engine, mechanical reverse shuttle, platform	1-183
1.3.6.1	AP Tier 4i - Mechanical reverse shuttle/Summary	1-183
1.3.6.2	AP Tier 4i - Mechanical reverse shuttle/Electrical power supply with battery isolator	1-184
1.3.6.3	AP Tier 4i - Mechanical reverse shuttle/Electrical power supply without battery isolator	1-185
1.3.6.4	AP Tier 4i - Mechanical reverse shuttle/Instrument panel	1-186
1.3.6.5	AP Tier 4i - Mechanical reverse shuttle/Engine	1-187
1.3.6.6	AP Tier 4i - Mechanical reverse shuttle/Linkage	1-188
1.3.6.7	AP Tier 4i - Mechanical reverse shuttle/Rear power take-off	1-189
1.3.6.8	AP Tier 4i - Mechanical reverse shuttle/PowerShuttle	1-190
1.3.6.9	AP Tier 4i - Mechanical reverse shuttle/Lighting	1-191
1.3.6.10	AP Tier 4i - Mechanical reverse shuttle/Lighting 2	1-192
1.3.6.11	AP Tier 4i - Mechanical reverse shuttle/Lighting 3	1-193
1.3.6.12	AP Tier 4i - Mechanical reverse shuttle/Fenders and ISO trailer connector	1-194
1.3.6.13	AP Tier 4i - Mechanical reverse shuttle/Fenders and SAE trailer connector	1-195
1.3.6.14	AP Tier 4i - Mechanical reverse shuttle/Work light	1-196
1.3.6.15	AP Tier 4i - Mechanical reverse shuttle/ISO current socket	1-197
1.3.6.16	AP Tier 4i - Mechanical reverse shuttle/SAE current socket	1-198
1.3.6.17	AP Tier 4i - Mechanical shuttle/Front loader	1-199
1.3.6.18	AP Tier 4i - Mechanical shuttle/Linkage console	1-200
1.3.6.19	AP Tier 4i - Mechanical shuttle/Extension	1-201
1.3.6.20	AP Tier 4i - Mechanical shuttle/Earth	1-202
1.3.7	AGCO Power Tier 4i engine, PowerShuttle, platform	1-203
1.3.7.1	AP Tier 4i - PowerShuttle/Summary	1-203
1.3.7.2	AP Tier 4i - PowerShuttle/Electrical power supply with battery isolator	1-204
1.3.7.3	AP Tier 4i - PowerShuttle/Electrical power supply without battery isolator	1-205
1.3.7.4	AP Tier 4i - PowerShuttle/Instrument panel	1-206
1.3.7.5	AP Tier 4i - PowerShuttle/Engine	1-207
1.3.7.6	AP Tier 4i - PowerShuttle/Linkage	1-208
1.3.7.7	AP Tier 4i - PowerShuttle/Rear PTO	1-209
1.3.7.8	AP Tier 4i - PowerShuttle/PowerShuttle	1-210
1.3.7.9	AP Tier 4i - PowerShuttle/Lighting	1-211
1.3.7.10	AP Tier 4i - PowerShuttle/Lighting 2	1-212
1.3.7.11	AP Tier 4i - PowerShuttle/Lighting 3	1-213
1.3.7.12	AP Tier 4i - PowerShuttle/Fenders and ISO trailer connector	1-214
1.3.7.13	AP Tier 4i - PowerShuttle/Fenders and SAE trailer connector	1-215
1.3.7.14	AP Tier 4i - PowerShuttle/Work light	1-216
1.3.7.15	AP Tier 4i - PowerShuttle/ISO power socket	1-217
1.3.7.16	AP Tier 4i - PowerShuttle/SAE power socket	1-218
1.3.7.17	AP Tier 4i - PowerShuttle/Front loader	1-219

1.3.7.18	AP Tier 4i - PowerShuttle/Linkage console	1-220
1.3.7.19	AP Tier 4i - PowerShuttle/Extension	1-221
1.3.7.20	AP Tier 4i - PowerShuttle/Earth	1-222
1.3.8	AGCO Power Tier 4F engine, mechanical reverse shuttle, platform	1-223
1.3.8.1	AP Tier 4F - Summary of electrical diagrams — Mechanical reverse shuttle	1-223
1.3.8.2	AP Tier 4F - Mechanical shuttle/Electrical power supply with battery isolator	1-224
1.3.8.3	AP Tier 4F - Mechanical shuttle/Electrical power supply without battery isolator	1-225
1.3.8.4	AP Tier 4F - Mechanical shuttle/Instrument panel	1-226
1.3.8.5	AP Tier 4F - Mechanical shuttle/Engine	1-227
1.3.8.6	AP Tier 4F - Mechanical shuttle/Engine 2	1-228
1.3.8.7	AP Tier 4F - Mechanical shuttle/Engine 3	1-229
1.3.8.8	AP Tier 4F - Mechanical shuttle/Linkage	1-230
1.3.8.9	AP Tier 4F - Mechanical shuttle/PTO	1-231
1.3.8.10	AP Tier 4F - Mechanical shuttle/Lighting	1-232
1.3.8.11	AP Tier 4F - Mechanical shuttle/Lighting 2	1-233
1.3.8.12	AP Tier 4F - Mechanical shuttle/Lighting 3	1-234
1.3.8.13	AP Tier 4F - Mechanical shuttle/ISO trailer connector	1-235
1.3.8.14	AP Tier 4F - Mechanical shuttle/SAE trailer connector	1-236
1.3.8.15	AP Tier 4F - Mechanical shuttle/Work lights	1-237
1.3.8.16	AP Tier 4F - Mechanical shuttle/ISO connector	1-238
1.3.8.17	AP Tier 4F - Mechanical shuttle/SAE connector	1-239
1.3.8.18	AP Tier 4F - Mechanical shuttle/Front loader	1-240
1.3.8.19	AP Tier 4F - Mechanical shuttle/Electronic linkage console	1-241
1.3.8.20	AP Tier 4F - Mechanical shuttle/Extension	1-242
1.3.8.21	AP Tier 4F - Mechanical shuttle/Extension	1-243
1.3.9	AGCO Power Tier 4F engine, PowerShuttle, platform	1-244
1.3.9.1	AP Tier 4F - Summary of electrical diagrams - PowerShuttle	1-244
1.3.9.2	AP Tier 4F - PowerShuttle/Electrical power supply with battery isolator	1-245
1.3.9.3	AP Tier 4F - PowerShuttle/Electrical power supply without battery isolator	1-246
1.3.9.4	AP Tier 4F - PowerShuttle/Instrument panel	1-247
1.3.9.5	AP Tier 4F - PowerShuttle/Engine	1-248
1.3.9.6	AP Tier 4F - PowerShuttle/Engine 2	1-249
1.3.9.7	AP Tier 4F - PowerShuttle/Engine 3	1-250
1.3.9.8	AP Tier 4F - PowerShuttle/Linkage	1-251
1.3.9.9	AP Tier 4F - PowerShuttle/Rear PTO	1-252
1.3.9.10	AP Tier 4F - PowerShuttle/PowerShuttle	1-253
1.3.9.11	AP Tier 4F - PowerShuttle/Lighting	1-254
1.3.9.12	AP Tier 4F - PowerShuttle/Lighting 2	1-255
1.3.9.13	AP Tier 4F - PowerShuttle/Lighting 3	1-256
1.3.9.14	AP Tier 4F - PowerShuttle/Trailer connector	1-257
1.3.9.15	AP Tier 4F - PowerShuttle/SAE trailer connector	1-258
1.3.9.16	AP Tier 4F - PowerShuttle/Work lights	1-259
1.3.9.17	AP Tier 4F - PowerShuttle/ISO connector	1-260
1.3.9.18	AP Tier 4F - PowerShuttle/SAE connector	1-261
1.3.9.19	AP Tier 4F - PowerShuttle/Front loader	1-262
1.3.9.20	AP Tier 4F - PowerShuttle/Hybrid console	1-263
1.3.9.21	AP Tier 4F - PowerShuttle/Extension	1-264
1.3.9.22	AP Tier 4F - PowerShuttle/Earth	1-265
1.3.10	AGCO Power Tier 3 engine, mechanical reverse shuttle, cab	1-266
1.3.10.1	AGCO Power Tier 3 - Cab version - Mechanical reverse shuttle/Summary	1-266
1.3.10.2	AGCO Power Tier 3 - Cab version - Mechanical reverse shuttle/Electrical power supply without battery isolator	1-268

1.3.10.3	AGCO Power Tier 3 - Cab version - Mechanical reverse shuttle/Electrical power supply with battery isolator	1-269
1.3.10.4	AGCO Power Tier 3 - Cab version - Mechanical reverse shuttle/Electrical power supply 2	1-269
1.3.10.5	AGCO Power Tier 3 - Cab version - Mechanical reverse shuttle/Instrument panel	1-270
1.3.10.6	AGCO Power Tier 3 - Cab version - Mechanical reverse shuttle/Cab . . .	1-271
1.3.10.7	AGCO Power Tier 3 - Cab version - Mechanical reverse shuttle/Roof . .	1-272
1.3.10.8	AGCO Power Tier 3 - Cab version - Mechanical reverse shuttle/Engine	1-273
1.3.10.9	AGCO Power Tier 3 - Cab version - Mechanical reverse shuttle/Engine 2	1-274
1.3.10.10	AGCO Power Tier 3 - Cab version - Mechanical reverse shuttle/Linkage	1-275
1.3.10.11	AGCO Power Tier 3 - Cab version - Mechanical reverse shuttle/Rear PTO	1-276
1.3.10.12	AGCO Power Tier 3 - Cab version - Mechanical reverse shuttle/PowerShuttle	1-277
1.3.10.13	AGCO Power Tier 3 - Cab version - Mechanical reverse shuttle/Lighting	1-278
1.3.10.14	AGCO Power Tier 3 - Cab version - Mechanical reverse shuttle/Lighting 2 (ISO)	1-279
1.3.10.15	AGCO Power Tier 3 - Cab version - Mechanical reverse shuttle/Lighting 2 (SAE)	1-280
1.3.10.16	AGCO Power Tier 3 - Cab version - Mechanical reverse shuttle/Trailer connector (ISO)	1-281
1.3.10.17	AGCO Power Tier 3 - Cab version - Mechanical reverse shuttle/Trailer connector (SAE)	1-282
1.3.10.18	AGCO Power Tier 3 - Cab version - Mechanical reverse shuttle/Work lights	1-283
1.3.10.19	AGCO Power Tier 3 - Cab version - Mechanical reverse shuttle/Connector (ISO)	1-284
1.3.10.20	AGCO Power Tier 3 - Cab version - Mechanical reverse shuttle/Connector (SAE)	1-285
1.3.10.21	AGCO Power Tier 3 - Cab version - Mechanical reverse shuttle/Transmission	1-286
1.3.10.22	AGCO Power Tier 3 - Cab version - Mechanical reverse shuttle/Transmission 2	1-287
1.3.10.23	AGCO Power Tier 3 - Cab version - Mechanical reverse shuttle/Earth . .	1-288
1.3.11	AGCO Power Tier 3 engine, PowerShuttle, cab	1-289
1.3.11.1	AGCO Power Tier 3 - Cab version - PowerShuttle/Summary	1-289
1.3.11.2	AGCO Power Tier 3 - Cab version - PowerShuttle/Electrical power supply without battery isolator	1-291
1.3.11.3	AGCO Power Tier 3 - Cab version - PowerShuttle/Electrical power supply with battery isolator	1-291
1.3.11.4	AGCO Power Tier 3 - Cab version - PowerShuttle/Electrical power supply 2	1-292
1.3.11.5	AGCO Power Tier 3 - Cab version - PowerShuttle/Instrument panel . . .	1-293
1.3.11.6	AGCO Power Tier 3 - Cab version - PowerShuttle/Cab	1-294
1.3.11.7	AGCO Power Tier 3 - Cab version - PowerShuttle/Roof	1-295
1.3.11.8	AGCO Power Tier 3 - Cab version - PowerShuttle/Engine	1-296
1.3.11.9	AGCO Power Tier 3 - Cab version - PowerShuttle/Engine	1-297
1.3.11.10	AGCO Power Tier 3 - Cab version - PowerShuttle/Linkage	1-298
1.3.11.11	AGCO Power Tier 3 - Cab version - PowerShuttle/Rear PTO	1-299
1.3.11.12	AGCO Power Tier 3 - Cab version - PowerShuttle/PowerShuttle	1-300
1.3.11.13	AGCO Power Tier 3 - Cab version - PowerShuttle/Lighting	1-301
1.3.11.14	AGCO Power Tier 3 - Cab version - PowerShuttle/Lighting 2 (ISO) . . .	1-302
1.3.11.15	AGCO Power Tier 3 - Cab version - PowerShuttle/Lighting 2 (SAE) . . .	1-303

1.3.11.16	AGCO Power Tier 3 - Cab version - PowerShuttle/Trailer connector (ISO)	1-304
1.3.11.17	AGCO Power Tier 3 - Cab version - PowerShuttle/Trailer connector (SAE)	1-305
1.3.11.18	AGCO Power Tier 3 - Cab version - PowerShuttle/Work lights	1-306
1.3.11.19	AGCO Power Tier 3 - Cab version - PowerShuttle/Connector (ISO)	1-307
1.3.11.20	AGCO Power Tier 3 - Cab version - PowerShuttle/Connector (SAE)	1-308
1.3.11.21	AGCO Power Tier 3 - Cab version - PowerShuttle/Transmission	1-309
1.3.11.22	AGCO Power Tier 3 - Cab version - PowerShuttle/Transmission 2	1-310
1.3.11.23	AGCO Power Tier 3 - Cab version - PowerShuttle/Earth	1-311
1.3.12	AGCO Power Tier 4i engine, mechanical reverse shuttle, cab	1-312
1.3.12.1	AGCO Power Tier 4i - Cab version - Mechanical reverse shuttle/Summary	1-312
1.3.12.2	AGCO Power Tier 4i - Cab version - Mechanical reverse shuttle/Electrical power supply with battery isolator	1-314
1.3.12.3	AGCO Power Tier 4i - Cab version - Mechanical reverse shuttle/Electrical power supply without battery isolator	1-315
1.3.12.4	AGCO Power Tier 4i - Cab version - Mechanical reverse shuttle/Electrical power supply 2	1-315
1.3.12.5	AGCO Power Tier 4i - Cab version - Mechanical reverse shuttle/Instrument panel	1-316
1.3.12.6	AGCO Power Tier 4i - Cab version - Mechanical reverse shuttle/Cab	1-317
1.3.12.7	AGCO Power Tier 4i - Cab version - Mechanical reverse shuttle/Roof	1-318
1.3.12.8	AGCO Power Tier 4i - Cab version - Mechanical reverse shuttle/Engine	1-319
1.3.12.9	AGCO Power Tier 4i - Cab version - Mechanical reverse shuttle/Engine 2	1-320
1.3.12.10	AGCO Power Tier 4i - Cab version - Mechanical reverse shuttle/Linkage	1-321
1.3.12.11	AGCO Power Tier 4i - Cab version - Mechanical reverse shuttle/Rear PTO	1-322
1.3.12.12	AGCO Power Tier 4i - Cab version - Mechanical reverse shuttle/PowerShuttle	1-323
1.3.12.13	AGCO Power Tier 4i - Cab version - Mechanical reverse shuttle/Lighting	1-324
1.3.12.14	AGCO Power Tier 4i - Cab version - Mechanical reverse shuttle/Lighting 2 (ISO)	1-325
1.3.12.15	AGCO Power Tier 4i - Cab version - Mechanical reverse shuttle/Lighting 2 (SAE)	1-326
1.3.12.16	AGCO Power Tier 4i - Cab version - Mechanical reverse shuttle/Trailer connector (ISO)	1-327
1.3.12.17	AGCO Power Tier 4i - Cab version - Mechanical reverse shuttle/Trailer connector (SAE)	1-328
1.3.12.18	AGCO Power Tier 4i - Cab version - Mechanical reverse shuttle/Work lights	1-329
1.3.12.19	AGCO Power Tier 4i - Cab version - Mechanical reverse shuttle/Power socket (ISO)	1-330
1.3.12.20	AGCO Power Tier 4i - Cab version - Mechanical reverse shuttle/Power socket (SAE)	1-331
1.3.12.21	AGCO Power Tier 4i - Cab version - Mechanical reverse shuttle/Transmission	1-332
1.3.12.22	AGCO Power Tier 4i - Cab version - Mechanical reverse shuttle/Transmission 2	1-333
1.3.12.23	AGCO Power Tier 4i - Cab version - Mechanical reverse shuttle/Earth	1-334
1.3.13	AGCO Power Tier 4i engine, PowerShuttle, cab	1-335
1.3.13.1	AGCO Power Tier 4i - Cab version - PowerShuttle/Summary	1-335
1.3.13.2	AGCO Power Tier 4i - Cab version - PowerShuttle/Electrical power supply with battery isolator	1-337

1.3.13.3	AGCO Power Tier 4i - Cab version - PowerShuttle/Electrical power supply without battery isolator	1-337
1.3.13.4	AGCO Power Tier 4i - Cab version - PowerShuttle/Electrical power supply 2	1-338
1.3.13.5	AGCO Power Tier 4i - Cab version - PowerShuttle/Instrument panel . . .	1-339
1.3.13.6	AGCO Power Tier 4i - Cab version - PowerShuttle/Cab	1-340
1.3.13.7	AGCO Power Tier 4i - Cab version - PowerShuttle/Roof	1-341
1.3.13.8	AGCO Power Tier 4i - Cab version - PowerShuttle/Engine	1-342
1.3.13.9	AGCO Power Tier 4i - Cab version - PowerShuttle/Engine 2	1-343
1.3.13.10	AGCO Power Tier 4i - Cab version - PowerShuttle/Linkage	1-344
1.3.13.11	AGCO Power Tier 4i - Cab version - PowerShuttle/Rear PTO	1-345
1.3.13.12	AGCO Power Tier 4i - Cab version - PowerShuttle/PowerShuttle	1-346
1.3.13.13	AGCO Power Tier 4i - Cab version - PowerShuttle/Lighting	1-347
1.3.13.14	AGCO Power Tier 4i - Cab version - PowerShuttle/Lighting 2 (ISO) . . .	1-348
1.3.13.15	AGCO Power Tier 4i - Cab version - PowerShuttle/Lighting 2 (SAE) . . .	1-349
1.3.13.16	AGCO Power Tier 4i - Cab version - PowerShuttle/Trailer connector (ISO)	1-350
1.3.13.17	AGCO Power Tier 4i - Cab version - PowerShuttle/Trailer connector (SAE)	1-351
1.3.13.18	AGCO Power Tier 4i - Cab version - PowerShuttle/Work lights	1-352
1.3.13.19	AGCO Power Tier 4i - Cab version - PowerShuttle/Power socket (ISO) .	1-353
1.3.13.20	AGCO Power Tier 4i - Cab version - PowerShuttle/Power socket (SAE) .	1-354
1.3.13.21	AGCO Power Tier 4i - Cab version - PowerShuttle/Transmission	1-355
1.3.13.22	AGCO Power Tier 4i - Cab version - PowerShuttle/Transmission 2 . . .	1-356
1.3.13.23	AGCO Power Tier 4i - Cab version - PowerShuttle/Earth	1-357
1.3.14	AGCO Power Tier 4F engine, mechanical reverse shuttle, cab	1-358
1.3.14.1	AGCO Power Tier 4F - Cab version - Mechanical reverse shuttle/Summary	1-358
1.3.14.2	AGCO Power Tier 4F - Cab version - Mechanical reverse shuttle/Electrical power supply with battery isolator	1-360
1.3.14.3	AGCO Power Tier 4F - Cab version - Mechanical reverse shuttle/Electrical power supply without battery isolator	1-361
1.3.14.4	AGCO Power Tier 4F - Cab version - Mechanical reverse shuttle/Electrical power supply 2	1-362
1.3.14.5	AGCO Power Tier 4F - Cab version - Mechanical reverse shuttle/Instrument panel	1-363
1.3.14.6	AGCO Power Tier 4F - Cab version - Mechanical reverse shuttle/Cab . . .	1-364
1.3.14.7	AGCO Power Tier 4F - Cab version - Mechanical reverse shuttle/Roof . .	1-365
1.3.14.8	AGCO Power Tier 4F - Cab version - Mechanical reverse shuttle/Engine .	1-366
1.3.14.9	AGCO Power Tier 4F - Cab version - Mechanical reverse shuttle/Engine 2	1-367
1.3.14.10	AGCO Power Tier 4F - Cab version - Mechanical reverse shuttle/Engine 3	1-368
1.3.14.11	AGCO Power Tier 4F - Cab version - Mechanical reverse shuttle/Linkage	1-369
1.3.14.12	AGCO Power Tier 4F - Cab version - Mechanical reverse shuttle/Rear PTO	1-370
1.3.14.13	AGCO Power Tier 4F - Cab version - Mechanical reverse shuttle/PowerShuttle	1-371
1.3.14.14	AGCO Power Tier 4F - Cab version - Mechanical reverse shuttle/Lighting	1-372
1.3.14.15	AGCO Power Tier 4F - Cab version - Mechanical reverse shuttle/Lighting 2 (ISO)	1-373
1.3.14.16	AGCO Power Tier 4F - Cab version - Mechanical reverse shuttle/Lighting 2 (SAE)	1-374
1.3.14.17	AGCO Power Tier 4F - Cab version - Mechanical reverse shuttle/Trailer connector (ISO)	1-375

1.3.14.18	AGCO Power Tier 4F - Cab version - Mechanical reverse shuttle/Trailer connector (SAE)	1-376
1.3.14.19	AGCO Power Tier 4F - Cab version - Mechanical reverse shuttle/Work lights	1-377
1.3.14.20	AGCO Power Tier 4F - Cab version - Mechanical reverse shuttle/Power socket (ISO)	1-378
1.3.14.21	AGCO Power Tier 4F - Cab version - Mechanical reverse shuttle/Power socket (SAE)	1-379
1.3.14.22	AGCO Power Tier 4F - Cab version - Mechanical reverse shuttle/Transmission	1-380
1.3.14.23	AGCO Power Tier 4F - Cab version - Mechanical reverse shuttle/Transmission 2	1-381
1.3.14.24	AGCO Power Tier 4F - Cab version - Mechanical reverse shuttle/Earth	1-382
1.3.15	AGCO Power Tier 4F engine, PowerShuttle, cab	1-383
1.3.15.1	AGCO Power Tier 4F - Cab version - PowerShuttle/Summary	1-383
1.3.15.2	AGCO Power Tier 4F - Cab version - PowerShuttle/Electrical power supply with battery isolator	1-385
1.3.15.3	AGCO Power Tier 4F - Cab version - PowerShuttle/Electrical power supply without battery isolator	1-385
1.3.15.4	AGCO Power Tier 4F - Cab version - PowerShuttle/Electrical power supply 2	1-386
1.3.15.5	AGCO Power Tier 4F - Cab version - PowerShuttle/Instrument panel	1-387
1.3.15.6	AGCO Power Tier 4F - Cab version - PowerShuttle/Cab	1-388
1.3.15.7	AGCO Power Tier 4F - Cab version - PowerShuttle/Roof	1-389
1.3.15.8	AGCO Power Tier 4F - Cab version - PowerShuttle/Engine	1-390
1.3.15.9	AGCO Power Tier 4F - Cab version - Mechanical reverse shuttle/Engine 2	1-391
1.3.15.10	AGCO Power Tier 4F - Cab version - PowerShuttle/Engine 3	1-392
1.3.15.11	AGCO Power Tier 4F - Cab version - PowerShuttle/Linkage	1-393
1.3.15.12	AGCO Power Tier 4F - Cab version - PowerShuttle/Rear PTO	1-394
1.3.15.13	AGCO Power Tier 4F - Cab version - PowerShuttle/PowerShuttle	1-395
1.3.15.14	AGCO Power Tier 4F - Cab version - PowerShuttle/Lighting	1-396
1.3.15.15	AGCO Power Tier 4F - Cab version - PowerShuttle/Lighting 2 (ISO)	1-397
1.3.15.16	AGCO Power Tier 4F - Cab version - PowerShuttle/Lighting 2 (SAE)	1-398
1.3.15.17	AGCO Power Tier 4F - Cab version - PowerShuttle/Trailer connector (ISO)	1-399
1.3.15.18	AGCO Power Tier 4F - Cab version - PowerShuttle/Trailer connector (SAE)	1-400
1.3.15.19	AGCO Power Tier 4F - Cab version - PowerShuttle/Work lights	1-401
1.3.15.20	AGCO Power Tier 4F - Cab version - PowerShuttle/Power socket (ISO)	1-402
1.3.15.21	AGCO Power Tier 4F - Cab version - PowerShuttle/Power socket (SAE)	1-403
1.3.15.22	AGCO Power Tier 4F - Cab version - PowerShuttle/Transmission	1-404
1.3.15.23	AGCO Power Tier 4F - Cab version - PowerShuttle/Transmission 2	1-405
1.3.15.24	AGCO Power Tier 4F - Cab version - PowerShuttle/Earth	1-406
1.3.16	Hydraulics diagram	1-407
1.4	Adjustments, bleeding and calibrations	1-411
1.4.1	Bleeding	1-411
1.4.1.1	Bleeding the main brake system	1-411
1.4.1.2	Bleeding the trailer brake circuit	1-412
1.4.2	Calibrations	1-413
1.4.2.1	List of calibration procedures	1-413
1.4.2.2	Calibrating the clutch pedal	1-413
1.4.2.3	Forward speed calibration	1-414
1.4.2.4	Calibrating the linkage controls - version with cab	1-415
1.4.2.5	PowerShuttle transmission calibration	1-417
1.4.2.6	PowerShuttle transmission calibration errors	1-418

1.4.2.7	Calibrating the rear linkage - version without cab and standard linkage console	1-419
1.4.2.8	Linkage calibration faults	1-421
2	Separation of assemblies	2-1
2.1	Engine cover	2-3
2.1.1	Removing/refitting the bonnet	2-3
2.2	Rear fenders	2-4
2.2.1	Removing/refitting the rear fenders	2-4
2.3	Seat	2-8
2.3.1	Removing/refitting the seat	2-8
2.4	Platform	2-9
2.4.1	Removing/refitting the platform	2-9
2.5	Operator environment	2-14
2.5.1	Removing the cab	2-14
2.5.2	Refitting the cab	2-18
2.6	Four-wheel drive front axle	2-23
2.6.1	Removing/refitting the 4WD front axle	2-23
2.7	Arch	2-26
2.7.1	Removing/refitting the ROPS	2-26
2.8	Power take-off cover plate	2-29
2.8.1	Removing/refitting the power take-off cover plate	2-29
2.9	Engine - Front cradle	2-31
2.9.1	Removing/refitting the engine — front cradle	2-31
2.10	Engine - Gearbox	2-35
2.10.1	Removing and refitting the engine without SCR Technology - Gearbox	2-35
2.10.2	Removing/Refitting engine - gearbox assembly with SCR Technology	2-39
2.11	Gearbox - Rear axle	2-46
2.11.1	Removing/refitting the gearbox — rear axle assembly	2-46
2.12	PTO unit	2-53
2.12.1	Removing/refitting the power take-off unit	2-53
3	Engine	3-1
3.1	Simpson engine	3-3
3.1.1	General	3-3
3.1.1.1	General	3-3
3.1.1.2	Principles of operation	3-5
3.1.2	Layout of components	3-15
3.1.2.1	Layout of components	3-15
3.1.3	Adjustments, bleeding and calibration	3-17
3.1.3.1	Checking and adjusting the valve clearance	3-17
3.1.3.2	Timing adjustment	3-18
3.1.4	Disassembly/reassembly	3-19
3.1.4.1	Rocker arm cover	3-19
3.1.4.2	High-pressure pipes (common rail – injector)	3-21
3.1.4.3	High-pressure pipes (common rail – pump)	3-22
3.1.4.4	Injection system high-pressure pump (CB18)	3-23
3.1.4.5	Injectors	3-30
3.1.4.6	Fan	3-31
3.1.4.7	Cooling pump	3-31
3.1.4.8	Front bearing seal	3-34
3.1.4.9	Engine flywheel and front bearing seal	3-38
3.1.4.10	Oil sump	3-43
3.1.4.11	Oil pump	3-44
3.1.4.12	Inlet manifold	3-45

3.1.4.13 Exhaust manifold	3-47
3.1.4.14 Rocker arm rail	3-49
3.1.4.15 Valve springs	3-51
3.1.4.16 Valve stem seals	3-52
3.1.4.17 Cylinder head gasket	3-53
3.1.4.18 Control valves	3-58
3.1.4.19 Inlet system	3-60
3.1.4.20 Timing gear and housing	3-64
3.1.4.21 Camshaft	3-67
3.1.4.22 Pistons and connecting rods	3-70
3.1.4.23 Crankshaft	3-74
3.1.4.24 Liners	3-78
3.1.5 Service tools	3-80
3.1.5.1 Simpson engine	3-80
3.2 AGCO Power Tier 2/Tier 3 engine	3-85
3.2.1 Introduction	3-85
3.2.1.1 Safety instructions	3-85
3.2.1.2 To the user	3-86
3.2.1.3 Engine construction	3-90
3.2.2 Specifications	3-100
3.2.2.1 Technical data	3-100
3.2.2.2 Tightening torques	3-107
3.2.2.3 Liquid quality requirements	3-109
3.2.2.4 Terminal diagram for CV54 ECU	3-114
3.2.2.5 Terminal diagram for C63 ECU	3-117
3.2.3 Maintenance	3-119
3.2.3.1 Cylinder block	3-119
3.2.3.2 Cylinder head	3-122
3.2.3.3 Valve mechanism	3-127
3.2.3.4 Crankshaft	3-131
3.2.3.5 Connecting rods and pistons	3-134
3.2.3.6 Counterbalance in 4 cylinder engines	3-139
3.2.3.7 Timing gear assembly	3-141
3.2.3.8 Lubrication system	3-144
3.2.3.9 Cooling system	3-146
3.2.3.10 Air control system maintenance	3-148
3.2.3.11 Fuel system	3-151
3.2.3.12 Fuel system	3-157
3.2.3.13 Engine control system	3-165
3.2.3.14 Sensors of the engine	3-169
3.3 AGCO Power Tier 4F engine	3-170
3.3.1 Introduction	3-170
3.3.1.1 Safety instructions	3-170
3.3.1.2 To the user	3-171
3.3.1.3 Engine construction	3-174
3.3.2 Specifications	3-190
3.3.2.1 Technical data	3-190
3.3.2.2 Tightening torques	3-197
3.3.2.3 Special tools	3-199
3.3.2.4 Liquid quality requirements	3-207
3.3.2.5 Terminal diagram	3-212
3.3.3 Maintenance	3-215
3.3.3.1 Cylinder block	3-215
3.3.3.2 Cylinder head	3-218
3.3.3.3 Valve mechanism	3-223
3.3.3.4 Crankshaft	3-227
3.3.3.5 Connecting rods and pistons	3-230
3.3.3.6 Counterbalance in 4 cylinder engines	3-235