

Massey Ferguson®
8816 / 8824 / 8824-70cm
Planter

WORKSHOP SERVICE MANUAL
4283380M1 A Rev.

CONTENTS

GENERAL INFORMATION	01
ROW UNIT	02
DRIVE TRANSMISSION.....	03
AIR SYSTEM	04
HYDRAULICS	05
ELECTRICAL	06
FRAME	07
TROUBLESHOOTING	08
FERTILIZER SYSTEM	09
CONSOLES AND MONITORS.....	10

Massey Ferguson®

8816 / 8824 / 8824-70cm Planter

WORKSHOP SERVICE MANUAL 4283380M1

01 - General Information

Contents

GENERAL INFORMATION	
General Information	01-1
Serial Number Plate Location	01-2
SAFETY	
Safety Alert Symbol	01-3
Safety Messages	01-3
Informational Messages	01-4
Safety Signs	01-4
General Operation and Service	01-5
Operating	01-5
Agricultural Chemicals	01-6
Transporting	01-6
Servicing	01-7
SPECIFICATIONS	
8816-30 in / 8824-30 in	01-9
Frame	01-9
Tires and Wheels	01-9
8816	01-9
8824	01-9
Markers (Optional)	01-10
Row Units	01-10
Air System	01-10
Hydraulic System	01-10
Shear Pins	01-11
Electronic Seed Drive Controller	01-11
Fuse	01-11
Approximate Shipping Weights	01-11
8824-70cm	01-12
Frame	01-12
Tires and Wheels	01-12
8824-70cm	01-12
Markers	01-12
Row Units	01-13
Air System	01-13
Hydraulic System	01-13
Shear Pins	01-13
Monitor	01-13
Fuse	01-14
Approximate Shipping Weights	01-14
FIELD OPERATIONS AND ADJUSTMENTS	

Contents

Tractor Preparation	01-15
Recommended Tractor Horsepower	01-15
Recommended Tractor Horsepower With Fertilizer Openers	01-15
Wheel Tread Spacing	01-15
Tractor PTO	01-16
Tire Inflation	01-16
Front Weights	01-16
Hydraulic Requirements	01-16
Electrical Requirements	01-16
Connecting the Planter to the Tractor	01-16
Three-point Hitch	01-16
Drawbar Hitch	01-18
Hydraulic Lines	01-18
Pump Fluid	01-19
Control Box Switches	01-21
Operating Notes	01-21
Folding and Unfolding the Planter	01-22
Safety	01-22
Folding Procedure	01-23
Unfolding Procedure	01-24
Markers	01-26
Operation	01-26
Sequence Valve	01-26
Position Switch	01-27
Shear Bolts	01-27
Seed Recommendations	01-27
Initial Pressure Settings	01-28
Liquid Fertilizer	01-29
Tire Pressure and Radius - Piston Pump Drive	01-29
Piston Pump Chain	01-29
Distribution to Openers	01-30
Check Valve Orifices	01-31
Checking Application Rate	01-32
Piston Pump Rate Chart - Double Chain	01-32
Piston Pump Rate Chart - Single Chain	01-33
Piston Pump Slide Chart - Ground Drive	01-34
Fertilizer Openers	01-35
Double-Disc Openers	01-35
Single-Disc Openers	01-35
General Opener Adjustments	01-36
Spacing Adjustment	01-36
Vertical Alignment	01-36
Depth Adjustment	01-36
Swivel Adjustment	01-37
Spring Tension Adjustment	01-37
Application Rate (non-CE)	01-38
Application Rate	01-38
Checking Application Rate	01-39
Insecticide Rate Chart - Clay Granules	01-40
Insecticide Rate Chart - Sand Granules	01-41
Herbicide Rate Chart	01-42
Application Rate (CE)	01-43
Application Rate	01-43
Checking Application Rate	01-43
Insecticide Rate	01-44
Approximate rate in kg/hectare @ 8 mph with 18 cm or 36 cm spreaders	01-44
Insecticide Rate Chart - Sand Granules	01-45
Approximate rate in kg/hectare @ 8 mph with 18 cm or 36 cm spreaders	01-45
Herbicide Rate Chart	01-46
Approximate rate in kg/hectare @ 8 mph with 18 cm or 36 cm spreaders	01-46
ISOBUS Planter Controller	01-47
ISOBUS Planter Controller	01-47
Component Service	01-47

Contents

Implement Switch	01-47
Implement Switch Procedure	01-47
Priming the Hydraulic Circuits	01-48
Frame Control Box	01-48
Radar Device	01-48
Radar Sensor	01-49
Test Button	01-50
Test Switch Storage Tube	01-50
Torque Values For Standard Bolts	01-52
Special Torque Values	01-52
Torque Values For Metric Bolts	01-53
INSTALLATION INSTRUCTIONS	
Installation Instructions	01-55
INDEX	01-57

GENERAL INFORMATION

GENERAL INFORMATION



FIG. 1

FIG. 1: Model 8824 Forward Fold Planter with Central Fill System.

8800 Series Forward Fold Planters are designed, built and tested to make sure high quality, maximum strength and long service life. All the models feature positive air metering and hydraulic, or contact tire mechanical seed drive for accurate seed spacing.

The Central Fill System planter is designed for planting corn, soybeans, milo, popcorn, and oil crop sunflowers.

8816-30	16 Row 30 inch Forward Fold Planter
8824-30	24 Row 30 inch Forward Fold Planter
8824-70cm	24 Row 70 cm Forward Fold Planter

 **WARNING:** Pictures in this manual can show protective shields and guards opened or removed for illustration purposes. BE SURE ALL SHIELDS AND GUARDS ARE IN PLACE DURING OPERATION.

This manual was prepared from the latest information available at publication time. The company reserves the right to make changes at any time without notice or obligation.

General Information

SERIAL NUMBER PLATE LOCATION

FIG. 2: The serial number plate (1) is found on the top of the left end of the left-hand wing frame.

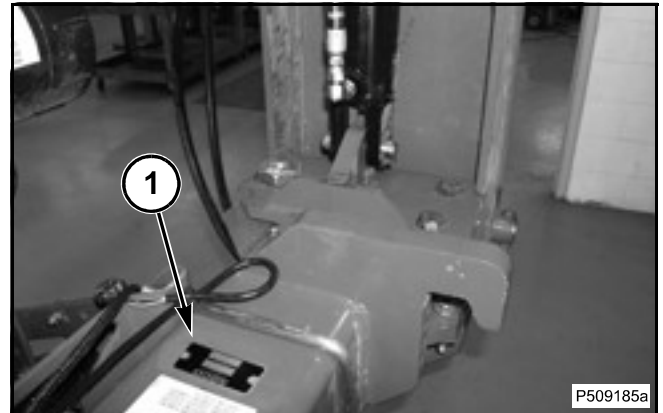


FIG. 2

SAFETY

SAFETY ALERT SYMBOL

FIG. 3: The safety alert symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED!

Look for the safety alert symbol both in this manual and on safety signs on this machine. The safety alert symbol will direct your attention to information that involves your safety and the safety of others.



FIG. 3

SAFETY MESSAGES

FIG. 4: The words DANGER, WARNING or CAUTION are used with the safety alert symbol. Learn to recognize these safety alerts and follow the recommended precautions and safety practices.



DANGER: Indicates an imminently hazardous situation that, if not avoided, will result in DEATH OR VERY SERIOUS INJURY.



WARNING: Indicates a potentially hazardous situation that, if not avoided, could result in DEATH OR SERIOUS INJURY.



CAUTION: Indicates a potentially hazardous situation that, if not avoided, may result in MINOR INJURY.



FIG. 4

Safety

INFORMATIONAL MESSAGES

The words IMPORTANT and NOTE are not related to personal safety, but are used to give additional information and tips for operating or servicing this equipment.

IMPORTANT: Identifies special instructions or procedures which, if not strictly observed, could result in damage to or destruction of the machine, process, or its surroundings.

NOTE: Identifies points of particular interest for more efficient and convenient repair or operation.

SAFETY SIGNS



WARNING: DO NOT remove or obscure safety signs. Replace any safety signs that are not readable or are missing. Replacement signs are available from your dealer in the event of loss or damage. The actual location of the safety signs is illustrated at the end of this section.

If a used machine has been purchased, make sure all safety signs are in the correct location and can be read.

Replace any safety signs that can not be read or are missing. Replacement safety signs are available from your dealer.