

Massey Ferguson®

8831
Planter

WORKSHOP SERVICE MANUAL 4283396M1

CONTENTS

GENERAL INFORMATION	01
ROW UNIT	02
DRIVE TRANSMISSION.....	03
AIR SYSTEM	04
HYDRAULICS	05
ELECTRICAL	06
FRAME	07
TROUBLESHOOTING	08
CONSOLES AND MONITORS	09

Massey Ferguson®

8831 Planter

WORKSHOP SERVICE MANUAL 4283396M1

01 - General Information

Contents

GENERAL INFORMATION	
General Information	01-1
Serial Number Plate Location	01-2
SAFETY	
Safety Alert Symbol	01-3
Safety Messages	01-3
Informational Messages	01-4
Safety Signs	01-4
General Operation And Service	01-5
Operating	01-5
Agricultural Chemicals	01-6
Transporting	01-6
Servicing	01-7
SPECIFICATIONS	
Specifications	01-9
8831	01-9
Frame	01-9
Tires and Wheels	01-9
Markers	01-9
Row Units	01-10
Air System	01-10
Tractor Requirements	01-10
Hydraulic System	01-10
Shear Pins	01-11
Electronic Seed Drive Controller	01-11
Frame Fold Control	01-11
Approximate Shipping Weights	01-11
FIELD OPERATIONS AND ADJUSTMENTS	
Tractor Preparation	01-13
General	01-13
Recommended Tractor Horsepower	01-13
Wheel Tread Spacing	01-13
Electrical Requirements	01-13
Tractor Preparation	01-14
Tractor PTO	01-14
Tire Inflation	01-14
Front Weights	01-14
Hydraulic Requirements	01-14
Planter Preparation	01-14
Lubrication	01-14

Contents

Bolt Torque	01-14
Tire Inflation	01-14
Markers	01-14
Chains	01-14
Seed Discs	01-14
Hydraulic Seeding Monitor	01-14
Connecting the Planter to the Tractor	01-15
Hydraulic Hose Connections	01-16
Seed Meter Blower/Meter Drive Hoses	01-18
Adjusting Tractor Remote Valve Flow	01-18
Hitch Height	01-19
Hitch Height Adjustment	01-19
Disconnecting the Planter from the Tractor	01-19
Frame Control System	01-22
Control Box Switches	01-22
Operating Notes	01-23
Raise and Lower	01-23
Raise Procedure	01-23
Lower Procedure	01-23
Folding And Unfolding	01-24
General	01-24
Safety	01-24
Folding Procedure	01-24
Unfolding Procedure	01-25
Markers	01-27
Operation	01-27
Marker Sequence Valve	01-27
Marker Position Switch	01-28
Tri-fold Breakaway Marker	01-28
Shear Bolts	01-28
Split row Units	01-29
General	01-29
Split Row Unit Disengagement	01-29
Split Row Unit Engagement	01-30
Planting Rates	01-31
Wheat Conversion Chart	01-31
Checking Population	01-31
Initial Pressure Settings	01-33
Seed Disc Identification Chart	01-34
Large Bean Disc	01-36
Snap Bean Disc	01-36
Treated Seed	01-36
Seed Recommendations	01-37
Chemical Attachment	01-38
General	01-38
Cleaning Hoppers and Meters	01-39
Application Rate	01-39
Checking Application Rate	01-39
Insecticide Rate Chart - Clay Granules	01-40
Approximate rate in lb/acre @ 5 mph with 7 inch or 14 inch banders	01-40
Narrow Row Calculations	01-40
Insecticide Rate Chart - Sand Granules	01-41
Approximate rate in lb/acre @ 5 mph with 7 inch or 14 inch banders	01-41
Narrow Row Calculations	01-41
Herbicide Rate Chart	01-42
Approximate rate in lb/acre @ 5 mph with 7 inch or 14 inch banders	01-42
Narrow Row Calculations	01-42
General Maintenance	01-43
Beginning of Day	01-43
End of Day	01-43
Beginning of Season	01-43
End of Season	01-43
Lubrication Chart	01-44

Contents

Clutch Alignment	01-45
Hydraulic Drive	01-45
Radar Device	01-45
ISOBUS Planter Controller	01-45
Test Button	01-46
Control Installation	01-46
Test Switch Storage Tube	01-46
Bolt Torque Values	01-48
Special Torque Values	01-48
Metric Bolts	01-49
INSTALLATION INSTRUCTIONS	
Installation Instructions	01-51
INDEX	01-53

GENERAL INFORMATION

GENERAL INFORMATION

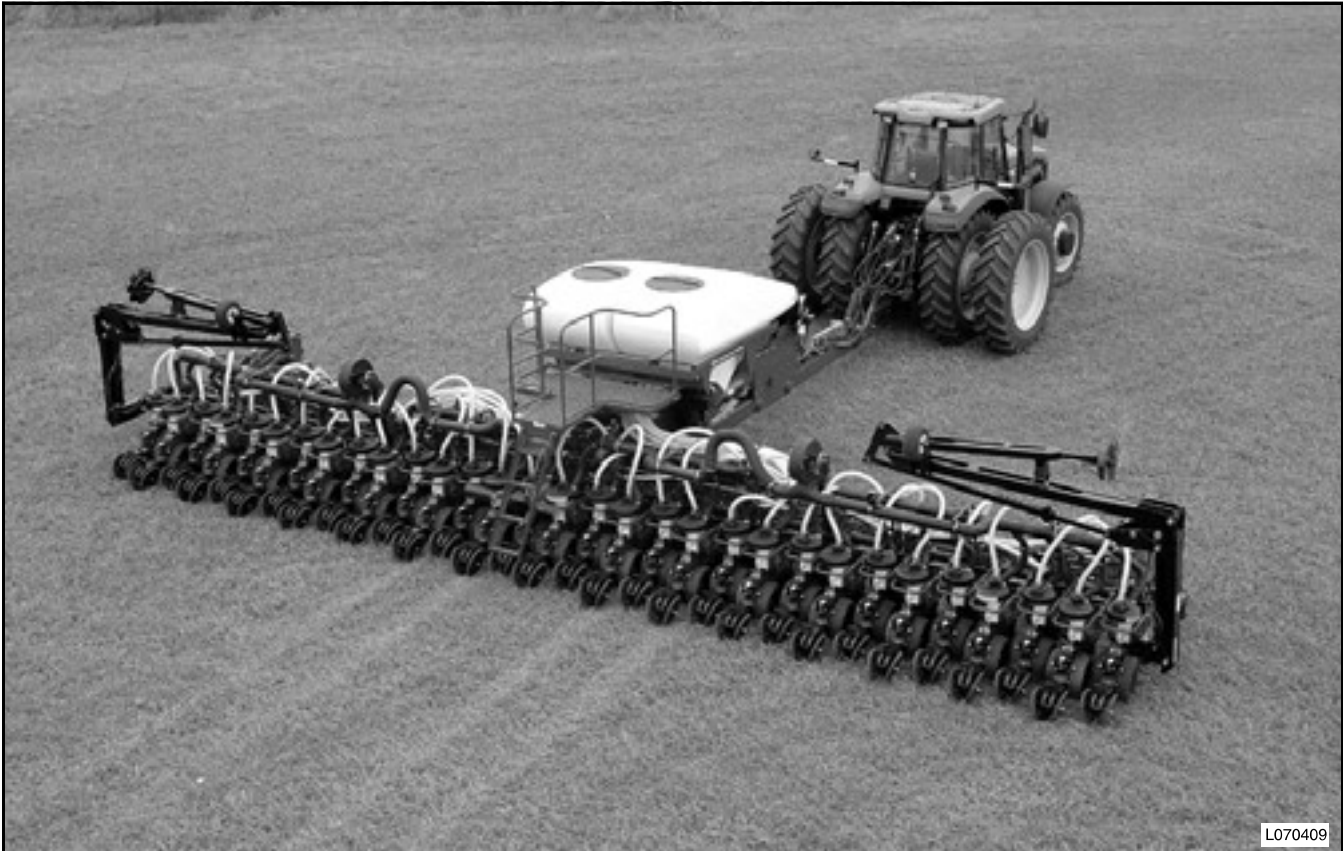


FIG. 1

FIG. 1: The Model 8831 31-Row Narrow Transport Forward Fold with Central Fill System.

8831 Series Narrow Transport Forward Fold Planters are designed, built and tested to make sure high quality, maximum strength and long service life. All models feature positive air metering and hydraulic seed drive for accurate seed spacing.

The Central Fill System planter is designed for planting corn, soybeans, milo, popcorn, and oil crop sunflowers.

8831	31-Row 15 inch Narrow Transport Forward Fold Planter
------	--

 **WARNING:** Pictures in this manual can show protective shields and guards opened or removed for illustration purposes. **BE SURE ALL SHIELDS AND GUARDS ARE IN PLACE DURING OPERATION.**

This manual was prepared from the latest information available at publication time. The Company reserves the right to make changes at any time without notice or obligation.

General Information

SERIAL NUMBER PLATE LOCATION

FIG. 2: The serial number plate (1) is found on the left-hand side of the hitch.

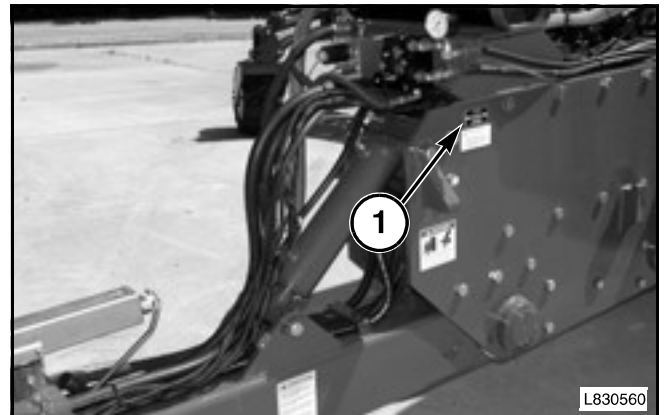


FIG. 2

SAFETY

SAFETY ALERT SYMBOL

FIG. 3: The safety alert symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED!

Look for the safety alert symbol both in this manual and on safety signs on this machine. The safety alert symbol will direct your attention to information that involves your safety and the safety of others.



FIG. 3

SAFETY MESSAGES

FIG. 4: The words DANGER, WARNING or CAUTION are used with the safety alert symbol. Learn to recognize these safety alerts and follow the recommended precautions and safety practices.



DANGER: Indicates an imminently hazardous situation that, if not avoided, will result in DEATH OR VERY SERIOUS INJURY.



WARNING: Indicates a potentially hazardous situation that, if not avoided, could result in DEATH OR SERIOUS INJURY.



CAUTION: Indicates a potentially hazardous situation that, if not avoided, may result in MINOR INJURY.



FIG. 4

Safety

INFORMATIONAL MESSAGES

The words IMPORTANT and NOTE are not related to personal safety, but are used to give additional information and tips for operating or servicing this equipment.

IMPORTANT: Identifies special instructions or procedures which, if not strictly observed, could result in damage to or destruction of the machine, process, or its surroundings.

NOTE: Identifies points of particular interest for more efficient and convenient repair or operation.

SAFETY SIGNS



WARNING: DO NOT remove or obscure safety signs. Replace any safety signs that are not readable or are missing. Replacement signs are available from your dealer in the event of loss or damage. The actual location of the safety signs is illustrated at the end of this section.

If a used machine has been purchased, make sure all safety signs are in the correct location and can be read.

Replace any safety signs that can not be read or are missing. Replacement safety signs are available from your dealer.