

MASSEY FERGUSON

MF 9000

Series Planters

Models: 9202 / 9222



SERVICE MANUAL

FROM MASSEY FERGUSON

Massey Ferguson®

9202 / 9222

Planter

SERVICE MANUAL

4283528M1

CONTENTS

GENERAL INFORMATION	01
ROW UNIT	02
ELECTRICAL	03
FERTILIZER AND CHEMICAL SYSTEMS	04
HYDRAULIC	05
MAIN FRAME	06
DRIVE CLUTCH	07
SECTION CONTROL	08
CONSOLE	09
ADJUSTMENTS	10
SEED METER AIR SYSTEM	11
TROUBLESHOOTING	12
INDEX	13

NOTES

Massey Ferguson®

9202 / 9222

Planter

SERVICE MANUAL

4283528M1

01 - General Information

Contents

GENERAL INFORMATION

General	01-3
Serial Number Plate Location	01-4
Serial Number Description	01-4
Safety Information	01-5
Preparation	01-5
Safety Alert Symbol	01-5
Safety Messages	01-5
Informational Messages	01-6
Safety Signs	01-6
A Word To The Operator	01-7
Wheel Lift Cylinder Stops	01-8
Marker Lockup Valves	01-9
Wing Latches	01-10
Top Link - Flex Frame	01-11
Servicing	01-12
General Operation and Service	01-12
General Maintenance	01-20
Tire Safety	01-21
Adjusting the Hitch	01-21
Drive Belts	01-22
Banded Drive Belt	01-22
Maintenance of Belts	01-23
Belt Changing Guides	01-24
Belt Sheave Alignment	01-26
Belt Run In Procedure	01-26
Belt Troubleshooting	01-27
Belt Problem and Wear Guide	01-27
Belt Speed Calculation Formulas	01-40
Roller Chains	01-41
Inspection of Drive Chains and Sprockets	01-41
Drive Chain Adjustment and Tightening	01-42
Drive Chain Sprocket and Idler Alignment	01-43
Drive Chain Elongation and Sprocket Wear	01-44
Normal Tooth Wear	01-45
Not Normal Tooth Wear	01-45
Worn Chain on New Sprockets	01-45
Drive Chain Service Tips	01-46
Chain Replacement	01-47
Cleaning and Lubricating Chains	01-48
Drive Chain Lubrication	01-48
Drive Chain Lubricants	01-48
Good Drive Chain Lubrication	01-49

Contents

Roller Chain Drive Troubleshooting Guide	01-50
Electrical	01-53
General Information	01-53
Hydraulics	01-57
Hydraulic Cylinder Inspection	01-57
Tires and Wheels	01-58
Tire Pressure	01-58
Removing Wheel from machine and Removing Tire.	01-58
Tire Mounting	01-58
Maintenance of Tires	01-59
Bearing Replacement (Eccentric Self-Locking Collar)	01-60
Gib Key Removal and Installation	01-61
Torque Charts	01-62
Standard Torque Specifications	01-62
Metric Capscrew Markings and Torque Values	01-63
Metric Conversions	01-64
Fractions, Decimals, and Millimeters Conversion Chart	01-65
Decimal Equivalents of 8ths, 16ths, 32nds, and 64ths	01-70
Decimal Equivalents Of Letter Size Drills	01-71
Decimal Equivalents of Number Size Drills	01-72
Tap Drill Sizes - S.A.E. & Metric	01-74
American Standard Pipe Thread and Tap Drill Sizes	01-78
Electrical Formulas	01-79
Amperes (Current Flow)	01-79
Volts (Electromotive Force)	01-79
Ohms (Resistance)	01-79
Watts	01-79
Horsepower	01-79
Geometrical Formulas	01-79
Circumference of a Circle	01-79
Area of a Circle	01-79
Volume of a Cylinder	01-79
Volume of a Sphere	01-79
Area of a Triangle	01-79
Metric to Imperial and Imperial to Metric Conversion Factors	01-79
Measures of Temperature	01-79
Measures of Power	01-79
Measures of Pressure	01-79
Measures of Length	01-80
Measures of Area	01-80
Measures of Volume (Dry)	01-81
Measures of Volume (Liquid)	01-81
Measures of Mass (Weight)	01-82
Measures of Effort (Torque)	01-82
Reference Tables	01-83
Installation Instructions	01-84
Specifications	01-85
Frame	01-85
9202 Rigid	01-85
9222 Flex	01-85
Row Units	01-86
Hydraulic System	01-86
Air System	01-86
Section Control Switch Box	01-86
Pneumatic Down Pressure	01-87
Transmissions	01-87
Shear Pins	01-87
Monitor	01-87
Highway Lamps	01-87
Approximate Shipping Weights	01-87
Tractor Requirements	01-87
Maximum Speed	01-88

GENERAL INFORMATION

GENERAL



FIG. 1

FIG. 1: Model 9222 Horizontal Wing Fold Planter

Horizontal Wing Fold Planters use forward folding frame designs, providing narrow transport widths for pull-type 12-row models. The planter is a good selection for customers with no-till or reduced-tillage operations. All models are available with rigid or flexible frames.

The models include:

Model 9202	12-Row, 30 inch	Rigid Frame
Model 9222	12-Row, 30 inch	Flex Frame

The planters use row units with positive air metering for accurate seed spacing.

This manual contains information necessary for the correct adjustment and safe operation of your planter. Read the manual carefully.



WARNING: Pictures in this manual may show protective shields and guards opened or removed for illustration purposes. Be sure all shields and guards are in place during operation.

This manual was prepared from the latest information available at publication time. The Company reserves the right to make changes at any time without notice or obligation.

General Information

SERIAL NUMBER PLATE LOCATION

FIG. 2: The serial number plate (1) is located on the left end of the frame.

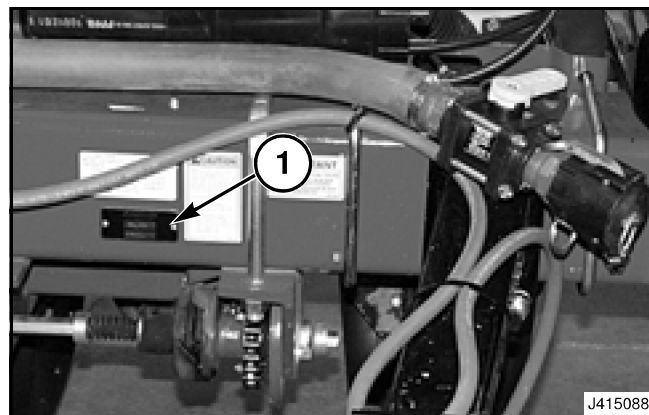


FIG. 2

Serial Number Description

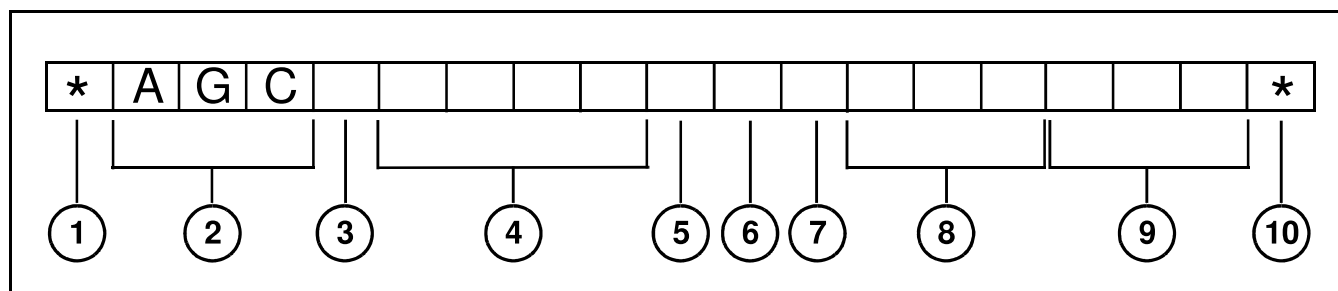


FIG. 3

FIG. 3: Description of the serial number for model year 2010 and up.

- (1) Beginning symbol
- (2) World Manufacturer Code
- (3) Brand Code
- (4) Model Identifier (Model number)
- (5) Check Letter (0 or used if model identifier is five digits)
- (6) Model Year Code (A=2010, B=2011, C=2012, and on)
- (7) Plant Code
- (8) Family Code
- (9) Unit Number for the Year
- (10) Ending symbol

NOTE: For serial number breaks in this manual, only the information from the model year code and following will be given.

SAFETY INFORMATION



This is the safety alert symbol. The safety alert symbol will direct your attention to information that involves your safety.

Read and understand all safety information in the machine operator's manual before continuing with these instructions.

PREPARATION

Clean oil, dirt, and crop material from the area on the machine where the work is to be done.

SAFETY ALERT SYMBOL

FIG. 4: The safety alert symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED!

Look for the safety alert symbol both in this manual and on safety signs on this machine. The safety alert symbol will direct your attention to information that involves your safety and the safety of others.



FIG. 4

SAFETY MESSAGES

FIG. 5: The words DANGER, WARNING or CAUTION are used with the safety alert symbol. Learn to recognize these safety alerts and follow the recommended precautions and safety practices.



DANGER: Indicates an imminently hazardous situation that, if not avoided, will result in DEATH OR VERY SERIOUS INJURY.



WARNING: Indicates a potentially hazardous situation that, if not avoided, could result in DEATH OR SERIOUS INJURY.



CAUTION: Indicates a potentially hazardous situation that, if not avoided, may result in MINOR INJURY.



FIG. 5

General Information

INFORMATIONAL MESSAGES

The words IMPORTANT and NOTE are not related to personal safety, but are used to give additional information and tips for operating or servicing this equipment.

IMPORTANT: Identifies special instructions or procedures which, if not strictly observed, could result in damage to or destruction of the machine, process, or its surroundings.

NOTE: Identifies points of particular interest for more efficient and convenient repair or operation.

SAFETY SIGNS



WARNING: DO NOT remove or obscure safety signs. Replace any safety signs that are not readable or are missing. Replacement signs are available from your dealer in the event of loss or damage. The actual location of the safety signs is illustrated at the end of this section.

If a used machine has been purchased, make sure all safety signs are in the correct location and can be read.

Replace any safety signs that can not be read or are missing. Replacement safety signs are available from your dealer.