


Workshop Service Manual

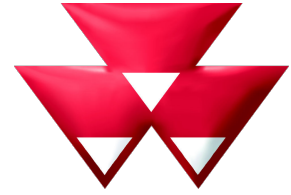

MASSEY FERGUSON

9222VE Planter

9222 VE



**CALIFORNIA
Proposition 65 Warning**

WARNING: Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, or other reproductive harm.

WARNING: Battery posts, terminals and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm. Wash hands after handling.

9222VE Planter

1	General	1-1
1.1	General information	1-3
1.1.1	Introduction to this service manual	1-3
1.1.2	Units of measurement	1-3
1.1.3	Table of contents	1-3
1.1.4	Page numbers	1-3
1.1.5	Intended use	1-3
1.1.6	Proper disposal of waste	1-3
1.2	Safety	1-5
1.2.1	Safety symbol	1-5
1.2.2	Safety messages	1-5
1.2.3	Information messages	1-5
1.2.4	Safety signs	1-5
1.2.5	A word to the operator	1-6
1.2.6	The service manual	1-7
1.2.7	Operation	1-7
1.2.7.1	Prepare for operation	1-7
1.2.7.2	General information	1-7
1.2.7.3	Personal protective equipment	1-8
1.2.7.4	Seat instructions	1-9
1.2.7.5	Shield and guards	1-9
1.2.7.6	Exhaust warning	1-10
1.2.7.7	Flying debris	1-10
1.2.7.8	Handrails	1-10
1.2.7.9	Agricultural chemicals	1-10
1.2.8	Travel on public roads	1-11
1.2.9	Maintenance	1-12
1.2.9.1	General maintenance information	1-12
1.2.9.2	Fire prevention and first aid	1-13
1.2.9.3	High pressure leaks	1-14
1.2.9.4	Tire safety	1-15
1.2.9.5	Replacement parts	1-15
1.3	Cylinder stops	1-16
1.3.1	Wheel lift cylinder stops	1-16
1.4	Transport locks	1-17
1.4.1	Wing latches	1-17
1.4.2	Marker lockup valves	1-17
1.4.3	Transport pins	1-18
1.4.4	Top link for the flex frame	1-18
1.5	Machine identification	1-19
1.5.1	Serial number plate	1-19
1.5.2	Serial number description	1-19
1.6	Main machine components	1-21
1.7	Specifications	1-22
1.7.1	Frame specifications	1-22
1.7.2	Tire specifications	1-22
1.7.3	Machine dimensions	1-22
1.7.4	Marker specifications	1-23
1.7.5	Row unit specifications	1-23
1.7.6	Air system specifications	1-23
1.7.7	Hydraulic system specifications	1-23

1.7.8	Hydraulic flow requirements	1-24
1.7.9	Special bolt torques	1-24
1.7.10	Approximate shipping weights	1-24
1.7.11	Tractor requirements	1-24
1.7.12	20/20 seedsense terminal specifications	1-25
1.8	Bolt torque values	1-26
2	Frame	2-1
2.1	Planter troubleshooting	2-3
2.2	Inner wing	2-5
2.2.1	Remove the inner wing	2-5
2.2.2	Install the inner wing	2-6
2.3	Outer wing	2-7
2.3.1	Remove the outer wing	2-7
2.3.2	Install the outer wing	2-8
2.4	Install the hitch	2-9
2.4.1	Remove the hitch	2-10
2.5	Lift wheel arm	2-11
2.5.1	Remove a lift wheel arm	2-11
2.5.2	Install a lift wheel arm	2-11
2.6	Marker	2-12
2.6.1	Remove the lower marker arm	2-12
2.6.2	Install the lower marker arm	2-12
2.6.3	Marker arm length	2-13
2.6.4	Remove the top marker arm	2-13
2.6.5	Install the top marker arm	2-15
2.6.6	Remove the marker disc	2-17
2.6.7	Install the marker disc	2-17
2.6.8	Disassemble the marker disc	2-18
2.6.9	Assemble the marker disc	2-19
2.6.10	Adjust the marker disc	2-20
3	Hydraulic system	3-1
3.1	Hydraulic troubleshooting	3-3
3.2	Hydraulic system description	3-4
3.2.1	Lift and lower circuit	3-4
3.2.2	Wing fold circuit	3-5
3.2.3	Markers schematic	3-6
3.2.4	Marker sequence valve circuit	3-7
3.3	Seed meter blower motor - VE	3-8
3.3.1	Vacuum settings	3-8
3.3.2	Vacuum motor operation	3-8
3.3.3	Remove the motor	3-8
3.3.4	Install the motor	3-10
3.3.5	Test the pressure to the motor	3-11
3.3.6	Check the case drain	3-12
3.4	Fold Cylinders	3-13
3.4.1	Cylinder components	3-13
3.4.2	Cylinder specifications	3-13
3.4.3	Remove the cylinder	3-13
3.4.4	Install the cylinder	3-14
3.4.5	Disassemble the cylinder	3-14
3.4.6	Inspect the cylinder assembly	3-15
3.4.7	Assemble the cylinder	3-15
3.5	Marker cylinder	3-17
3.5.1	12 row marker cylinder	3-17

3.5.2	Marker cylinder specifications	3-17
3.5.3	Remove the marker cylinder	3-17
3.5.4	Install the marker cylinder	3-18
3.5.5	Examine the cylinder assembly	3-19
3.6	Lift cylinders	3-20
3.6.1	Lift cylinder specifications	3-20
3.6.2	Remove the lift cylinders	3-20
3.6.3	Install the lift cylinders	3-21
3.6.4	Disassemble the lift cylinder	3-21
3.6.5	Inspect the cylinder	3-22
3.6.6	Assemble the lift cylinder	3-22
3.7	Leveling cylinder	3-24
3.7.1	Leveling cylinder components	3-24
3.7.2	Leveling cylinder specifications	3-24
3.7.3	Remove the levelling cylinder	3-25
3.7.4	Disassemble the leveling cylinder	3-25
3.7.5	Inspect the cylinder	3-26
3.7.6	Assemble the leveling cylinder	3-26
3.8	Marker and fold selector valve block	3-27
3.8.1	Remove the marker and fold valve block	3-27
3.8.2	Install the marker and fold valve block	3-28
3.9	Marker sequence valve	3-29
3.9.1	Remove the sequence valve	3-29
3.9.2	Install the sequence valve	3-31
3.9.3	Disassemble the sequence valve	3-32
3.9.4	Examine the sequence valve	3-33
3.9.5	Assemble the sequence valve	3-33
3.10	DeltaForce	3-35
3.10.1	Hydraulic system overview	3-36
3.10.2	Remove the load pin	3-37
3.10.3	Install the load pin	3-37
3.10.4	Remove a DeltaForce cylinder	3-38
3.10.5	Install a DeltaForce cylinder	3-38
3.10.6	Remove a DeltaForce cylinder valve	3-39
3.10.7	Install a DeltaForce cylinder valve	3-39
3.10.8	Remove/install the DeltaForce valve	3-39
3.10.9	Replace the filter in the DeltaForce valve	3-40
4	Electrical system	4-1
4.1	Basic troubleshooting information	4-3
4.1.1	Basic troubleshooting procedures	4-3
4.1.2	Tools	4-4
4.1.3	Continuity check	4-4
4.1.4	Voltage check	4-5
4.1.5	Examine a connector	4-6
4.1.6	Test for open circuits	4-6
4.1.7	Find open circuit	4-7
4.1.8	Test for short circuits	4-7
4.1.9	Test for high resistance	4-8
4.1.10	Terminal numbers	4-8
4.1.11	Dielectric grease	4-8
4.1.12	Pins and sockets	4-8
4.1.13	Replace a Packard connector	4-9
4.1.14	Replace an AMP connector	4-10
4.2	Transport lamps - non CE	4-11
4.2.1	Lamp harness	4-11
4.2.2	Examine the lighting	4-14

4.2.3	Machine lamp plug - non CE	4-15
4.2.4	Turn signal module	4-15
4.2.4.1	Remove the turn signal module	4-16
4.2.4.2	Install the turn signal module	4-17
4.2.5	Change a bulb	4-17
4.3	Lift switch - VE	4-18
4.3.1	Remove the lift switch - VE	4-18
4.3.2	Install the lift switch - VE	4-19
4.4	Modules and sensors	4-20
4.4.1	Remove the seed tubes	4-20
4.4.2	Install the seed tubes	4-20
4.4.3	Clean the seed sensors	4-21
4.4.4	Test the seed sensors	4-21
4.4.5	Test with a seed sensor tester	4-22
4.4.6	Test the seed monitor	4-22
4.5	Vacuum system	4-24
4.5.1	Tractor components	4-24
4.5.2	Status lamp for the single row module and vDrive module - VE	4-25
4.5.3	SeedSense error list - VE	4-26
4.5.4	Troubleshooting - no power to SRM(s) - VE	4-29
4.5.5	Troubleshooting - SRM(s) are red - VE	4-30
4.5.6	Troubleshooting - SRM(s) are yellow - VE	4-31
4.6	Power distribution module - VE	4-33
5	Product containment	5-1
5.1	Seed meter blower - vacuum	5-3
5.1.1	Remove the seed meter blower	5-3
5.1.2	Install the seed meter blower	5-4
5.1.3	Disassemble the seed meter blower - VE	5-5
5.1.4	Assemble the seed meter blower - VE	5-6
5.2	Air tubes	5-7
5.2.1	Clean the air tubes	5-7
6	Row units	6-1
6.1	Gauge wheels	6-3
6.1.1	Adjust the gauge wheel to opener clearance	6-3
6.1.2	Calibrate the gauge wheel depth	6-3
6.1.3	Remove the gauge wheels	6-4
6.1.4	Install the gauge wheels	6-4
6.1.5	Gauge wheel arm components	6-6
6.1.6	Disassemble the pivot for the gauge wheel arm	6-7
6.1.7	Assemble the pivot for the gauge wheel arm	6-10
6.1.8	Replace a gauge wheel tire	6-13
6.2	Opener discs	6-14
6.2.1	Replace the opener disc bearings	6-14
6.2.2	Replace the opener discs	6-15
6.2.3	Set the opener disc contact	6-16
6.3	Scraper	6-18
6.3.1	Replace a flat scraper - late production	6-18
6.4	Seed tubes	6-19
6.4.1	Remove the seed tubes	6-19
6.4.2	Install the seed tubes	6-19
6.4.3	Replace the tube guard	6-19
6.4.4	Adjust the tube clip - VE	6-20
6.4.5	Clean the seed sensors	6-20
6.5	Depth gauge	6-22

6.5.1	Remove the depth gauge	6-22
6.5.2	Install the depth gauge	6-23
6.5.3	Disassemble the depth gauge	6-25
6.5.4	Assemble the depth gauge	6-26
6.6	Single closing wheel	6-28
6.6.1	Remove the single closing wheel	6-28
6.6.2	Install the single closing wheel	6-28
6.6.3	Disassemble the single closing wheel	6-28
6.6.4	Assemble the single closing wheel	6-29
6.7	Dual closing wheels	6-30
6.7.1	Remove a dual closing wheel	6-30
6.7.2	Install a dual closing wheel	6-31
6.7.3	Replace the bearing in a cast iron closing wheel	6-31
6.7.4	Closing wheel spacing and offset	6-31
6.7.4.1	Adjust the closing wheel spacing and offset	6-31
6.7.5	Center the closing wheels	6-32
6.8	Row unit linkage	6-33
6.8.1	Remove the row unit linkage	6-33
6.8.2	Install the row unit linkage	6-34
6.9	Seed meter - VE	6-35
6.9.1	Seed meter	6-35
6.9.2	Seed meter components	6-35
6.9.3	Crop kits	6-36
6.9.3.1	Crop setup guide	6-36
6.9.3.2	Replace a crop kit	6-40
6.9.4	Check the disc shims	6-44
6.9.5	Remove a seed meter	6-46
6.9.6	Install a seed meter	6-47
6.9.7	Assemble the meter to the hopper	6-49
6.9.8	Yearly maintenance	6-50
6.9.9	Replace the vacuum seal	6-50
6.9.10	Remove the drive motor	6-51
6.9.11	Install the drive motor	6-53
6.9.12	vSet 2 troubleshooting	6-55
7	Application system	7-1
7.1	Fertilizer piston pump	7-3
7.1.1	Single piston pump lubrication	7-3
7.1.2	Single piston pump components	7-4
7.1.3	Remove the piston pump	7-5
7.1.4	Install the piston pump	7-6
7.1.5	Disassemble the piston pump	7-6
7.1.5.1	Disassemble the check valves	7-6
7.1.5.2	Disassemble the piston	7-7
7.1.5.3	Disassemble the rod packing	7-8
7.1.5.4	Disassemble the outboard crankcase	7-9
7.1.5.5	Disassemble the inboard components	7-10
7.1.5.6	Disassemble the internal crankcase	7-11
7.1.6	Assemble the piston pump	7-11
7.1.6.1	Assemble the internal crankcase	7-12
7.1.6.2	Assemble the inboard components	7-13
7.1.6.3	Assemble the outboard crankcase	7-14
7.1.6.4	Assemble the rod packing	7-15
7.1.6.5	Assemble the piston	7-16
7.1.6.6	Assemble the check valves	7-17
7.1.7	Pump drive	7-18
7.1.7.1	Remove the roller chains	7-18

7.1.7.2	Install the roller chains	7-19
7.1.7.3	Remove the pump drive assembly	7-20
7.1.7.4	Install the pump drive assembly	7-21
7.1.7.5	Disassemble the pump drive assembly	7-22
7.1.7.6	Assemble the pump drive assembly	7-23
7.1.8	Ball valves	7-24
7.1.8.1	Remove the 1.25 inch ball valve	7-25
7.1.8.2	Remove the 1.5 inch ball valve	7-26
7.1.8.3	Remove the 2 inch full port ball valve	7-26
7.1.8.4	Install the 1.25 inch ball valve	7-27
7.1.8.5	Install the 1.5 inch ball valve	7-28
7.1.8.6	Install the 2 inch full port ball valve	7-28
7.2	Flow divider valve	7-29
7.2.1	Flow divider troubleshooting	7-29
7.2.2	Remove the flow divider	7-29
7.2.3	Install the flow divider	7-30
7.2.4	Disassemble the flow divider	7-31
7.2.5	Assemble the flow divider	7-31
7.3	Double disc openers	7-32
7.3.1	Adjust the double disc opener	7-32
7.3.2	Remove the double disc opener	7-32
7.3.3	Install the double disc opener	7-33
7.3.4	Disassemble the double disc opener	7-34
7.3.5	Assemble the double disc opener	7-34
7.4	Single disc opener	7-35
7.4.1	Adjust the single disc opener depth	7-35
7.4.2	Single disc fertilizer opener troubleshooting	7-35
7.4.3	Adjust the single opener disc swivel	7-37
7.4.4	Adjust the single spring tension	7-37
7.4.5	Remove the single disc opener	7-38
7.4.6	Install the single disc opener	7-39
7.4.7	Disassemble the single disc opener	7-39
7.4.8	Assemble the single disc opener	7-41
7.5	Opener mount location	7-43
7.5.1	Opener mount location - 12 row	7-43
8	Spindles and wheels	8-1
8.1	Lift wheels	8-3
8.1.1	Remove a wheel	8-3
8.1.2	Install a wheel	8-3
8.2	Wheel bearings	8-5
8.2.1	Lubricate the wheel bearings	8-5
8.2.2	Replace the wheel bearings	8-5
9	Diagrams	9-1
9.1	Hydraulic	9-3
9.1.1	Lift and lower circuit	9-3
9.1.2	Tractor remote with DeltaForce option	9-5
9.1.3	Master tractor remotes - Precision Planting	9-7
9.2	Electrical	9-9
9.2.1	Electrical schematic - vacuum	9-11
9.2.2	20/20 SeedSense	9-13
9.2.2.1	Tractor components	9-13
10	Index	Index-1

1 General

1.1	General information	1-3
1.1.1	Introduction to this service manual	1-3
1.1.2	Units of measurement	1-3
1.1.3	Table of contents	1-3
1.1.4	Page numbers	1-3
1.1.5	Intended use	1-3
1.1.6	Proper disposal of waste	1-3
1.2	Safety	1-5
1.2.1	Safety symbol	1-5
1.2.2	Safety messages	1-5
1.2.3	Information messages	1-5
1.2.4	Safety signs	1-5
1.2.5	A word to the operator	1-6
1.2.6	The service manual	1-7
1.2.7	Operation	1-7
1.2.7.1	Prepare for operation	1-7
1.2.7.2	General information	1-7
1.2.7.3	Personal protective equipment	1-8
1.2.7.4	Seat instructions	1-9
1.2.7.5	Shield and guards	1-9
1.2.7.6	Exhaust warning	1-10
1.2.7.7	Flying debris	1-10
1.2.7.8	Handrails	1-10
1.2.7.9	Agricultural chemicals	1-10
1.2.8	Travel on public roads	1-11
1.2.9	Maintenance	1-12
1.2.9.1	General maintenance information	1-12
1.2.9.2	Fire prevention and first aid	1-13
1.2.9.3	High pressure leaks	1-14
1.2.9.4	Tire safety	1-15
1.2.9.5	Replacement parts	1-15
1.3	Cylinder stops	1-16
1.3.1	Wheel lift cylinder stops	1-16
1.4	Transport locks	1-17
1.4.1	Wing latches	1-17
1.4.2	Marker lockup valves	1-17
1.4.3	Transport pins	1-18
1.4.4	Top link for the flex frame	1-18
1.5	Machine identification	1-19
1.5.1	Serial number plate	1-19
1.5.2	Serial number description	1-19
1.6	Main machine components	1-21
1.7	Specifications	1-22
1.7.1	Frame specifications	1-22
1.7.2	Tire specifications	1-22
1.7.3	Machine dimensions	1-22
1.7.4	Marker specifications	1-23
1.7.5	Row unit specifications	1-23
1.7.6	Air system specifications	1-23
1.7.7	Hydraulic system specifications	1-23

1.7.8	Hydraulic flow requirements	1-24
1.7.9	Special bolt torques	1-24
1.7.10	Approximate shipping weights	1-24
1.7.11	Tractor requirements	1-24
1.7.12	20/20 seedsense terminal specifications	1-25
1.8	Bolt torque values	1-26