

Massey Ferguson®
9516 / 9523 / 9524 / 9531
Planter

SERVICE MANUAL
4283529M1

CONTENTS

GENERAL INFORMATION	01
ROW UNIT	02
DRIVE TRANSMISSION.....	03
AIR SYSTEM	04
HYDRAULICS	05
ELECTRICAL	06
FRAME	07
TROUBLESHOOTING	08
CONSOLES AND MONITORS.....	09

Massey Ferguson®

9516 / 9523 / 9524 / 9531

Planter

SERVICE MANUAL

4283529M1

01 - General Information

Contents

GENERAL INFORMATION	
General	01-1
Serial Number Plate Location	01-2
SAFETY	
Safety Alert Symbol	01-3
Safety Messages	01-3
Informational Messages	01-4
Safety Signs	01-4
General Operation And Service	01-5
Operating	01-5
Agricultural Chemicals	01-6
Transporting	01-6
Servicing	01-7
SPECIFICATIONS	
GENERAL	01-9
Frame	01-9
Tires and Wheels	01-9
9516	01-9
9523	01-9
9524-20	01-10
9524-22	01-10
9524-30	01-10
9531	01-10
Markers	01-11
Row Units	01-11
Air System	01-11
Hydraulic System	01-11
Shear Pins	01-12
Electronic Seed Drive Controller	01-12
Fold Control Box Fuse	01-12
Fuse	01-12
Approximate Shipping Weights	01-12
INSTALLATION INSTRUCTIONS	
Installation Instructions	01-13
FIELD OPERATIONS AND ADJUSTMENTS	
Tractor Preparation	01-15
General	01-15

Contents

Recommended Tractor Horsepower	01-15
Wheel Tread Spacing	01-16
Remote Hydraulic Valve Requirements	01-17
Tractor Drawbar	01-17
Tractor PTO	01-17
Tire Inflation	01-17
Front Weights	01-17
Electrical Requirements	01-17
Planter Preparation	01-17
Lubrication	01-17
Bolt Torque	01-17
Tire Inflation	01-17
Markers	01-17
Chains	01-17
Seed Discs	01-17
Hydraulic Seeding Monitor	01-18
Planter Controls	01-18
Test Switch Storage Tube	01-19
Connecting the Planter To the Tractor	01-20
Procedure	01-20
PTO Hydraulic Pump	01-21
Disconnecting the Planter From the Tractor	01-22
Frame Control System	01-23
Control Box Switches	01-23
Operating Notes	01-24
Folding And Unfolding the Planter	01-24
Safety	01-24
Folding Procedure	01-25
Unfolding Procedure	01-26
Transporting the Planter	01-28
Preparation	01-28
Safety Precautions	01-28
Field	01-29
General	01-29
Before Entering the Field	01-29
In The Field	01-29
Finishing the Field	01-30
Markers	01-31
Operation	01-31
Markers - 9523 Only	01-31
Marker Cylinder Stops	01-31
Stop Storage and Shear Bolts	01-32
Seed Recommendations	01-33
Wheat Planting Rates	01-34
Wheat Conversion Chart	01-35
Other Row Widths	01-35
Seed Disc Identification Chart	01-36
Checking Population	01-39
Larger Bean Disc	01-40
Snap Bean Disc	01-40
Treated Seed	01-41
Application Rate	01-42
Checking Application Rate	01-43
Insecticide Rate Chart - Clay Granules	01-44
Approximate rate in lb/acre @ 5 mph with 7 inch or 14 inch banders	01-44
Narrow Row Calculations	01-44
Insecticide Rate Chart - Sand Granules	01-45
Approximate rate in lb/acre @ 5 mph with 7 inch or 14 inch banders	01-45
Narrow Row Calculations	01-45
Herbicide Rate Chart	01-46
Approximate rate in lb/acre @ 5 mph with 7 inch or 14 inch banders	01-46
Narrow Row Calculations	01-46
General Maintenance	01-47

Contents

Beginning of Day	01-47
End of Day	01-47
Beginning of Season	01-47
End of Season	01-48
Lubrication Chart	01-49
Frame Hydraulic System	01-50
Hydraulic Hookup	01-50
Priming the Hydraulic Circuits	01-50
Electronic Controls	01-51
General	01-51
Monitor Console or Controller	01-51
Radar Sensor	01-51
Torque Values For Standard Bolts	01-52
Special Torque Values	01-52
Torque Values For Metric Bolts	01-53
INDEX	01-55

GENERAL INFORMATION

GENERAL



FIG. 1

FIG. 1: Model 9531 31-Row Forward Fold Planter with Central Fill System.

9500 Series Forward Fold Planters are designed, built and tested to make sure high quality, maximum strength and long service life. All models feature positive air metering and hydraulic seed drive for accurate seed spacing.

The Central Fill System planter is designed for planting corn, soybeans, milo, popcorn, and oil crop sunflowers.

9516	16 Row 30 inch Forward Fold Planter
9523	23 Row 15 inch/12 Row 30 inch Forward Fold Planter
9524-20	24 Row 20 inch Forward Fold Planter
9524-22	24 Row 22 inch Forward Fold Planter
9524-30	24 Row 30 inch Forward Fold Planter
9531	31 Row 15 inch/16 Row 30 inch Forward Fold Planter

 **WARNING: Pictures in this manual can show protective shields and guards opened or removed for illustration purposes. BE SURE ALL SHIELDS AND GUARDS ARE IN PLACE DURING OPERATION.**

This manual was prepared from the latest information available at publication time. The Company reserves the right to make changes at any time without notice or obligation.

General Information

SERIAL NUMBER PLATE LOCATION

FIG. 2: The serial number plate (1) is located on the left end of the left wing frame.

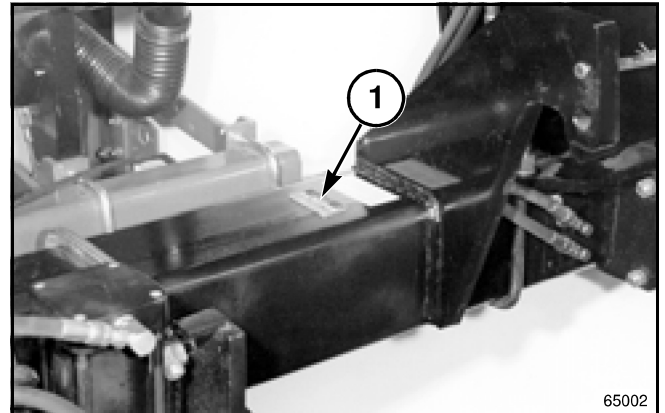


FIG. 2

SAFETY

SAFETY ALERT SYMBOL

FIG. 1: The safety alert symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED!

Look for the safety alert symbol both in this manual and on safety signs on this machine. The safety alert symbol will direct your attention to information that involves your safety and the safety of others.

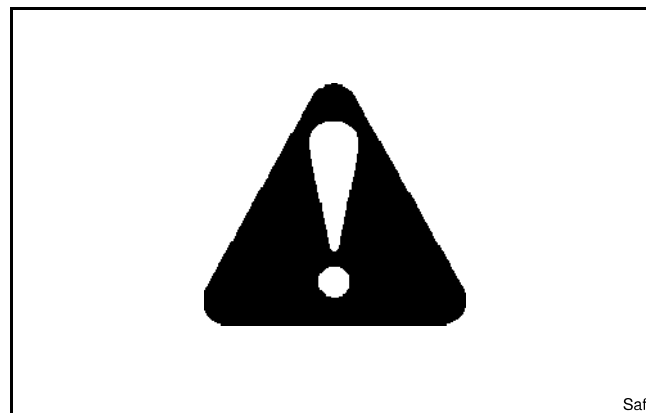


FIG. 1

SAFETY MESSAGES

FIG. 2: The words DANGER, WARNING or CAUTION are used with the safety alert symbol. Learn to recognize these safety alerts and follow the recommended precautions and safety practices.



DANGER: Indicates an imminently hazardous situation that, if not avoided, will result in DEATH OR VERY SERIOUS INJURY.



WARNING: Indicates a potentially hazardous situation that, if not avoided, could result in DEATH OR SERIOUS INJURY.



CAUTION: Indicates a potentially hazardous situation that, if not avoided, may result in MINOR INJURY.



FIG. 2

Safety

INFORMATIONAL MESSAGES

The words IMPORTANT and NOTE are not related to personal safety, but are used to give additional information and tips for operating or servicing this equipment.

IMPORTANT: Identifies special instructions or procedures which, if not strictly observed, could result in damage to or destruction of the machine, process, or its surroundings.

NOTE: Identifies points of particular interest for more efficient and convenient repair or operation.

SAFETY SIGNS



WARNING: DO NOT remove or obscure safety signs. Replace any safety signs that are not readable or are missing.

If a used machine has been purchased, make sure all safety signs are in the correct location and can be read.

Replace any safety signs that can not be read or are missing. Replacement safety signs are available from your dealer.