


Workshop Service Manual

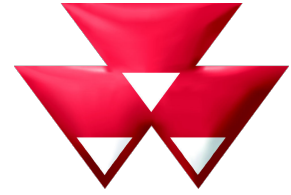

MASSEY FERGUSON

9500VER Planter

9500VER



**CALIFORNIA
Proposition 65 Warning**

WARNING: Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, or other reproductive harm.

WARNING: Battery posts, terminals and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm. Wash hands after handling.

9500VER Planter

1	General	1-1
1.1	General information	1-3
1.1.1	Introduction to this service manual	1-3
1.1.2	Units of measurement	1-3
1.1.3	Table of contents	1-3
1.1.4	Page numbers	1-3
1.1.5	Intended use	1-3
1.1.6	Proper disposal of waste	1-3
1.2	Safety	1-5
1.2.1	Safety symbol	1-5
1.2.2	Safety messages	1-5
1.2.3	Information messages	1-5
1.2.4	Safety signs	1-5
1.2.5	A word to the operator	1-6
1.2.6	The service manual	1-7
1.2.7	Operation	1-7
1.2.7.1	Prepare for operation	1-7
1.2.7.2	General information	1-7
1.2.7.3	Personal protective equipment	1-8
1.2.7.4	Seat instructions	1-9
1.2.7.5	Shield and guards	1-9
1.2.7.6	Exhaust warning	1-10
1.2.7.7	Flying debris	1-10
1.2.7.8	Handrails	1-10
1.2.7.9	Agricultural chemicals	1-10
1.2.8	Travel on public roads	1-11
1.2.9	Maintenance	1-12
1.2.9.1	General maintenance information	1-12
1.2.9.2	Fire prevention and first aid	1-13
1.2.9.3	High pressure leaks	1-14
1.2.9.4	Tire safety	1-15
1.2.9.5	Replacement parts	1-15
1.3	Transport locks	1-16
1.3.1	Wheel lift cylinder stops	1-16
1.3.2	Wing lock pins	1-17
1.3.3	Marker lockup valves	1-17
1.4	Machine identification	1-19
1.4.1	Serial number plate	1-19
1.4.2	Serial number description	1-19
1.5	Main machine components	1-21
1.6	Specifications	1-22
1.6.1	Frame specifications	1-22
1.6.2	Tire specifications	1-22
1.6.3	Machine dimensions	1-22
1.6.4	Marker specifications	1-23
1.6.5	Row unit specifications	1-23
1.6.6	Air system specifications	1-23
1.6.7	Hydraulic system specifications	1-24
1.6.8	Hydraulic flow requirements	1-24
1.6.9	Approximate ship weights	1-24
1.6.10	Tractor requirements	1-24

1.6.11	Maximum speed	1-24
1.7	Bolt torque values	1-25
2	Frame	2-1
2.1	Planter troubleshooting	2-3
2.2	Wing braces	2-5
2.2.1	Remove the wing braces	2-5
2.2.2	Install the wing braces	2-7
2.3	Inner wing	2-8
2.3.1	Remove the inner wing	2-8
2.3.2	Install the inner wing	2-10
2.4	Outer wing	2-11
2.4.1	Install the outer wing	2-11
2.4.2	Remove the outer wing	2-12
2.5	Tongue and hitch	2-13
2.5.1	Remove the tongue	2-13
2.5.2	Install the tongue	2-15
2.5.3	Tongue latch adjustment	2-16
2.5.4	Remove the hitch	2-17
2.5.5	Install the hitch	2-18
2.5.6	Dissassemble the hitch	2-19
2.5.7	Assemble the hitch	2-20
2.5.8	Hitch height adjustment	2-20
2.6	Lift wheel mount	2-21
2.6.1	Remove a lift wheel mount	2-21
2.6.2	Install a lift wheel mount	2-22
2.6.3	Adjust the wheel scraper	2-22
2.7	9523 marker	2-23
2.7.1	Remove the 9523 lower marker arm	2-23
2.7.2	Install the 9523 lower marker arm	2-24
2.7.3	Remove the 9523 top marker arm	2-24
2.7.4	Install the 9523 top marker arm	2-27
2.8	9524-20 marker	2-29
2.8.1	Remove the 9524-20 lower marker arm	2-29
2.8.2	Install the 9524-20 lower marker arm	2-30
2.8.3	Remove the 9524-20 top marker arm	2-30
2.8.4	Install the 9524-20 top marker arm	2-32
2.9	9524-22 marker	2-33
2.9.1	Remove the 9524-22 lower marker arm	2-33
2.9.2	Install the 9524-22 lower marker arm	2-34
2.9.3	Remove the 9524-22 top marker arm	2-34
2.9.4	Install the 9524-22 top marker arm	2-36
2.10	Marker gauge wheel	2-38
2.10.1	Remove the marker gauge wheel	2-38
2.10.2	Install the marker gauge wheel	2-38
2.10.3	Disassemble the marker gauge wheel	2-39
2.10.4	Assemble the marker gauge wheel	2-40
2.11	Marker disc	2-41
2.11.1	Remove the marker disc	2-41
2.11.2	Install the marker disc	2-41
2.11.3	Disassemble the marker disc	2-42
2.11.4	Assemble the marker disc	2-43
2.11.5	Adjust the marker disc	2-44
2.12	Marker arm length	2-45
2.13	Central fill platform and ladder	2-46

2.13.1	Remove the central fill ladder	2-46
2.13.2	Install the central fill ladder	2-46
2.13.3	Remove the platform	2-47
2.13.4	Install the platform	2-48
2.13.5	Remove the cradle	2-49
2.13.6	Install the cradle	2-50
3	Hydraulic system	3-1
3.1	Hydraulic troubleshooting	3-3
3.2	Marker / fold circuit operation	3-4
3.2.1	Extend the tongue cylinder	3-4
3.2.2	Retract the tongue cylinder	3-4
3.2.3	Fold the planter	3-5
3.2.4	Unfold the planter	3-6
3.2.5	Raise the markers	3-8
3.2.6	Lower the markers	3-9
3.3	Marker / fold circuits	3-10
3.4	Lift circuit	3-11
3.5	Lift circuit operation	3-12
3.5.1	Raise the planter (control box OFF or TRANSPORT)	3-12
3.5.2	Raise the wing lift wheels in transport position	3-13
3.5.3	Raise the planter in the field position	3-14
3.5.4	Lower the planter	3-15
3.6	Central fill blower	3-16
3.7	Central fill blower motor	3-17
3.7.1	Rexroth bent axis motor components	3-17
3.7.2	Motor specifications	3-17
3.7.3	Remove the motor	3-17
3.7.4	Install the motor	3-20
3.7.5	Disassemble the Rexroth bent axis motor	3-22
3.7.6	Inspect the Rexroth bent axis motor	3-22
3.7.7	Assemble the Rexroth bent axis motor	3-23
3.8	Hitch cylinder	3-24
3.8.1	Cylinder components	3-24
3.8.2	Cylinder specifications	3-24
3.8.3	Remove the cylinder	3-25
3.8.4	Install the cylinder	3-26
3.8.5	Disassemble the cylinder	3-26
3.8.6	Inspect the cylinder	3-27
3.8.7	Assemble the cylinder	3-28
3.9	Fold cylinders	3-29
3.9.1	Cylinder components	3-29
3.9.2	Cylinder specifications	3-29
3.9.3	Remove the cylinder	3-30
3.9.4	Install the cylinder	3-31
3.9.5	Disassemble the cylinder	3-31
3.9.6	Inspect the cylinder	3-32
3.9.7	Assemble the cylinder	3-33
3.10	9523 marker cylinder	3-34
3.10.1	Marker cylinder specifications	3-34
3.10.2	Remove the marker cylinder	3-34
3.10.3	Install the marker cylinder	3-36
3.10.4	Disassemble the marker cylinder	3-36
3.10.5	Inspect the cylinder	3-37
3.10.6	Assemble the marker cylinder	3-37
3.11	9524-20 / 9524-22 Marker cylinder	3-39

3.11.1	Marker cylinder specifications	3-39
3.11.2	Remove the marker cylinder	3-40
3.11.3	Install the marker cylinder	3-41
3.11.4	Disassemble the marker cylinder	3-41
3.11.5	Inspect the cylinder	3-42
3.11.6	Assemble the marker cylinder	3-42
3.12	Lift cylinders	3-44
3.12.1	Lift cylinder specifications	3-44
3.12.2	Remove the lift cylinder	3-44
3.12.3	Install the lift cylinder	3-46
3.12.4	Disassemble the lift cylinder	3-47
3.12.4.1	Inspection	3-48
3.12.5	Inspect the cylinder	3-48
3.12.6	Assemble the lift cylinder	3-48
3.13	Marker and fold valve block	3-50
3.13.1	Remove the marker and fold valve block	3-50
3.13.2	Remove the solenoids	3-52
3.13.2.1	Inspection	3-52
3.13.3	Examine the solenoid valves	3-52
3.13.4	Install the solenoids	3-53
3.13.5	Install the marker and fold valve block	3-53
3.14	Marker sequence valve	3-55
3.14.1	Remove the sequence valve	3-55
3.14.2	Install the sequence valve	3-56
3.14.3	Disassemble the sequence valve	3-57
3.14.4	Examine the sequence valve	3-58
3.14.5	Assemble the sequence valve	3-58
3.15	Lift valve block	3-59
3.15.1	Lift valve block specifications	3-59
3.15.2	Remove the lift valve block	3-60
3.15.3	Install the lift valve block	3-62
3.15.4	Remove the solenoids	3-63
3.15.5	Examine the solenoid valves	3-63
3.15.6	Install the solenoids	3-63
3.16	Blower control valve	3-65
3.16.1	Remove the blower control valve	3-65
3.16.2	Install the blower control valve	3-66
3.16.3	Disassemble the blower control valve	3-66
3.16.4	Examine the blower control valve	3-67
3.16.5	Assemble the blower control valve	3-67
4	Electrical system	4-1
4.1	Basic troubleshooting information	4-3
4.1.1	Basic troubleshooting procedures	4-3
4.1.2	Tools	4-4
4.1.3	Continuity check	4-4
4.1.4	Voltage check	4-5
4.1.5	Examine a connector	4-6
4.1.6	Test for open circuits	4-6
4.1.7	Find open circuit	4-7
4.1.8	Test for short circuits	4-7
4.1.9	Test for high resistance	4-8
4.1.10	Terminal numbers	4-8
4.1.11	Dielectric grease	4-8
4.1.12	Pins and sockets	4-8
4.1.13	Replace a Packard connector	4-9
4.1.14	Replace an AMP connector	4-10

4.2	Transport lamps - non CE	4-11
4.2.1	Lamp harness	4-11
4.2.2	Examine the lighting	4-14
4.2.3	Machine lamp plug - non CE	4-15
4.2.4	Turn signal module	4-15
4.2.4.1	Remove the turn signal module	4-16
4.2.4.2	Install the turn signal module	4-18
4.2.5	Change a bulb	4-18
4.3	Marker, fold, and lift	4-20
4.3.1	Marker, fold, and lift harness	4-20
4.3.2	Test the control box voltage	4-25
4.3.3	Marker position switch	4-25
4.3.3.1	Remove the marker position switch	4-26
4.3.3.2	Install the marker position switch	4-26
4.3.4	Solenoid coils	4-26
4.3.4.1	Check the solenoid coils	4-27
4.3.4.2	Remove the solenoid coils	4-28
4.3.4.3	Install the solenoid coils	4-28
4.4	Modules and sensors	4-29
4.4.1	Remove the seed tubes	4-29
4.4.2	Install the seed tubes	4-29
4.4.3	Clean the seed sensors	4-30
4.4.4	Test the seed sensors	4-30
4.4.5	Test with a seed sensor tester	4-31
4.4.6	Test the seed monitor	4-31
5	Product containment	5-1
5.1	Central fill air system	5-3
5.1.1	Central fill air pressure	5-3
5.1.2	Adjust the central fill air pressure	5-3
5.1.3	Remove the air pressure gauge	5-3
5.1.4	Install the air pressure gauge	5-4
5.2	Central fill blower	5-5
5.2.1	Central fill blower components	5-5
5.2.2	Remove the central fill blower	5-5
5.2.3	Install the central fill blower	5-7
5.2.4	Start a new or repaired central fill blower	5-7
5.2.5	Disassemble the central fill blower	5-7
5.2.6	Examine the central fill blower	5-9
5.2.7	Assemble the central fill blower	5-9
5.3	Central fill hoppers	5-12
5.3.1	Remove the central fill hoppers	5-12
5.3.2	Install the central fill hoppers	5-13
5.4	Seed delivery hoses	5-14
5.4.1	Plenum	5-14
5.4.2	9523 hose length and routing chart	5-14
5.4.3	9524 - 20 hose length and routing chart	5-15
5.4.4	9524 - 22 hose length and routing chart	5-16
5.5	Air tubes	5-18
5.5.1	Clean the air tubes	5-18
6	Row units	6-1
6.1	Gauge wheels	6-3
6.1.1	Adjust the gauge wheel to opener clearance	6-3
6.1.2	Calibrate the gauge wheel depth	6-3
6.1.3	Remove the gauge wheels	6-4

6.1.4	Install the gauge wheels	6-4
6.1.5	Gauge wheel arm components	6-6
6.1.6	Disassemble the pivot for the gauge wheel arm	6-7
6.1.7	Assemble the pivot for the gauge wheel arm	6-10
6.1.8	Replace a gauge wheel tire	6-13
6.2	Opener discs	6-14
6.2.1	Replace the opener disc bearings	6-14
6.2.2	Replace the opener discs	6-15
6.2.3	Set the opener disc contact	6-16
6.3	Scraper	6-18
6.3.1	Replace a flat scraper - late production	6-18
6.4	Seed tubes	6-19
6.4.1	Remove the seed tubes	6-19
6.4.2	Install the seed tubes	6-19
6.4.3	Replace the tube guard	6-19
6.4.4	Adjust the tube clip - VE	6-20
6.4.5	Clean the seed sensors	6-20
6.5	Depth gauge	6-22
6.5.1	Remove the depth gauge	6-22
6.5.2	Install the depth gauge	6-23
6.5.3	Disassemble the depth gauge	6-25
6.5.4	Assemble the depth gauge	6-26
6.6	Single closing wheel	6-28
6.6.1	Remove the single closing wheel	6-28
6.6.2	Install the single closing wheel	6-28
6.6.3	Disassemble the single closing wheel	6-28
6.6.4	Assemble the single closing wheel	6-29
6.7	Dual closing wheels	6-30
6.7.1	Remove a dual closing wheel	6-30
6.7.2	Install a dual closing wheel	6-31
6.7.3	Replace the bearing in a cast iron closing wheel	6-31
6.7.4	Closing wheel spacing and offset	6-31
6.7.4.1	Adjust the closing wheel spacing and offset	6-31
6.7.5	Center the closing wheels	6-32
6.8	Row unit linkage	6-33
6.8.1	Remove the row unit linkage	6-33
6.8.2	Install the row unit linkage	6-34
7	Spindles and wheels	7-1
7.1	Lift wheels	7-3
7.1.1	Remove a wheel	7-3
7.1.2	Install a wheel	7-4
7.2	Wheel bearings	7-5
7.2.1	Disassemble the wheel bearings	7-5
7.2.2	Assemble the wheel bearings	7-6
8	Diagrams	8-1
8.1	Hydraulic	8-3
8.1.1	Marker / fold circuits	8-3
8.1.2	Lift circuit	8-4
8.1.3	Central fill blower	8-5
9	Index	Index-1

1 General

1.1	General information	1-3
1.1.1	Introduction to this service manual	1-3
1.1.2	Units of measurement	1-3
1.1.3	Table of contents	1-3
1.1.4	Page numbers	1-3
1.1.5	Intended use	1-3
1.1.6	Proper disposal of waste	1-3
1.2	Safety	1-5
1.2.1	Safety symbol	1-5
1.2.2	Safety messages	1-5
1.2.3	Information messages	1-5
1.2.4	Safety signs	1-5
1.2.5	A word to the operator	1-6
1.2.6	The service manual	1-7
1.2.7	Operation	1-7
1.2.7.1	Prepare for operation	1-7
1.2.7.2	General information	1-7
1.2.7.3	Personal protective equipment	1-8
1.2.7.4	Seat instructions	1-9
1.2.7.5	Shield and guards	1-9
1.2.7.6	Exhaust warning	1-10
1.2.7.7	Flying debris	1-10
1.2.7.8	Handrails	1-10
1.2.7.9	Agricultural chemicals	1-10
1.2.8	Travel on public roads	1-11
1.2.9	Maintenance	1-12
1.2.9.1	General maintenance information	1-12
1.2.9.2	Fire prevention and first aid	1-13
1.2.9.3	High pressure leaks	1-14
1.2.9.4	Tire safety	1-15
1.2.9.5	Replacement parts	1-15
1.3	Transport locks	1-16
1.3.1	Wheel lift cylinder stops	1-16
1.3.2	Wing lock pins	1-17
1.3.3	Marker lockup valves	1-17
1.4	Machine identification	1-19
1.4.1	Serial number plate	1-19
1.4.2	Serial number description	1-19
1.5	Main machine components	1-21
1.6	Specifications	1-22
1.6.1	Frame specifications	1-22
1.6.2	Tire specifications	1-22
1.6.3	Machine dimensions	1-22
1.6.4	Marker specifications	1-23
1.6.5	Row unit specifications	1-23
1.6.6	Air system specifications	1-23
1.6.7	Hydraulic system specifications	1-24
1.6.8	Hydraulic flow requirements	1-24
1.6.9	Approximate ship weights	1-24
1.6.10	Tractor requirements	1-24

1.6.11	Maximum speed	1-24
1.7	Bolt torque values	1-25