

Massey Ferguson®

9702 / 9708 / 9722
Planter

SERVICE MANUAL 4283530M1

CONTENTS

GENERAL INFORMATION	01
ROW UNIT	02
DRIVE SYSTEMS	03
AIR SYSTEM	04
HYDRAULICS	05
ELECTRICAL	06
FRAME	07
TROUBLESHOOTING	08
CONSOLES AND MONITORS	09

Massey Ferguson®

9702 / 9708 / 9722

Planter

SERVICE MANUAL

4283530M1

01 - General Information

Contents

GENERAL INFORMATION	
General Information	01-1
Serial Number Plate Location	01-2
Serial Number Definition	01-2
SAFETY	
Safety Alert Symbol	01-3
Signal Words	01-3
Informational Messages	01-3
Safety Signs	01-4
Introduction	01-4
Prepare For Operation	01-4
Understanding Planter Safety	01-4
General Operation And Service	01-5
Operating	01-5
Agricultural Chemicals	01-6
Transporting	01-6
Servicing	01-7
Lockup Devices	01-7
Flat-Fold Markers	01-7
Standard Markers	01-8
Folding Wings	01-8
SPECIFICATIONS	
General	01-9
9702	01-9
9708	01-9
9722	01-9
Row Units	01-9
Hydraulic System	01-10
Air System	01-10
Transmission	01-10
Shear Pins	01-10
Monitor	01-11
Electronic Seed Drive Controller	01-11
Highway Lights	01-11
Approx. Shipping Weights	01-11
FIELD OPERATIONS AND ADJUSTMENTS	
Tractor Preparation	01-13
General	01-13
Recommended Tractor Horsepower	01-13
Wheel Spacing	01-13

Contents

Electrical Requirements	01-13
Remote Hydraulic Valve Requirements	01-13
Tractor Drawbar	01-14
Three-Point Hitch	01-14
Three-Point Hitch Adjustment	01-14
Quick Hitch	01-14
Front Weights	01-15
Rear Wheel Weights	01-15
Planter Preparation	01-15
Lubrication	01-15
Bolt Torque	01-15
Tire Inflation	01-15
Seed Discs	01-15
Chains	01-15
Weights	01-15
Seed and Transmissions	01-15
Planter Monitor	01-15
Planter Hydraulic Drive Controls	01-16
Leveling The Planter	01-17
Connecting the Planter to the Tractor	01-18
Connecting the Three-Point Hitch	01-18
Lower Links - Standard Hitch	01-18
Lower Links - Quick Hitch	01-18
Upper Link - Standard Hitch	01-19
Upper Link - Quick Hitch	01-20
Disconnecting the Planter From the Tractor	01-21
Transporting The Planter	01-22
Preparation - All Models	01-22
Preparation - Folding Models	01-22
Safety Precautions	01-22
Field Preparation	01-23
General	01-23
Before Entering the Field	01-23
In the Field	01-23
Finishing the Field	01-24
Markers	01-25
Rigid Markers	01-25
Flat-fold Markers	01-26
Circuit Operation - All Marker Types	01-28
Marker Disc Blade	01-28
Arm Section And Linkage Adjustments	01-29
Air Pressure Settings	01-31
Seed Disc Identification Chart	01-32
Larger Bean Disc	01-34
Snap Bean Disc	01-35
Treated Seed	01-35
Transmission Settings	01-36
Seed Rate Transmission	01-36
Seed Population	01-37
Seed Rate Chart - 30 Inch And 38 Inch Rows	01-45
Seed Rate Chart - 22 Inch Rows	01-46
Seed Rate Chart - Peanuts	01-47
Chemical Attachment	01-48
General	01-48
Cleaning Hoppers and Meters	01-48
Application Rate	01-49
Checking Application Rate	01-49
Insecticide Rate Chart - Clay Granules	01-50
Insecticide Rate Chart - Sand Granules	01-51
Herbicide Rate Chart	01-52
Insecticide In-furrow Placement	01-53
Spring Tooth Incorporator	01-53
Checking Population	01-54

Contents

Leveling The Planter	01-55
Operating Notes	01-55
Test Button	01-56
Test Switch Storage Tube	01-56
Bearing Replacement (Eccentric Self-Locking Collar)	01-58
Torque Values For Standard Bolts	01-59
Special Torque Values	01-59
Torque Values For Metric Bolts	01-61
LUBRICATION	
Service Chart	01-63
Lubrication Points	01-64
INSTALLATION INSTRUCTIONS	
Installation Instructions	01-69
INDEX	01-71

General Information

GENERAL INFORMATION



FIG. 1

9700 Series Mounted Planters are designed, built and tested to make sure high quality, maximum strength and long service life. The planters, available as 8 and 12-row models, feature a positive air flow system and the 9000 Series meter for accurate seed spacing.



WARNING: Pictures in this manual may show protective shields and guards opened or removed for illustration purposes. Be sure all shields and guards are in place during operation.

This manual was prepared from the latest product information available at publication time. The Company reserves the right to make changes at any time without notice or obligation.

9702	12 Row, 30 inch row spacing, Rigid Frame
9708	8 row, 30 inch row spacing, Rigid Frame
9722	12 row, 30 inch row spacing, Vertical Fold Frame

General Information

SERIAL NUMBER PLATE LOCATION

The serial number plate (1) is found on the left end of the toolbar.

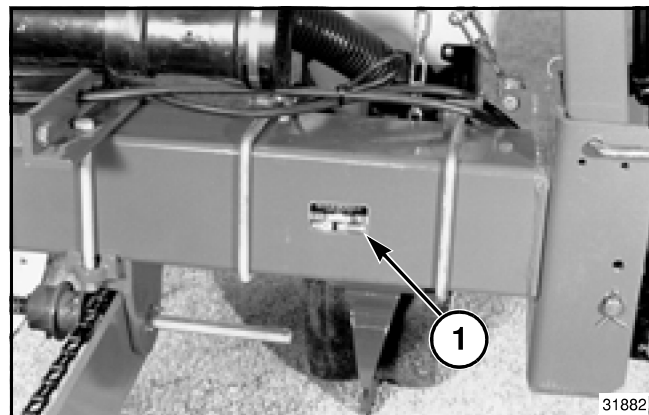


FIG. 2

Serial Number Definition

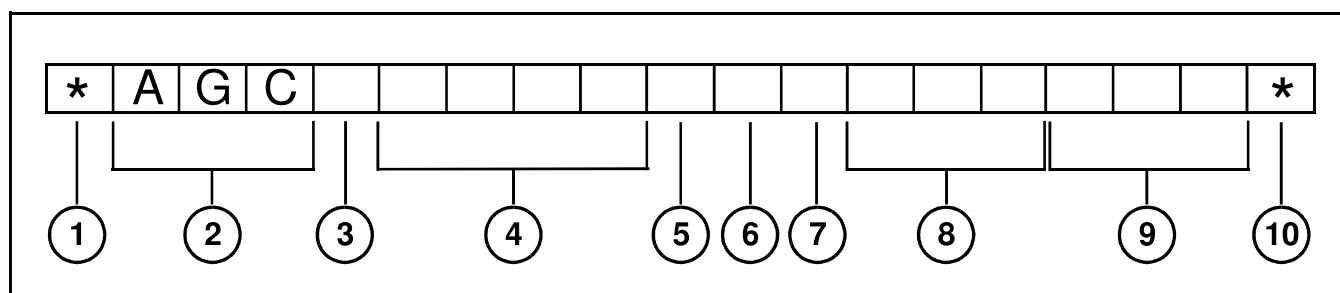


FIG. 3

Definition of the serial number for model year 2010 and up.

- (1) Beginning symbol
- (2) World Manufacturer Code
- (3) Brand Code
- (4) Model Identifier (Model number)
- (5) Check Letter (0 or used if model identifier is five digits)
- (6) Model Year Code (A=2010, B=2011, C=2012, and on)
- (7) Plant Code
- (8) Family Code
- (9) Unit Number for the Year
- (10) Ending symbol

NOTE: For serial number breaks in this manual, only the information from the model year code and following will be given.

SAFETY

SAFETY ALERT SYMBOL

FIG. 4: The safety alert symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED!

Look for the safety alert symbol both in this manual and on safety signs on this machine. The safety alert symbol will direct your attention to information that involves your safety and the safety of others.

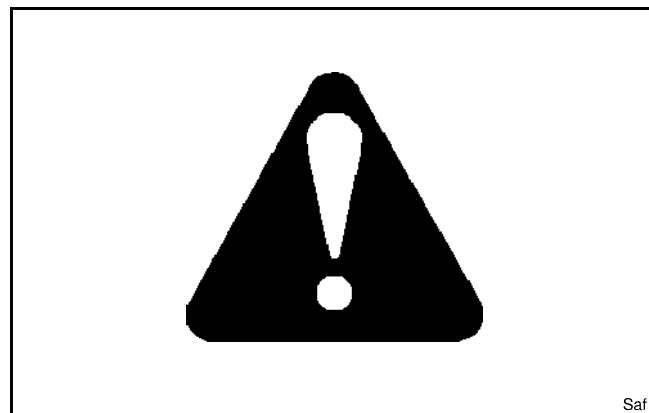


FIG. 4

SIGNAL WORDS

FIG. 5: The words DANGER, WARNING or CAUTION are used with the safety alert symbol. Learn to recognize these safety alerts and follow the recommended precautions and safety practices.



DANGER: Indicates an imminently hazardous situation that, if not avoided, will result in DEATH OR VERY SERIOUS INJURY.



WARNING: Indicates a potentially hazardous situation that, if not avoided, could result in DEATH OR SERIOUS INJURY.



CAUTION: Indicates a potentially hazardous situation that, if not avoided, may result in MINOR INJURY.



FIG. 5

INFORMATIONAL MESSAGES

The words IMPORTANT and NOTE are not related to personal safety, but are used to give additional information and tips for operating or servicing this equipment.

IMPORTANT: Identifies special instructions or procedures which, if not strictly observed, could result in damage to or destruction of the machine, process, or its surroundings.

NOTE: Identifies points of particular interest for more efficient and convenient repair or operation.