

MASSEY FERGUSON

MF 2700E

Series Tractors


Models: 2705E / 2706E



SERVICE MANUAL

FROM MASSEY FERGUSON

Workshop Service Manual

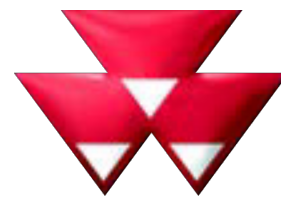

MASSEY FERGUSON

2705E

2706E



**CALIFORNIA
Proposition 65 Warning**

WARNING: Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, or other reproductive harm.

WARNING: Battery posts, terminals and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm. Wash hands after handling.

1 General	1-1
1.1 Introduction	1-3
1.1.1 The service manual	1-3
1.1.2 Replacement parts	1-3
1.1.3 Units of measurement	1-3
1.1.4 Serial number plate	1-3
1.1.5 Engine identification	1-4
1.1.6 Chassis number	1-5
1.2 Specifications	1-6
1.2.1 Engine specifications	1-6
1.2.2 Electrical specifications	1-7
1.2.3 Power take-off specifications	1-7
1.2.4 Mechanical transmission specifications	1-7
1.2.5 Hydrostatic transmission specifications	1-7
1.2.6 Power take-off specifications	1-8
1.2.7 Hydraulic specifications	1-8
1.2.8 Fuel specifications	1-8
1.2.9 Operating slope angle	1-9
1.2.10 Capacities	1-9
1.2.11 Lubrication specifications	1-9
1.2.12 Tire inflation pressures	1-9
1.2.13 Maximum load capacity	1-10
1.3 General dimensions	1-11
1.3.1 Dimensions	1-11
1.3.2 Major components	1-12
1.4 Lubrication / fill points	1-13
1.4.1 Lubrication and maintenance chart	1-13
1.4.2 Lubrication fill and drain locations - mechanical	1-14
1.4.3 Lubrication fill and drain locations - hydrostatic	1-15
1.5 General precautions for disassembly and installation	1-16
1.5.1 Precautions for disassembling and installing	1-16
1.5.2 Precautions when installing according to standard parts	1-16
1.6 Tightening torque chart	1-19
1.7 Conversion table	1-21
1.8 Safety introduction	1-22
1.8.1 Safety alert symbol	1-22
1.8.2 Safety messages	1-22
1.8.3 Informational messages	1-22
1.8.4 Safety signs	1-22
1.9 Operation	1-24
1.9.1 Prepare for operation	1-24
1.9.2 Roll over protective structure	1-24
1.9.3 General information	1-24
1.9.4 Personal protective equipment	1-28
1.9.5 Seat instruction	1-28
1.9.6 Shield and guards	1-28
1.9.7 Power take-off safety	1-29
1.9.8 Exhaust warning	1-30
1.9.9 Agricultural chemicals	1-30
1.9.10 Travel on public roads	1-30

1.10 Maintenance	1-32
1.10.1 General maintenance information	1-32
1.10.2 Fire prevention and first aid	1-33
1.10.3 High pressure leaks	1-34
1.10.4 Engine safety	1-35
1.10.5 Battery safety	1-36
1.10.6 Tire safety	1-37
1.10.7 Replacement parts	1-38
2 Engine, Fuel And Exhaust System	2-1
2.1 Electronic diagnostic tool	2-3
2.1.1 Engine service tool software license	2-3
2.1.2 Connecting the electronic diagnostic tool	2-3
2.2 Component Access	2-4
2.2.1 Opening the engine cover	2-4
2.2.2 Closing the engine cover	2-4
2.3 Removing the engine	2-5
2.4 Installing the engine	2-13
2.5 Radiator	2-18
2.6 Air cleaner system	2-20
2.7 Fuel tank	2-22
2.7.1 Fuel filters	2-22
2.7.2 Draining water from the fuel filter	2-22
2.7.3 Replacing the fuel filter	2-23
2.7.4 Bleeding the fuel system	2-24
2.7.5 Fuel tank	2-24
2.7.6 Removing the fuel tank	2-27
2.8 Engine service manual	2-29
2.8.1 Insert the engine service manual here	2-29
2.9 Diagnostic troubleshooting codes and procedures	2-30
2.9.1 Insert the diagnostic troubleshooting codes and procedures here	2-30
3 Drive Train System	3-1
3.1 Transmission	3-3
3.1.1 Separating the engine from the front transmission	3-3
3.1.2 Separating the front and mid transimission housings	3-7
3.1.3 Separating the mid and rear transimission housings	3-9
3.1.4 Separating the front and rear transmission housings	3-11
3.1.5 Installing the front transmission housing	3-21
3.1.6 Assembling the transmission housings	3-24
3.1.7 Removing the lift cylinder housing	3-25
3.1.8 Separating the rear axle from the rear transmission housing	3-30
3.1.9 Assembling the rear axle and the rear transmission housing	3-33
3.1.10 Transmission structure	3-34
3.1.11 Transmission components	3-35
3.1.12 Forward and reverse gear layout	3-35
3.1.13 Forward and reverse gear assembly precautions	3-36
3.2 Clutch system	3-37
3.2.1 Clutch dimensions	3-37
3.2.2 Removing the clutch	3-38
3.2.3 Inspecting the clutch disc	3-39
3.2.4 Inspecting the pressure plate assembly	3-40
3.2.5 Clutch housing vent hose	3-40
3.3 Release bearing	3-41
3.3.1 Removing the release bearing	3-41
3.3.2 Inspecting the release bearing	3-41

3.3.3	Installing the release bearing	3-41
3.4	Clutch assembly	3-42
3.4.1	Removing the clutch assembly	3-42
3.4.2	Installing the clutch assembly	3-42
3.4.3	Adjusting the clutch pedal	3-44
3.4.4	Clutch housing plug	3-44
3.5	Troubleshooting - clutch	3-45
3.6	Clutch pack and gear	3-46
3.6.1	Clutch pack components	3-46
3.6.2	Disassembling the reverse clutch	3-46
3.6.3	Forward and reverse gear components	3-47
3.6.4	Main change gears	3-48
3.6.5	Assembling the main change gear precautions	3-48
3.6.6	Main shift lever	3-49
3.6.7	Assembling the main shift lever precautions	3-49
3.6.8	Range change gears	3-49
3.6.9	Assembling the range change gears	3-50
3.6.10	Shift linkage	3-51
3.6.11	Lever linkage	3-52
3.7	Input gears	3-54
3.7.1	Disassembling the input gear	3-54
3.7.2	Power take-off gear system	3-60
3.7.3	Main gear assembly	3-63
3.7.4	Assembling the input gear	3-65
3.8	Power take-off	3-67
3.8.1	Removing the input cover	3-67
3.8.2	Rear power take-off assembly	3-68
3.8.3	Disassembling the power take-off clutch pack	3-69
3.8.4	Assembling the power take-off precautions	3-70
3.8.5	Assembling precautions for the power take-off shaft	3-71
3.9	Four-wheel drive gears	3-72
3.9.1	Assembling the four-wheel drive	3-73
3.10	Hydrostatic transmission	3-75
3.10.1	Hydrostatic controls	3-75
3.10.2	Hydrostatic transmission layout	3-76
3.10.3	Change lever assembly	3-77
3.10.4	Hydrostatic transmission pedal	3-78
3.10.5	Adjusting the hydrostatic transmission pedal	3-79
3.10.6	Hydrostatic transmission system	3-80
3.10.7	Hydrostatic transmission damper input system	3-80
3.10.8	Hydrostatic transmission component overview	3-81
3.10.9	Hydrostatic transmission control unit	3-82
3.10.10	Hydrostatic transmission hydraulic diagram	3-83
3.10.11	Removing the hydrostatic transmission unit	3-84
3.10.12	Disassembling the hydrostatic transmission unit	3-86
3.10.13	Inspecting the hydrostatic transmission unit	3-97
3.10.14	Assembling the hydrostatic transmission unit	3-98
3.10.15	Installing the hydrostatic transmission unit	3-112
3.10.16	Adjusting the auto cruise system	3-113
4	Platform	4-1
4.1	Platform	4-3
4.1.1	Front floor system	4-3
4.1.2	Rear floor system	4-3
4.1.3	Removing the fender	4-5
4.1.4	Fender	4-6
4.1.5	Installing the fender	4-7

4.1.6	Floor mat and steps	4-8
4.1.7	Seat	4-9
4.1.8	Checking the seat switch	4-9
4.1.9	Front grill head lamp	4-11
4.2	Console	4-12
4.2.1	Removing the console	4-12
4.2.2	Installing the console	4-14
4.3	Roll over protective structure	4-16
4.3.1	Removing the Roll Over Protective Structure	4-16
4.3.2	Installing the Roll Over Protective Structure	4-16
4.4	Steering wheel	4-18
4.4.1	Removing the steering wheel	4-18
4.4.2	Installing the steering wheel	4-18
5	Axles	5-1
5.1	Rear axle	5-3
5.1.1	Three-point linkage	5-3
5.1.2	Rear axle assembly guidelines	5-5
5.1.3	Rear axle information	5-6
5.1.4	Rear axle view	5-6
5.1.5	Special tools	5-7
5.2	Differential lock	5-8
5.2.1	Differential lock system	5-8
5.2.2	Disassembling the rear differential	5-9
5.2.3	Assembling the rear differential	5-10
5.2.4	Hydrostatic transmission settings	5-12
5.2.5	Disassembling the rear axle differential lock and brake	5-13
5.3	Ring gear and pinion gear tooth pattern	5-16
5.4	Front axle	5-18
5.4.1	Removing the front axle	5-18
5.4.2	Installing the front axle	5-19
5.4.3	General information - front axle	5-20
5.4.4	Front axle construction	5-20
5.4.5	Specifications - front axle	5-22
5.4.6	Front wheel drive shaft - 4WD	5-23
5.4.7	Front axle components	5-24
5.4.8	Inspecting the front axle	5-26
5.4.9	Front axle hydraulics	5-28
5.4.10	Assembling the front axle	5-29
5.4.11	Disassembling the pinion carrier assembly	5-29
5.4.12	Inspecting the pinion carrier assembly	5-30
5.4.13	Assembling the pinion carrier assembly	5-30
5.4.14	Disassembling the differential gears	5-32
5.4.15	Assembling the differential gears	5-33
5.4.16	Final drive wheel components	5-34
5.4.17	Removing the wheel shaft seal/cover	5-34
5.4.18	Installing the wheel shaft seal/cover	5-35
5.4.19	Removing the front axle center section	5-36
5.4.20	Installing the front axle center section	5-37
5.4.21	Removing the front axle housing oil seal	5-37
5.4.22	Installing the front axle housing oil seal	5-37
5.4.23	Disassembling the final drive housing	5-38
5.4.24	Inspecting the bearing cover shaft	5-39
5.4.25	Inspecting the drag arm bushing	5-40
5.4.26	Inspecting the final drive housing shaft	5-40
5.4.27	Assembling the final drive housing	5-40
5.4.28	Front axle assembly	5-42

5.4.29	Adjusting the front wheel alignment	5-44
5.4.30	Steering free play	5-45
5.4.31	Front axle troubleshooting	5-45
6	Brake System	6-1
6.1	Brakes	6-3
6.1.1	Brake system	6-3
6.1.2	Brake information	6-4
6.1.3	Checking the brake adjustment	6-5
6.1.4	Adjusting the brakes	6-5
6.1.5	Inspecting the brake discs and the separator plates	6-6
6.1.6	Brake disc wear limit	6-7
6.1.7	Separator plate wear limit	6-7
6.1.8	Brake troubleshooting	6-7
7	Electrical System	7-1
7.1	Wiring diagrams	7-3
7.1.1	Wire color chart	7-3
7.1.2	Vehicle wiring diagram	7-5
7.1.3	Engine wiring diagram	7-7
7.2	Wiring harness	7-9
7.2.1	Wiring harness layout	7-9
7.3	Fuses, relays, and diodes	7-12
7.3.1	Main fuse box	7-12
7.3.2	Relay locations	7-12
7.3.3	Diode location	7-13
7.4	Instruments and controls	7-15
7.4.1	Instrument panel components	7-15
7.4.2	Indicators and gauges	7-15
7.4.3	Instrument panel indicator inputs	7-18
7.4.4	Instrument panel connection	7-20
7.4.5	Removing the instrument panel	7-21
7.4.6	Installing the instrument panel	7-21
7.4.7	Instrument panel layout	7-21
7.4.8	Handling the engine control unit	7-22
7.5	Switches	7-23
7.5.1	Neutral start safety switches	7-23
7.5.2	Combination switch	7-26
7.5.3	Start switch	7-26
7.5.4	Adjusting the seat switch	7-27
7.5.5	Power takeoff switch	7-27
7.6	Sensors	7-30
7.6.1	Throttle position sensor	7-30
7.6.2	Fuel gauge sender	7-30
7.7	Electronic diagnostic tool	7-31
7.7.1	Engine service tool software license	7-31
7.7.2	Connecting the electronic diagnostic tool	7-31
8	Hydraulic System	8-1
8.1	Hydraulic system overview	8-3
8.2	Hydraulic schematic	0
8.3	Power shuttle components	8-4
8.4	General service procedures	8-9
8.4.1	Changing the hydraulic oil	8-9
8.4.2	Oil cooler and the main clutch lubrication	8-10
8.5	Suction filter	8-12

8.6 Gear pump	8-14
8.6.1 Main pump	8-14
8.6.2 Sub pump	8-15
8.6.3 Power steering cylinder	8-16
8.6.4 Main cylinder	8-18
8.7 Valves	8-20
8.7.1 Main relief valve	8-20
8.7.2 Steering orbit roll	8-23
8.7.3 Slow return valve	8-24
8.7.4 Assembling the slow return valve precautions	8-24
8.7.5 Safety valve	8-25
8.7.6 Assembling the slow return valve precautions	8-25
8.7.7 Power takeoff control valve	8-26
8.7.8 Assembling the power take-off control valve precautions	8-27
8.7.9 Assembling precautions for the reduce valve	8-27
8.7.10 Reduce valve specifications	8-27
8.7.11 External auxiliary hydraulics	8-27
8.7.12 Auxiliary control valve	8-29
8.7.13 Disassembling the auxiliary control valve	8-31
8.7.14 Assembling the auxiliary control valve	8-31
8.7.15 Removing the auxiliary control valve	8-32
8.7.16 Installing the auxiliary control valve	8-32
8.7.17 Auxiliary hydraulics outlet	8-32
8.7.18 Removing the external hydraulic pressure	8-34
8.8 Hydraulic control linkage	8-36
8.8.1 Position control link and lever	8-36
8.8.2 Adjusting the position control lever	8-37
8.8.3 Position control lever operation	8-37
8.8.4 Draft control link and lever, if equipped	8-38
8.8.5 Adjusting the draft control, if equipped	8-38
8.9 Three-point lift linkage and drawbar	8-40
8.9.1 Three-point linkage	8-40
8.9.2 Drawbar dimensions	8-42
8.10 Hydraulic system troubleshooting	8-43
8.10.1 Testing the power takeoff clutch pack pressure	8-47
9 Steering System	9-1
9.1 Hydrostatic steering	9-3
9.1.1 Hydrostatic steering components	9-3
9.1.2 Integral orbit roll components	9-4
9.1.3 Disassembling the steering unit	9-5
9.1.4 Inspecting the steering unit	9-8
9.1.5 Assembling the control side of the steering unit	9-8
9.1.6 Assembling the gerotor side of the steering unit	9-10
9.1.7 Flow control valve	9-12
9.1.8 Steering system troubleshooting	9-13
10 Index	Index-1