

MASSEY FERGUSON

MF 5300


Draper Header



OPERATOR'S MANUAL

FROM MASSEY FERGUSON

Operator's Manual

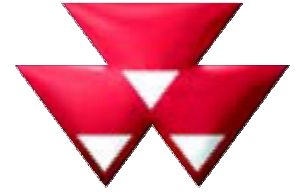

MASSEY FERGUSON

Draper Header

5300



CALIFORNIA Proposition 65 Warning

WARNING: Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, or other reproductive harm.

WARNING: Battery posts, terminals and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm. Wash hands after handling.

Congratulations on your selection of an AGCO® Product. We believe you have exercised excellent judgment in the purchase of your AGCO® machine. We are most appreciative of your patronage.

Your Dealer has performed the pre-delivery service on your new machine.

He will discuss with you the operating and maintenance instructions given in this manual, and instruct you in the correct and varied applications of this machine. Call on him at any time when you have a question or need equipment related to the use of your machine.

We recommend that you carefully read this entire manual before operating the machine. Also, time spent in becoming fully acquainted with its performance features, adjustments, and maintenance schedules will be repaid in a long and satisfactory life of the product.

This equipment is covered by a written warranty which will be provided to you by your AGCO® Dealer at time of purchase.

AGCO® reserves the right to make changes or add improvements to its products at any time without incurring any obligation to make such changes to products manufactured previously. AGCO®, or its dealers, accept no responsibility for variations which may be evident in the actual specifications of its products and the statements and descriptions contained in this publication.

Draper Header

1 Safety	7
1.1 Introduction	9
1.1.1 Safety alert symbol	9
1.1.2 Safety messages	9
1.1.3 Informational messages	9
1.1.4 Safety signs	9
1.1.5 A word to the operator	10
1.1.6 This manual	11
1.1.6.1 Operator manual holder	11
1.2 Operation	12
1.2.1 Prepare for operation	12
1.2.2 General information	12
1.2.3 Personal protective equipment	13
1.2.4 Seat instructions	14
1.2.5 Shield and guards	14
1.2.6 Exhaust warning	15
1.2.7 Flying debris	15
1.2.8 Handrails	15
1.2.9 Agricultural chemicals	15
1.3 Travel on public roads	17
1.4 Maintenance	18
1.4.1 General maintenance information	18
1.4.2 Fire prevention and first aid	20
1.4.3 High pressure leaks	21
1.4.4 Tire safety	21
1.4.5 Replacement parts	22
1.5 Cylinder stops	23
1.5.1 Engaging the stop for the reel lift cylinder	23
1.5.2 Disengaging the stop for the reel lift cylinder	23
1.6 Safety signs	24
2 Introduction	27
2.1 Introduction	29
2.1.1 Units of measurement	29
2.1.2 Replacement parts	29
2.1.3 Intended use	29
2.1.4 Proper disposal of waste	29
2.2 Machine identification	30
2.2.1 Serial number plate	30
2.2.2 Serial number description	30
2.3 Draper header description	32
2.3.1 Header description	32
2.3.2 Draper description	32
2.3.3 Reel description	32
2.3.4 Opening the end shield	33
2.3.5 Closing the end shield	33
3 Operation	35
3.1 Checklists	37
3.1.1 Daily checklist	37

3.1.2	Before each season checklist	37
3.1.3	End of season checklist	37
3.2	Connecting the tractor	39
3.2.1	Installing the header adapter kit, if required	39
3.2.2	Installing windrower tractor weights	39
3.2.3	Connect the lift arms	40
3.2.4	Connecting the center link	41
3.2.5	Connecting the hydraulic and electrical connections	41
3.2.6	Preparing the header for operation	42
3.3	Disconnecting the tractor	44
3.3.1	Lowering the parking stand	44
3.3.2	Releasing the flotation pressure	44
3.3.3	Disconnecting the hydraulic and electrical connections	45
3.3.4	Disconnecting the center link	45
3.3.5	Disconnecting the lift arms	46
3.4	Field operation	47
3.4.1	Engaging the header	47
3.4.2	Unplugging the header	47
3.4.3	Header lift	48
3.4.4	Header flotation	48
3.4.5	Header height	49
3.4.6	Header angle	49
3.4.7	Lateral tilt	49
3.4.8	Reel fore and aft switch	50
3.4.9	Draper speed switch	50
3.4.10	Draper shift switch	50
3.4.11	Automatic reel speed	50
3.4.11.1	Changing the automatic reel speed setting	51
3.5	Reel	52
3.5.1	Reel fore and aft	52
3.5.2	Reel height	52
3.5.3	Reel speed	52
3.5.4	Tine pitch	53
3.5.4.1	Adjusting the tine pitch	53
3.6	Draper	54
3.6.1	Draper speed	54
3.6.2	Draper opening	54
3.6.2.1	Adjusting the draper opening - center delivery header	54
3.6.2.2	Adjusting the draper opening - double swath header	54
3.7	Gauge wheels	56
3.7.1	Changing the gauge wheel height - swivel gauge wheels	56
3.7.2	Changing the gauge wheel height - center gauge wheels	56
3.8	Transport kit	58
3.8.1	Changing from transport to field position	58
3.8.2	Changing from field to transport position	62
3.8.3	Connecting to a tractor	66
4	Maintenance	67
4.1	Service schedule	69
4.2	Lubrication details	70
4.2.1	During lubrication	70
4.2.2	Sealed bearings	70
4.2.3	Grease fittings	70
4.2.4	Check the reel drive gearcase for lubricant	72
4.2.5	Changing the hydraulic oil filter	73
4.3	Reel	74

4.3.1	Replacing a reel tine	74
4.3.2	Level the reel	74
4.3.3	Putting the reel lift cylinders into phase	75
4.3.4	Bleeding the reel lift cylinders	75
4.4	Draper	76
4.4.1	Protecting the drapers	76
4.4.2	Draper tension	76
4.4.2.1	Increase the draper tension	76
4.4.2.2	Decreasing the draper tension	76
4.4.3	Aligning the rollers	77
4.4.4	Draper tracking	78
4.4.5	Removing a draper	79
4.4.6	Installing a draper	79
4.5	Sickle	81
4.5.1	General sickle maintenance	81
4.5.2	Replacing the sickle	81
4.5.3	Sickle storage	82
4.5.4	Checking the sickle fore and aft adjustment	82
4.5.5	Checking the sickle vertical adjustment	83
4.5.6	Check the sickle register	83
4.5.7	Adjusting the sickle register	84
4.5.8	Standard sickle and guards	85
4.5.8.1	Replacing sickle sections	85
4.5.8.2	Replacing sickle guards	85
4.5.8.3	Adjust the sickle holddowns	86
4.5.9	Schumacher (SCH) sickle and guards	87
4.5.9.1	Replacing sickle sections	87
4.5.9.2	Replacing sickle guards	87
4.6	Electrical	89
4.6.1	Header speed sensor	89
5	Troubleshooting	91
5.1	Cutterbar troubleshooting	93
5.2	Reel troubleshooting	95
5.3	Draper troubleshooting	96
6	Specifications	97
6.1	Specifications	99
6.1.1	Dimensions and weights	99
6.1.2	Header specifications	99
6.1.3	Sickle specifications	99
6.1.4	Reel specifications	100
6.1.5	Draper specifications	100
6.1.6	Tire specifications	100
6.1.7	Lubrication specifications	100
7	Accessories	101
7.1	Accessories and options	103
7.1.1	Transport kit	103
7.1.2	Narrow opening kit	103
7.1.3	Skid shoe kit	103
7.1.4	Gauge wheels	104
7.1.5	Swivel gauge wheels	104
7.1.6	Parking stands	104
7.1.7	Draper and auger header adapter kit	105
7.1.8	Draper header adapter kit	105

7.1.9 Windrower tractor weights	105
7.1.10 Single point connector	106
7.1.11 Divider extensions	106
7.1.12 Draper belt repair kit	106
7.1.13 Stub guard kit	106
7.1.14 Header lowering speed control kit	107
8 Assembly	109
8.1 General information	111
8.1.1 Shipping damage and missing parts	111
8.1.2 Safety precautions	111
8.2 Preparing the header for assembly	112
8.3 Assemble the header	114
8.4 Checklists	117
8.4.1 Pre-delivery checklist	117
8.4.2 Delivery checklist	117
9 Index	119

1. Safety

1.1 Introduction	9
1.1.1 Safety alert symbol	9
1.1.2 Safety messages	9
1.1.3 Informational messages	9
1.1.4 Safety signs	9
1.1.5 A word to the operator	10
1.1.6 This manual	11
1.1.6.1 Operator manual holder	11
1.2 Operation	12
1.2.1 Prepare for operation	12
1.2.2 General information	12
1.2.3 Personal protective equipment	13
1.2.4 Seat instructions	14
1.2.5 Shield and guards	14
1.2.6 Exhaust warning	15
1.2.7 Flying debris	15
1.2.8 Handrails	15
1.2.9 Agricultural chemicals	15
1.3 Travel on public roads	17
1.4 Maintenance	18
1.4.1 General maintenance information	18
1.4.2 Fire prevention and first aid	20
1.4.3 High pressure leaks	21
1.4.4 Tire safety	21
1.4.5 Replacement parts	22
1.5 Cylinder stops	23
1.5.1 Engaging the stop for the reel lift cylinder	23
1.5.2 Disengaging the stop for the reel lift cylinder	23
1.6 Safety signs	24



1.1 Introduction

1.1.1 Safety alert symbol

The safety alert symbol means Attention! Become Alert! Your Safety Is Involved!

Look for the safety alert symbol both in this manual and on safety signs on this machine. The safety alert symbol will direct your attention to information that involves your safety and the safety of others.

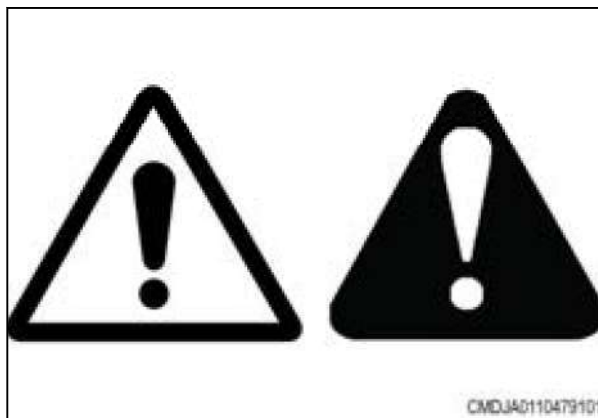


Fig. 1

1.1.2 Safety messages

The words DANGER, WARNING or CAUTION are used with the safety alert symbol. Learn to recognize these safety alerts and follow the recommended precautions and safety practices.



DANGER:
Indicates an imminently hazardous situation that, if not avoided, will result in DEATH OR VERY SERIOUS INJURY.



WARNING:
Indicates a potentially hazardous situation that, if not avoided, could result in DEATH OR SERIOUS INJURY.



CAUTION:
Indicates a potentially hazardous situation that, if not avoided, may result in MINOR INJURY.



Fig. 2

1.1.3 Informational messages

The words important and note are not related to personal safety, but are used to give additional information and tips for operating or servicing this equipment.

IMPORTANT: Identifies special instructions or procedures which, if not strictly observed, could result in damage to or destruction of the machine, process, or its surroundings

NOTE: Identifies points of particular interest for more efficient and convenient repair or operation.

1.1.4 Safety signs



WARNING:
Do not remove or obscure safety signs. Replace any safety signs that are not readable or are missing. Replacement signs are available from your dealer in the event of loss or damage. The actual location of the safety signs is illustrated at the end of this section.

Keep signs clean by wiping off regularly. Use a mild soap and water solution if necessary.

If parts have been replaced or a used machine has been purchased, make sure all safety signs are present and in the correct location and can be read. Illustrations of safety sign locations are located at the rear of this section.

Replace any safety signs that can not be read, are damaged, or are missing. Clean the machine surface thoroughly with a mild soap and water solution before replacing signs. Replacement safety signs are available from your dealer.

1.1.5 A word to the operator

It is your responsibility to read and understand the safety section in this manual and the manual for all attachments before operating this machine. Remember you are the key to safety. Good safety practices not only protect you, but also the people around you.

Study the content in this manual and make the content a working part of your safety program. Keep in mind that this safety section is written only for this type of machine. Practice all other usual and customary safe working precautions, and above all remember - safety is your responsibility. You can prevent serious injury or death.

This safety section is intended to point out some of the basic safety situations that may be encountered during the normal operation and maintenance of your machine. This section also suggests possible ways of dealing with these situations. This section is not a replacement for other safety practices featured in other sections of this manual.

Personal injury or death may result if these precautions are not followed.

Learn how to operate the machine and how to use the controls properly.

Do not let anyone operate the machine without instruction and training.

For your personal safety and the personal safety of others, follow all safety precautions and instructions found in the manuals and on safety signs affixed to the machine and all attachments.

Use only approved attachments and equipment.

Make sure your machine has the correct equipment needed by the local regulations.

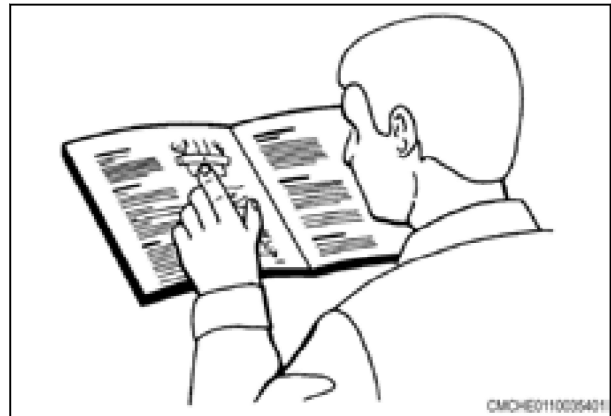


Fig. 3



WARNING:

An operator should not use alcohol or drugs which can affect their alertness or coordination. An operator on prescription or 'over the counter' drugs needs medical advice on whether or not they can properly operate machines.