

Index

A

accumulator	
charge	5-11
discharge	5-9
examine the charge pressure	5-8
install	5-13
remove	5-12
adjust	1-60
adjust the header pitch	
2009 and later axial combines	1-62
adjust the hold-down pressure for the sickle	
adjust	9-16
sickle	
adjust the hold-down pressure	9-16
adjust the roller chain	1-58, 1-83
adjust the sickle register	9-17
agricultural chemicals	1-14
auger	
adjust	1-62
assemble	3-6
disassemble	3-6
install	3-8
remove	3-3
troubleshooting	1-87
auger drive	
install	4-29
remove	4-27
torque limiter	4-32
auger drive belt tension	
adjust	1-67
auger shaft shield	1-23

B

before each season checklist	1-97
belt - auger drive	
install	4-9
remove	4-9
belt guides	
install	2-92
remove	2-91
belt supports - rear	
install	2-93
remove	2-93
bolt torque values	1-92

C

center conveyor	1-73
center crop deflector	10-5
center deck	
install	2-18
remove	2-14
center draper	
install	2-12
remove	2-10
center draper drive belt tension	
adjust	1-66

center drapers	1-73
center reel carrier	
install	8-18
remove	8-17
clogged material in header	
remove	1-52
components-drive gearcase	4-47
configure header	
2009 and after axial combines	1-37
connectors	
deutsch connector	6-9
dielectric grease	6-8
examine a connector	6-6
packard connector	6-8
pins and sockets	6-7
power cord connector	6-8
terminal numbers	6-6
continuity check	6-4
conversion table	1-94
cutter flex system	
bleed air	1-60
cutterbar	
lock and unlock	1-46
cutterbar flex pressure	
adjust for 2003 to 2008 axial combines	1-59
adjust for 2009 and later axial combines	1-58
adjust for ideal	1-58
cylinder stop	
header lift	1-22

D

daily checklist	1-97
decals - safety	
operators manual	1-28
decals	
information	1-30
safety	1-26
disposal of waste	1-5, 1-34
divider rod	10-4
draper	
inspect	2-51
remove	2-49
draper belt	
check	1-38
draper care	1-52
draper drive	
install	4-22
remove	4-19
draper drive - primary	
assemble	4-15
disassemble	4-14
install	4-16
remove	4-11
draper drive belt - center	
install	4-8
remove	4-7
draper drive belt - left and right	
install	4-5

remove	4-3	install	5-16
draper drive roller - side draper		remove	5-15
install	2-75	float/reel valve	
remove	2-55	assemble	5-5
draper drive shields	1-23	disassemble	5-4
draper speed	1-52	inspect	5-4
drive gearcase		install	5-6
assemble	4-48	remove	5-3
disassemble	4-44	float/reel valve assembly	
inspect	4-48	troubleshooting	1-88
install	4-50	flying debris	1-13
remove	4-41		
drive roller components for the center deck	2-26	G	
drive roller for the center deck		gear box oil level	1-79
assemble	2-41	general information	1-10
disassemble	2-26	general lubrication	1-74
drive roller-side draper		general maintenance information	1-17
assemble	2-66	guards	9-31
disassemble	2-62		
drive shaft		H	
install	4-37	handrails	1-14
remove	4-34	harness and connector identification	11-4
torque limiter	4-36	header	
drive shield		break in the	1-38
install	7-5	install	1-40
remove	7-5	lift cylinder stop	1-22
		remove	1-43
E		header configuration	1-37
electrical		header depth	1-69
basic troubleshooting procedures	6-3	header extremity lights	1-48
tools	6-4	header pitch	
electrical components		adjust for ideal combines	1-61
location	6-11	header tilt	1-73
electrical diagram	11-7	header transport	1-74
end of season checklist	1-97	header width	1-70
end panels		high pressure leaks	1-19
install	7-9	hold-downs	9-31
left end panel	7-9	hydraulic fluid pressure	
remove	7-7	warning	1-28
right end panel	7-9	hydraulic interface group	
end shield		install	2-6
install	7-4	remove	2-3
remove	7-3	hydraulic schematic	11-3
end shields	1-23		
exhaust warning	1-13	I	
		idler roller	
F		assemble	2-32
feather sheets		disassemble	2-22
install	2-89	idler roller - side draper	
remove	2-89	install	2-87
feeder chain speed	1-51	remove	2-84
fire prevention and first aid	1-18	idler roller components for the center deck	2-22
flighting filler	1-49	idler roller-side draper	
float cylinder-inner tilt arm		assemble	2-86
assemble	5-17	disassemble	2-86
disassemble	5-16	information messages	1-7
inspect	5-17	informational decals	1-30
float cylinder-outer tilt arm		install the sickle	9-8
assemble	5-19	intended use	1-5, 1-34
disassemble	5-18	introduction	1-34
inspect	5-18	introduction to the manual	1-5
float cylinders			

K

kits	
required for the header	1-38
knife back rollers for sch	9-31

L

left hand and right hand draper	
install	2-53
left reel carrier	
install	8-13
remove	8-12
lift cylinder	
install	8-30
lift cylinders	
remove	8-29
lighting	
test	6-16
lock and unlock the cutterbar	1-46
lockout variable speed drive	1-50
lubricate and clean the sealed chain	1-81
lubrication and maintenance	1-75
lubrication details	1-75

M

machine identification	1-35
main drive belt tension	
adjust	1-65
manual, about this	1-9

P

page numbers, explanation	1-5
parking stands	1-39
personal protective equipment	1-11
pick up reel	1-70
potentiometers	
test	6-13
power take off (pto) drive shafts	
assemble	4-103
disassemble	4-97
inspect	4-102
prepare for operation	1-10
pressure transducer	
test	6-14
proper disposal of waste	1-5, 1-34

R

recommended header/combine usage	1-34
reel	
inspect	8-5
install	8-6
remove	8-3
reel actuator	
install	8-26
remove	8-25
reel divider	10-3
reel drive	1-71
reel drive shield	1-24
reel height control	1-71
reel lift cylinder	

disengage the stop	1-21
engage the stop	1-21
reel lift master	
assemble	5-33
disassemble	5-33
reel motor	
assemble	5-28
disassemble	5-25
install	5-29
remove	5-23
timing procedure	5-29
reel position	1-55
reel relief valve	
adjust	5-22
assemble	5-21
disassemble	5-21
install	5-20
remove	5-20
reel speed	1-45
reel speed pickup	
adjust	8-34
install	8-35
remove	8-35
reel speed sensors	
adjust	1-68
reel support arm	
install	8-22
remove	8-20
reflector, orange	
safety sign	1-30
reflector, red	
safety sign	1-30
reflector, yellow	
safety sign	1-29
replace the reel tine	8-10
replace the shear bolt for the sickle drive	9-44
replacement parts	1-20, 1-34
required kits to install the header on the combines	
1-38	
right and left draper tension	
adjust	1-64
right reel carrier	
install	8-15
remove	8-13
roller chain don'ts	1-82
roller chain maintenance	1-81

S

Safety and informational signs	1-26
safety decal	
operators manual	1-28
safety messages	1-7
safety signs	1-7
safety symbol	1-7
sch sickle sections	
replace	9-24
seat instructions	1-12
serial number description	1-35
serial number plate	1-35
set the sickle time	1-68, 9-44
shield	
reel drive	1-24
shield and guards	1-12
shields	

auger shaft	1-23
draper drive	1-23
end	1-23
sickle	
inspect	9-6
remove	9-3
sickle drive box	
assemble	4-63
components	4-61
disassemble	4-57
inspect	4-62
install	4-66
remove	4-55
sickle drive gearbox	
assemble	4-78
components	4-92
disassemble	4-71
install	4-93
remove	4-68
sickle storage	1-47
side drapers	1-73
single point connector	8-32
skid plates	
install	2-100
remove	2-95
solenoid coil	
test	6-15
solenoid visually	
test	6-15
solenoid voltage	
test	6-15
special tools	
sickle drive box	4-62
splices	11-4
stabilizer wheels	10-6
standard sickle sections	
replace	9-17
synchronize the reel lift arms	1-53, 8-28

T

table of contents, locations	1-5
technician, a word to	1-8
tilt arm - sickle drive	
install	2-109
tilt arm assembly	
install	2-115
remove	2-104
tilt cylinder	
install	5-37
remove	5-36
tine pitch	1-60
tine tube	
install	8-10
remove	8-9
tire safety	1-20
top cover	1-25
travel on public roads	1-15

U

u-joint	
replace	4-118
u-joint drive shaft	

components	4-111
u-joint drive shaft assembly	
inspect	4-115
install	4-116
remove	4-112
units of measurement	1-5, 1-34
usage	1-34

V

variable speed belt	
adjust	1-67
variable speed drive lockout	1-50
voltage check	6-5

W

warning - crushing hazard	1-29
warning - entanglement hazard	1-29
warning - hydraulic fluid pressure	1-28
wear plates	9-31
weights	1-70
wheels	1-74
wire colors	11-4
word to the technician	1-8

