



EN

Bobcat®

Operation & Maintenance Manual



Telescopic Handler

(TL30.70DB) S/N B4AY11001 - B4AY15000, B4AY15001 & Above

(TL30.70HB) S/N B4AZ11001 - B4AZ15000, B4AZ15001 & Above



CONTENTS

FOREWORD.....	5
SAFETY AND TRAINING RESOURCES	21
LOAD CHARTS.....	35
OPERATING INSTRUCTIONS	39
PREVENTIVE MAINTENANCE	147
SYSTEM SETUP AND ANALYSIS	199
SPECIFICATIONS	217
WARRANTY	235
ALPHABETICAL INDEX.....	201

REFERENCE INFORMATION

Write the correct information for YOUR Bobcat telescopic handler in the spaces below. Always use these numbers when referring to your Bobcat telescopic handler.

Telescopic Handler Serial Number

Engine Serial Number

NOTES:

YOUR BOBCAT DEALER:

ADDRESS:

PHONE:



Bobcat Company
P.O. Box 128
Gwinner, ND 58040-0128
UNITED STATES OF AMERICA

Doosan Bobcat EMEA s.r.o.
U Kodetky 1810
26312 Dobris
Czech Republic

* If EC-equipped machine