

SM024
FD50/80.5-BE2

FORKLIFT TRUCK

FG50/60/70-5

FD50/60/70-5

FD50E/60E/70-5

FD60H/70H/80H-5

KOMATSU FORKLIFT USA

SECTION INDEX

00. FOREWORD

01. GENERAL AND SPECIFICATIONS

10. REMOVAL AND INSTALLATION

20. DISASSEMBLY AND ASSEMBLY

30. STRUCTURE AND FUNCTION

40. MAINTENANCE AND INSPECTION GUIDE

50. CONVERSION TABLE



FOREWORD

Proper operation, maintenance, troubleshooting and repairs are necessary to preserve the performance of vehicles and engines (engine-powered forklift trucks) over a long period of time and to ensure that fault and breakdowns do not occur.

The object of this Shop Manual is to provide the information necessary especially in connection with the performance of inspections and repairs mainly in the maintenance areas.

For this purpose, it includes sections on "General Specifications", "Checks and Adjustments", "General Disassembly and Assembly", "Disassembly and Assembly of Components" and the "Electrical System".

Maintenance data necessary for the performance of maintenance on the machines is also included, but reference should be made to the Operation and Maintenance Manual for further details.

Reference should also be made to this manual in connection with correct operation of the machine.

The content of the items mentioned above is as follows.

General and Specifications

This chapter indicates the name of each part of the machine, and the installation positions of the operating devices and instruments.

Checks and Adjustments

This chapter gives the details required for the disassembly and reassembly of machines such as tightening torque, allowances, as well as the wear limits of the parts. However, when necessary, data in line with the procedure mentioned in the following sections, "General Disassembly and Assembly" and "Disassembly and Assembly of Components" is indicated.

General Disassembly and Assembly

The procedure when disassembling a machine comes within one of the two following categories. In the first, the machine, including the frame, is made up roughly of seven component parts, i.e.: a mast section, a cylinder section, a reach leg, a transfer section, a motor section, a pump section and a frame.

This chapter contains details of how to disassemble and assemble these components. The other category of disassembly and assembly is the disassembly and assembly of component parts referred to in the following chapter.

Disassembly and Assembly of Components

This chapter provides additional explanation concerning those of the seven component parts, as touched upon in the preceding chapter, whose disassembly procedure is particularly complicated and for which special care is needed when adjusting. Mention is also made of the functions and structures of the component parts.

Electrical system

Explanation is provided in this chapter of the electrical parts used inside the machine. Troubleshooting when a breakdown occurs is also described.

Reference should be made to the "General Shop Manual" for safe operating and working methods which serve as the basis for the performance of repair and inspection works on machines.

STANDARD TIGHTENING TORQUE FOR BOLTS

TIGHTENING TORQUE when using torque wrench or spanner shall be in accordance with Table. This torque shall be used when TIGHTENING TORQUE of especially narrow range is required.

1. In the case of using of impact wrenches or spanners

Unit: kg.m

			 
Thread dia.	Width across flats		S43C, SMn34CH, SMn40CH, SCM3H or superior ones
	Conventional threads	ISO threads	
			Range
6	10	10	0.9 ~ 1.5 1.2
8	14	13	1.5 ~ 3.5 2.5
10	17	17	3.5 ~ 7.5 5.5
12	19	19	5.5 ~ 12.5 9.0
14	21	22	8.5 ~ 20.0 14.0
16	23	24	15.0 ~ 31.5 23.5
18	26	27	20.5 ~ 43.5 32.0
20	29	30	32.5 ~ 62.0 47.0
22	32	32	48.0 ~ 84.5 66.5
24	35	36	60.0 ~ 105 82.5
27	41	41	90.0 ~ 150 120
30	46	46	115 ~ 195 155
33	50	50	150 ~ 250 200
36	54	55	190 ~ 310 250
39	58	60	230 ~ 370 300

2. In the case of using of torque wrenches

Unit: kg.m

				
Thread dia.	Width across flats		S43C, SMn34CH, SMn40CH, SCM3H or superior ones	
	Conventional threads	ISO threads		
			Range	Target
6	10	10	1.2 ~ 1.5	1.35
8	14	13	2.8 ~ 3.5	3.2
10	17	17	6 ~ 7.5	6.7
12	19	19	10 ~ 12.5	11.5
14	21	22	16 ~ 20.0	18
16	23	24	25 ~ 31.5	28.5
18	26	27	35 ~ 43.5	39
20	29	30	50 ~ 62.0	56
22	32	32	67.5 ~ 84.5	76
24	35	36	84 ~ 105	94.5
27	41	41	120 ~ 150	135
30	46	46	155 ~ 195	175
33	50	50	200 ~ 250	225
36	54	55	250 ~ 310	280
39	58	60	295 ~ 370	335

This table does not apply to the bolts with which nylon packings or other non-ferrous metal washers are to be used, or which require to be tightened to an otherwise specified torque.



Conventional screw threads







ISO screw threads

PRECAUTIONS WHEN PERFORMING THE SERVICE WORK

Always pay attention to 'Safety' before starting any work — this is important.
 Never attempt any work where there is danger to yourself or to other persons.
 Whenever work requiring safety precautions are described in this manual, a flag mark  is inserted, so always make doubly sure that safety measures are taken.
 Other unmarked work should always be performed after studying and using your common sense to prevent accidents.

DESCRIPTION OF THE SYMBOLS

The symbols described below are used in this manual for convenience and better understanding.

Symbol	Item	Description
	Safety	Special safety precautions are needed to perform the work.
	Note	Special technical precautions are needed to perform the work.
	Tightening Torque	Fastening parts that require specified tightening force when assembling.
	Weight	Weight of parts or systems
	Coat	Places to be coated with adhesives, etc. when assembling.
	Bolt	Quantity of bolts when disassembling or assembling.



01. GENERAL AND SPECIFICATIONS

Overall dimensions and specifications 01- 2



OVERALL DIMENSIONS AND SPECIFICATIONS

FD50E-5

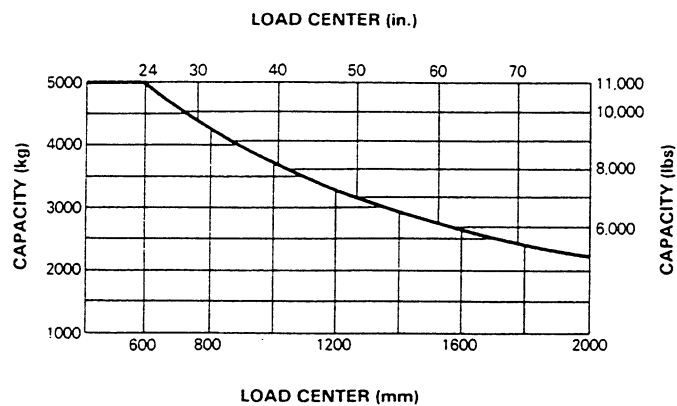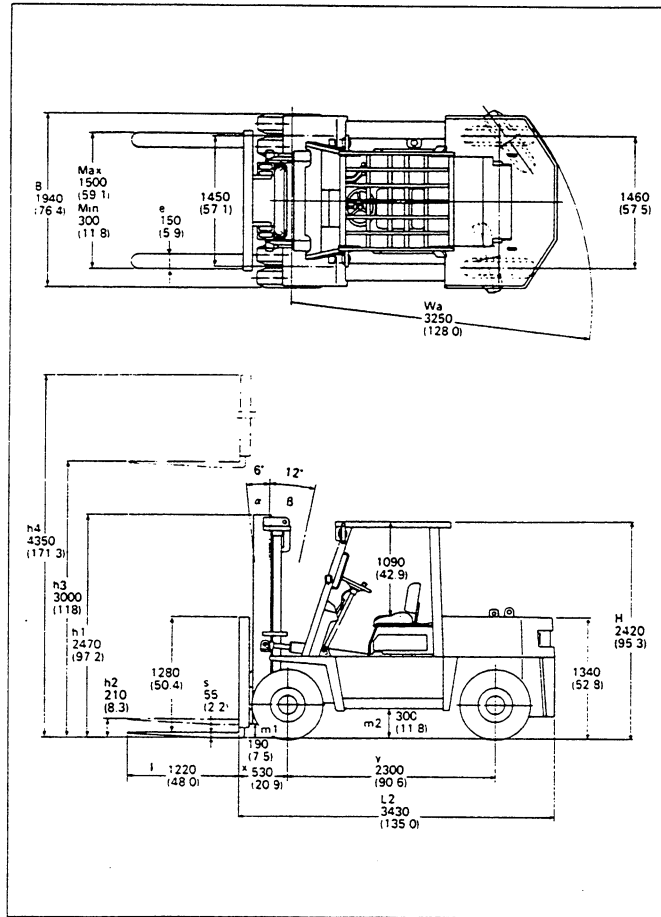

Capacities shown are for trucks equipped with 2-stage view mast up through 5000mm (197in.) maximum fork height, 1500mm (59.1in.) carriage, 1220mm (48in.) forks. Contact your distributor or dealer for capacity information with other equipment.

GENERAL AND SPECIFICATIONS

FD50E-5



Characteristics	1	Model	Manufacturer's designation		FD50E-5
	2	Capacity	Capacity at 600mm (24in.) Load Center		kg (lbs)
	3	Power Type	Diesel, Gasoline, LPG		5000 (11,000)
	4	Tire Type	Solid, Pneumatic		Diesel
	5	Operator Type	Driver Standing, Sitting		Pneumatic
	6	Wheels (* = driven)	Number front/rear		Sitting
Dimensions	7	Lift	h ₁	Max. Fork Height	mm (in.)
	8		h ₂	Free Lift	mm (in.)
	9	Forks	s.e.l.	Thickness x Width x Length	mm (in.)
	10	Tilting Angle	α / β	Forward/Backward	55x150x1220 (2.2x5.9x48.0)
	11		H	Height, Overhead Guard	6/12
	12		L ₂	Length to face of forks	2420 (95.3)
	13	Overall Dimensions	B	Width	3430 (135.0)
	14		h ₁	Height, Mast lowered	1940 (76.4)
	15		h ₁	Height, Mast extended	2470 (97.2)
	16		Wa	Outside	4350 (171.3)
	17	Turning Radius	X	From Center of front axle	3250 (128.0)
	18	Load Distance	X	From Center of front axle	530 (20.9)
Performance	19	Speeds	Travel	Forward	Loaded 1st/2nd km/h (mph)
	20			Unloaded 1st/2nd km/h (mph)	10/25 (6.2/15.5)
	21			Reverse	Loaded 1st/2nd km/h (mph)
	22			Unloaded 1st/2nd km/h (mph)	10/27 (6.2/16.8)
	23		Lifting	Loaded/Unloaded	10/25 (6.2/15.5)
	24			Lowening Loaded/Unloaded	10/27 (6.2/16.8)
	25	Max. Drawbar Pull			mm/s (fpm)
	26	Gradeability	Loaded/Unloaded		350/360 (69/71)
	27	Service Weight			400/400 (79/79)
	28	Axle Loading	Loaded front/rear		kg (lbs)
Chassis & Wheels	29		Unloaded front/rear		6000 (13,230)
	30	Tire Size	Front		%
	31		Rear		53/26
	32	Wheelbase	y		6700 (14,770)
	33	Tread	front/rear		10620/1080 (23,410/2,380)
	34	Ground Clearance	m ₁	Lowest point	3170 3530 (6,990 7,780)
	35		m ₂	Center of frame	7.50-15-12PR (I)
	36	Brakes	Service		7.50-15-12PR (II)
	37	Steering	Parking		2300 (90.6)
	38		Type		1450/1460 (57.1/57.5)
Drive	39	Battery	Voltage/Capacity 20-hour rating		190 (7.5)
	40		V Ah		300 (11.8)
	41	Internal Combustion Engine	Make/Model		Hydraulic, Powered
	42		Rated Horsepower/RPM		Mechanical
	43		Max. Torque/RPM		Power Steering
	44		Number of cylinders/Displacement		24/60
	45		Cylinder Bore x Stroke		KOMATSU 5D95L
	46		Fuel Tank Capacity		82/2150
	47		Air Cleaner		28 (203)/1500
	48		Clutch		6/4890 (298)
	49	Hydraulic	Max. Pressure		95x115 (3.7x4.5)
	50		Tank Capacity		120 (32)

ANSI AND INSURANCE CLASSIFICATION

Overhead guard on standard truck meets all applicable mandatory requirements of Part II-ANSI-B 56.1 1969-1975 Safety Standard for Powered Industrial Trucks. Underwriters Laboratories requirements as to fire hazard only for D classification available.

Performance may vary due to operating conditions. The performance shown represents nominal values under typical operating conditions. Most values shown in this publication are rounded. Therefore, direct conversion between metric and imperial may be slightly different from those shown. Specifications are subject to improvements and changes without notice.

FD60E-5

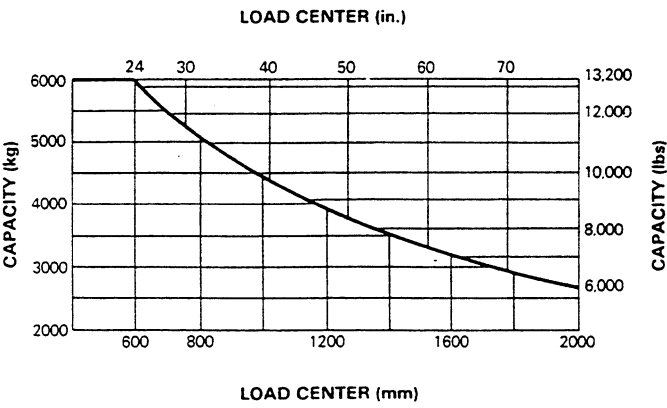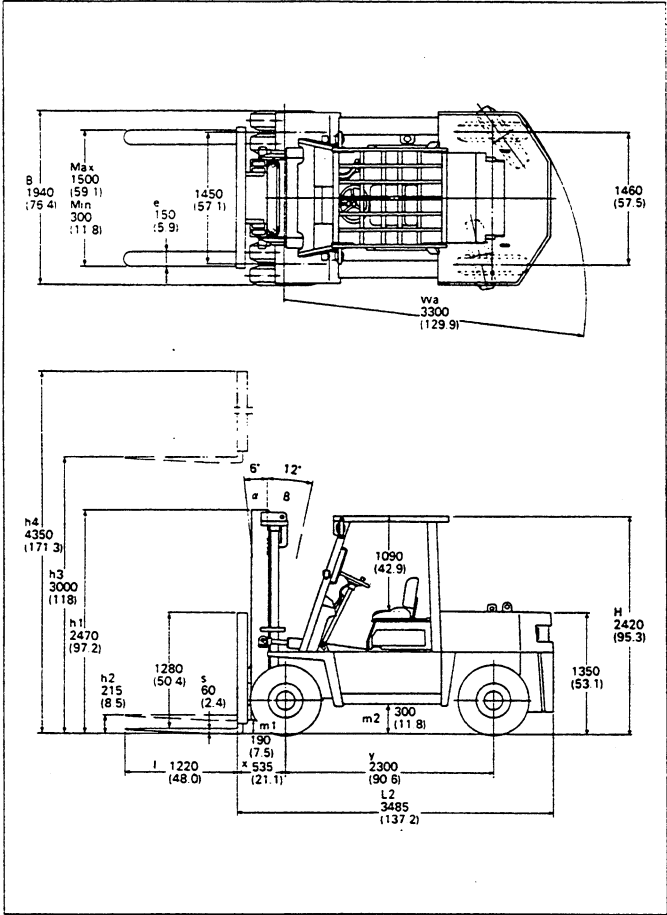

Capacities shown are for trucks equipped with 2-stage view mast up through 4500mm (177in.) maximum fork height, 1500mm (59.1in.) carriage, 1220mm (48in.) forks. Contact your distributor or dealer for capacity information with other equipment.