



PARTS MANUAL

ACTOR 5520 COMBINE

PRINTED BY :
heavy-equipmentmanual.com

ACTOR 5520

CAB

OPERATING PLATFORM

DRIVING SEAT.....	4G.13.20000
STEERING COLUMN.....	4G.13.20000
DRIVER'S SEAT.....	4G.13.20000
GEAR SHIFTING.....	4G.13.20000
GEAR SHIFTING.....	4G.13.20000
HYDRAULIC BRAKING SYSTEM.....	4G.13.20000
HYDR. CLUTCH CONTROL ASSEMBLY.....	4G.13.20000
PARKING BRAKE.....	4G.13.20000
COLLECTION TANK.....	06255073.A

DRIVER'S CAB

CAB FRAME / WINDSCREEN.....	4G.14.20000
CAB.....	4G.14.20000
CAB MIRROR SUPPORT.....	4G.14.20000
DRIVER'S CAB WINDSCREEN WIPER.....	4G.14.20000
DRIVER'S CAB ROOF.....	4G.14.20000
DRIVER'S CAB ROOF / FAN.....	4G.14.20000
HEADLAMP COMPONENTS.....	16037017.A

ACTOR 5520

Section: CAB


Ref: 4G.13.20000

DRIVING SEAT

Fig.	P/n	QTY	Name
------	-----	-----	------

Notes:

[ACTOR 5520]

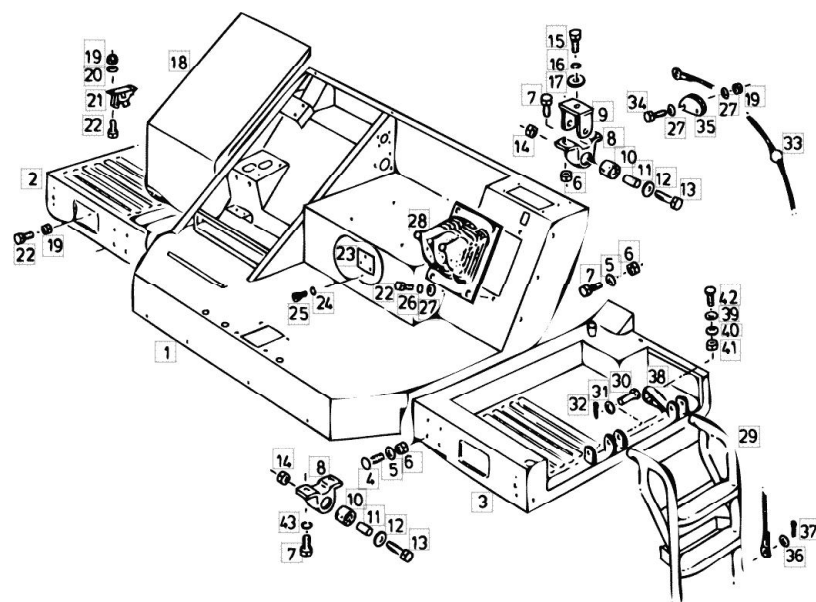

1	16002287	1	plate
2	16004430	1	platform
3	16051055	1	platform
4	01138843	8	screw m 10 x 30
5	01107165	10	washer 10.5
6	06209768	14	nut m 10, d985
7	01112429	8	screw m 10 x 30, d933
8	06515741	4	bearing block
9	06518458	2	bracket
10	06240287	4	rubber mount Ø 14 / Ø 40 x 40
11	06515740	4	bushing 20x57
12	06214206	4	washer 13.2
13	01111545	4	screw m12x90 d931
14	06209769	8	nut m 12, d985
15	01112529	2	screw m 12 x 30, d933
16	01102801	2	washer 12
17	06214210	2	washer 13 x 40 x 5.0, zn
18	16005057	1	lining
19	01114357	6	nut m 6, d985
20	01107158	2	washer 6.6, d125
21	04309542	1	plug
22	01103316	8	screw m 6 p.1.0 x 16
23	16004861	1	cap
24	01102795	3	ring 4.3
25	01173052	3	screw m 4 x 10
26	01102797	4	washer 6, d128
27	06214189	4	washer 6.4
28	06546334	1	guard
28.1	16051054	1	shaker coating
28.2	16010268	1	rail
29	06521382	1	climbing steps
30	06210018	2	pin
31	01106404	2	split pin
32	01106447	2	split pin 4 x 20
33	06543591	1	rope
34	01112276	2	screw m 6 p.1 x 35
35	06515685	1	terminal
36	06214192	1	washer 8.4
37	01106404	1	split pin
38	16006233	1	contact surface
39	01133726	1	washer 13


ACTOR 5520

Section: CAB

Ref: 4G.13.20000

DRIVING SEAT

Fig.	P/n	QTY	Name
40	06214192	1	washer 8.4
41	01104944	1	nut m 8, d985
42	01137624	1	screw m 8 x 25
43	01102800	4	washer 10.2

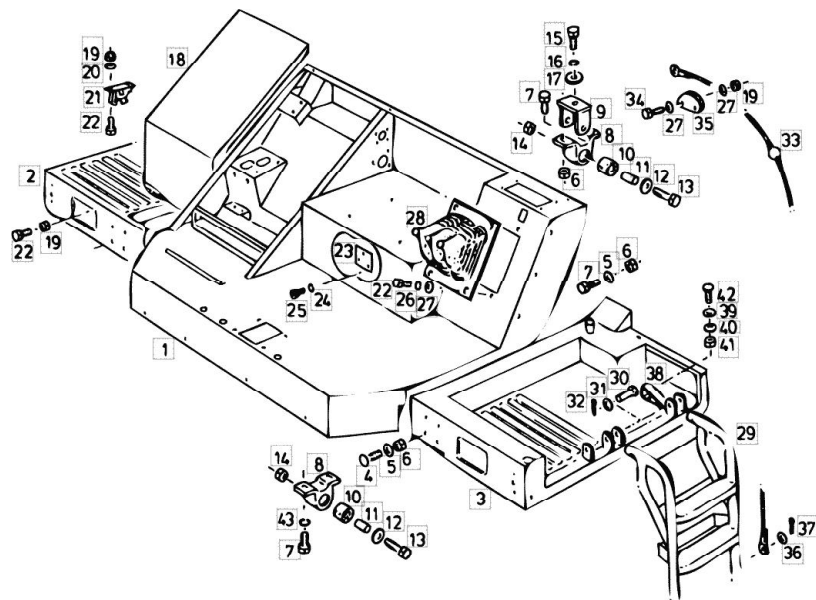


Section: CAB

STEERING COLUMN

Fig.	P/n	QTY	Name
------	-----	-----	------

Notes:


POS.NR. 42 - 49 ON REQUEST THROUGHTUT MONITOR ----- [ACTOR 5520]

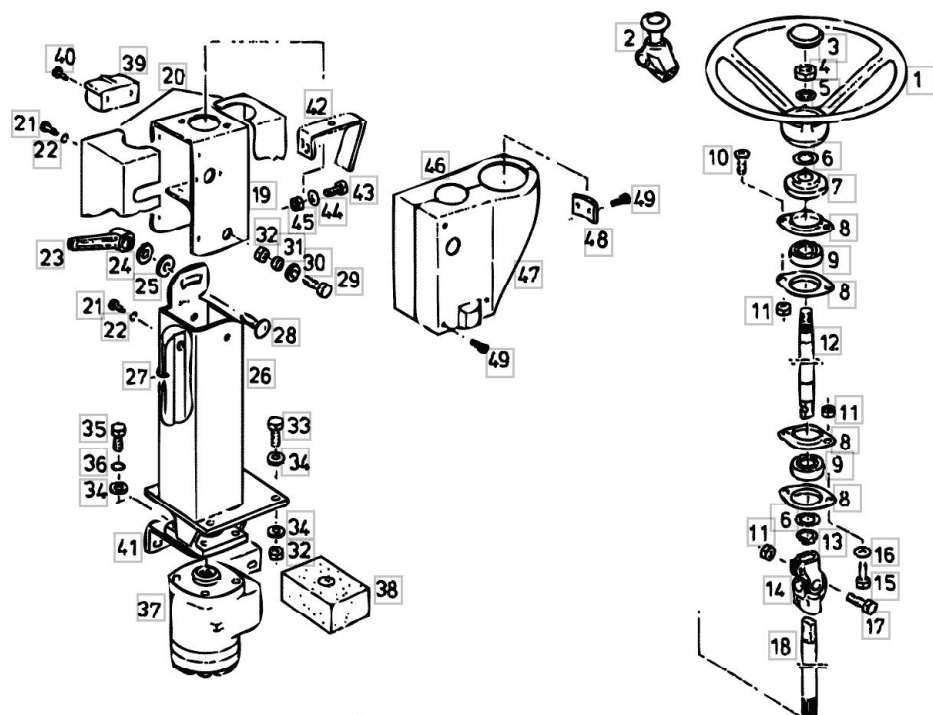

1	16052078	1	steering wheel
2	06256102	1	grip
3	04372644	1	cap
4	01138932	1	nut m 18 p.1.5
5	01102804	1	spring washer a18 d128
6	06214475		shim 25x35x0,3
6.1	06214477		washer 25 x 35 x 1.0
6.2	06214588		washer 25x35x2
7	16003909	1	ring
8	06215801	4	flange eb 25
9	01145513	2	bearing 25
10	01179541	2	screw
11	01104944	10	nut m 8, d985
12	16003916	1	mandrel
13	01107737	1	ring 25 x 1,2 d471
14	06261071	1	constant-velocity joint
15	01112322	2	screw m 8 p.1.25 x 20
16	01107163	2	washer 9, d126
17	01112350	2	screw m 8 x 35
18	16003917	1	shaft
19	16007360	1	valve
20	16006937	1	panel
21	01173052	4	screw m 4 x 10
22	01102795	4	ring 4.3
23	06544838	1	lever
24	06214206	1	washer 13.2
25	06214229	1	washer 21 x 32 x 2.0
26	16021712	1	steering column
27	16025809	1	rail
28	06207554	1	screw m 12 x 25
29	01112412	2	screw m 10 x 22, d933
30	01107165	2	washer 10.5
31	06283060	2	bushing
32	06209768	2	nut m 10, d985
33	01112333	4	screw m 8 x 25, d933
34	06214192	8	washer 8.4
35	01112317	4	screw
36	01102799	4	washer 8, d128
37	06538665	1	cylinder B D17
38	16003746	1	plate

STEERING COLUMN


Fig.	P/n	QTY	Name
39	16027407	1	ashtray
40	01151385	2	screw m 3.5 x 9.5
41	16051281	1	bracket
42	16025185	1	bracket
43	01112264	2	screw m 6 x 20, d933
			W
			POS.NR. 42 - 49
			ON REQUEST
			THROUGHTUT MONITOR
44	01107158	2	washer 6.6, d125
			W
45	01114357	2	nut m 6, d985
			W
46	16031680	1	lining sx/lh/li
			W
47	16031681	1	lining dx/rh/re
			W
48	16025193	1	small plate
			W
49	01173052	8	screw m 4 x 10
			W

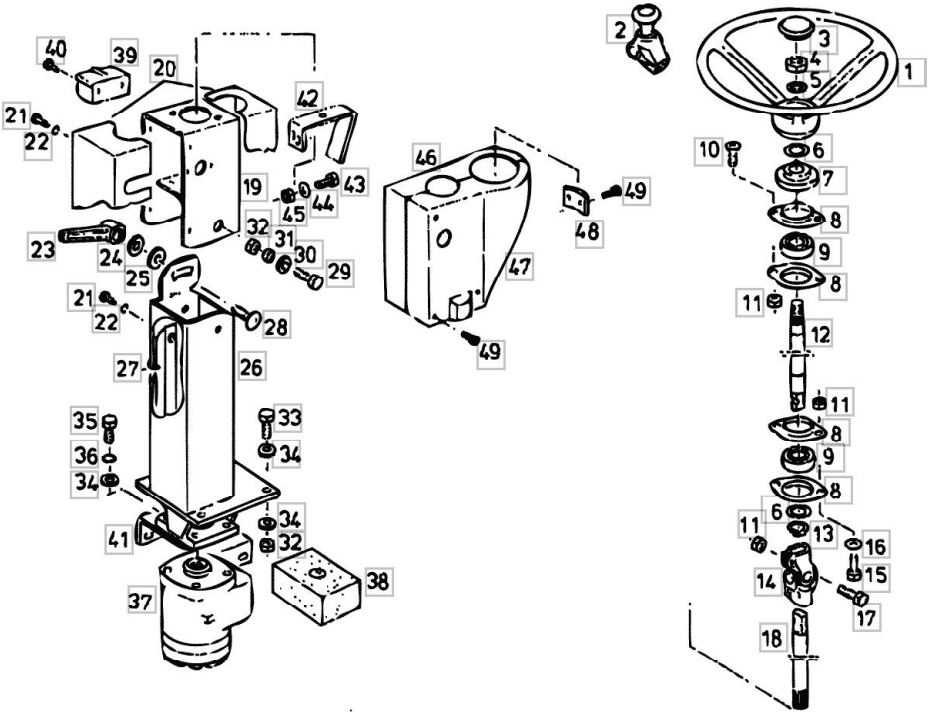

Section: CAB

DRIVER'S SEAT

Fig.	P/n	QTY	Name
Notes:			
[ACTOR 5520]			
1	16026567	1	seat
2	04418264	1	backrest
3	04418263	1	padding
4	04418343	1	guard
5	04311768	1	spring
6	04350980	1	small piston
7	16026569	1	driver's seat
			W
			G 7 - 15
8	04418265	1	adapter
			W
9	04418264	1	backrest
			W
10	04418284	1	armrest
			W
11	04418263	1	padding
			W
12	16031515	1	guard M 5650
			W
13	04401402	1	spring
			W
14	04418241	1	shock absorber M 5650
			W
15	04401404	1	compressor
			W
16	06527000	1	cable harness
			W
17	06526998	1	electric cable
			W
18	06526996	1	electric cable
			W

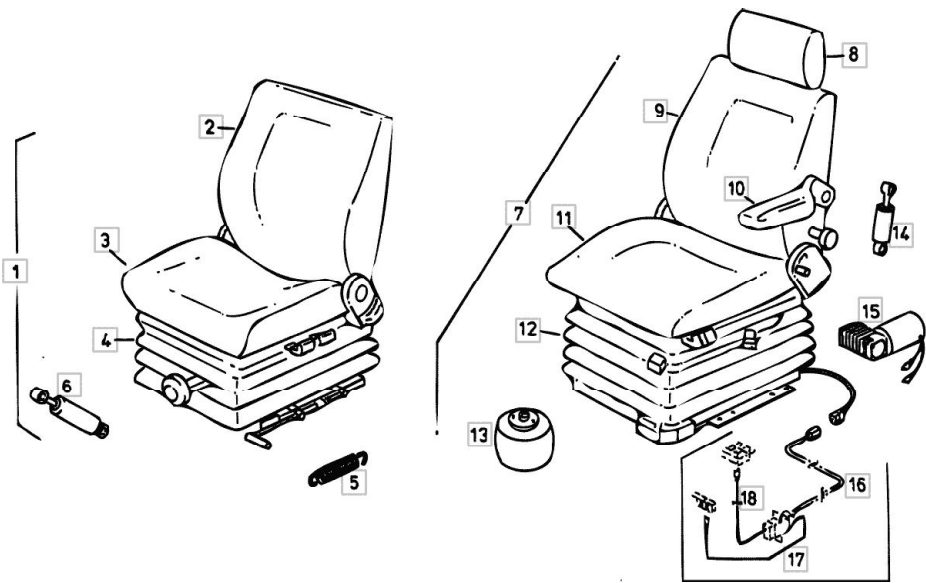

ACTOR 5520

Section: CAB


Ref: 4G.13.20000

GEAR SHIFTING

Fig.	P/n	QTY	Name
------	-----	-----	------

Notes:

[ACTOR 5520]

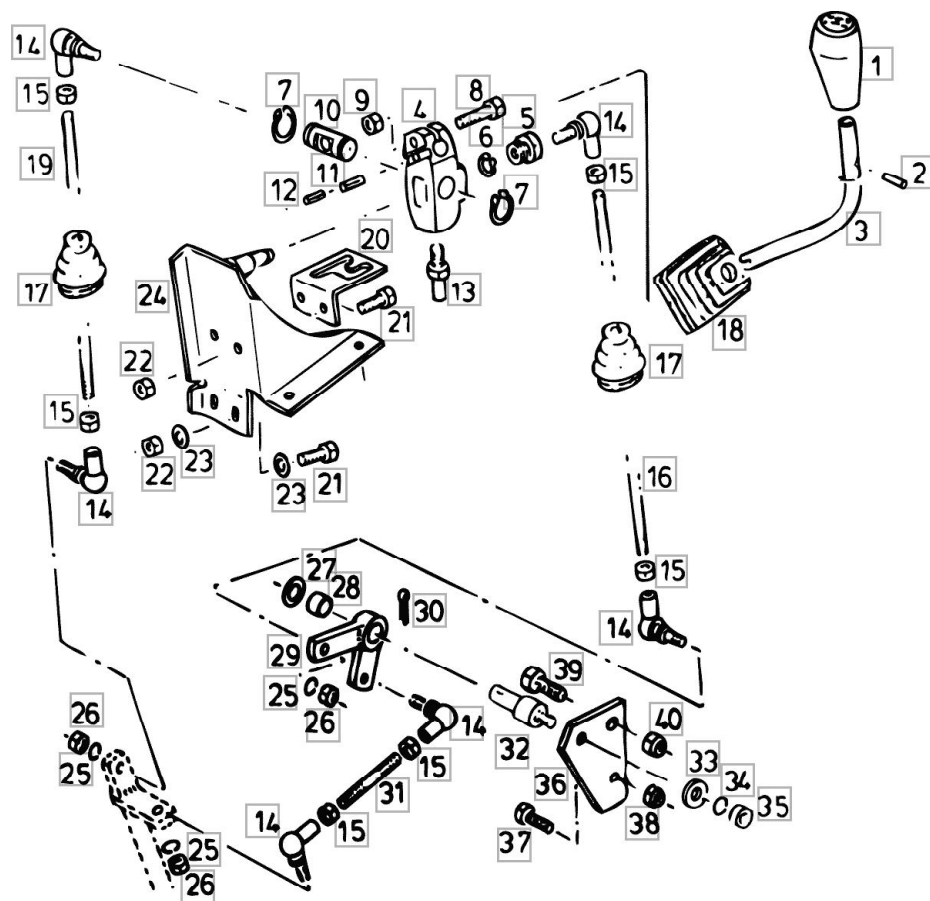


1	16001901	1	knob TYP 5510
1.1	16034157	1	knob TYP 5520
2	01136968	1	pin
3	16000680	1	tube
4	16000671	1	bearing
5	16000675	1	vent
6	01107724	1	circlip
7	01107746	2	circlip
8	01111308	1	screw m 10 x 50
9	01102659	1	nut m 10, d934
10	16000676	1	pin
11	01115457	1	pin
12	01157314	1	grub screw 3,5x36 d1481
13	16000674	1	pin
14	01127748	4	joint as16 d71802
15	01102659	4	nut m 10, d934
16	16051037	1	rod m10
17	16051041	2	guard
18	16000660	1	bellows
19	16051038	1	rod m10
20	16000679	1	support TYP 5510
20.1	16034154	1	square TYP 5520
21	01112322	6	screw m 8 p.1.25 x 20
22	01104944	14	nut m 8, d985
23	01174909		disc 8,5 x 22 x 2,5
24	16004474	1	console
25	01102800	4	washer 10.2
26	01102659	4	nut m 10, d934
27	06214229	1	washer 21 x 32 x 2.0
28	06215704	1	bushing 20 x 23 x 25
29	16051039	1	lever
30	01122072	1	split pin 5x32 d94
31	16051042	1	rod m10
32	16034177	1	pin
33	06214206	1	washer 13.2
34	01102801	1	washer 12
35	01112858	1	nut m 12, d934

Section: CAB
 GEAR SHIFTING

Ref: 4G.13.20000

Fig.	P/n	QTY	Name
36	16051044	1	plate
37	01112429	1	screw m 10 x 30, d933
38	06209768	1	nut m 10, d985
39	01112670	1	screw m16x30 d933
40	01127856	1	nut m 16, d985

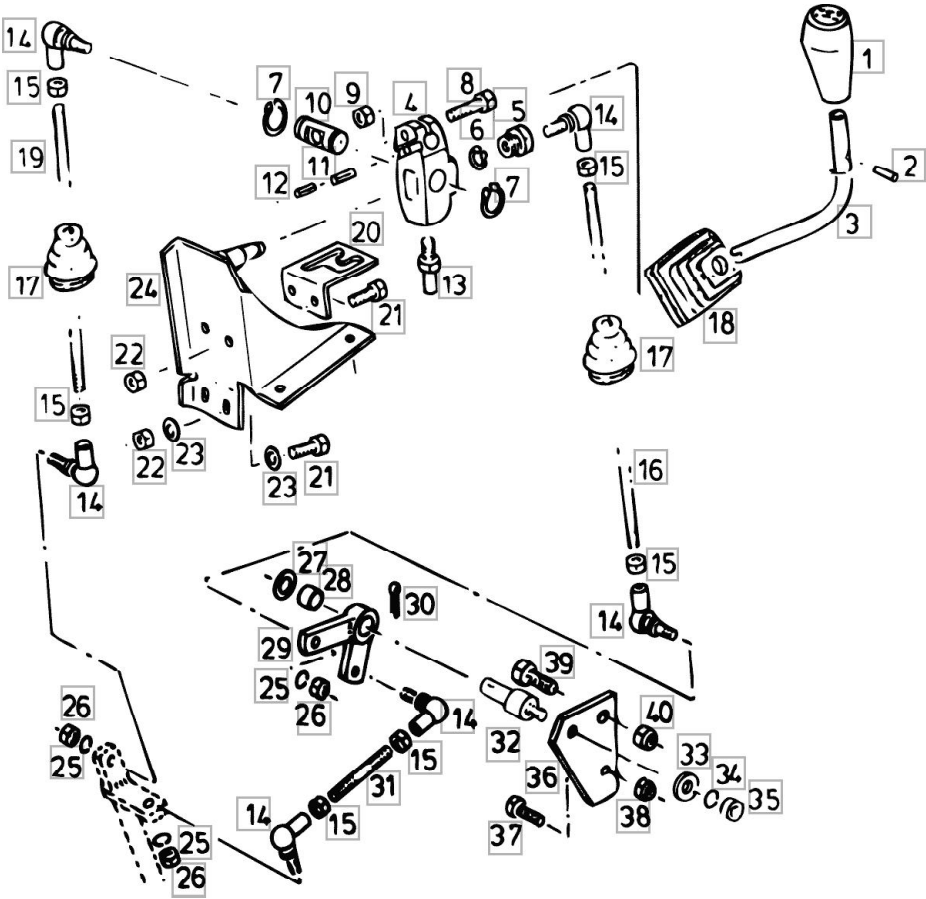

ACTOR 5520

Section: CAB


Ref: 4G.13.20000

GEAR SHIFTING

Fig.	P/n	QTY	Name
------	-----	-----	------

Notes:

[ACTOR 5520]

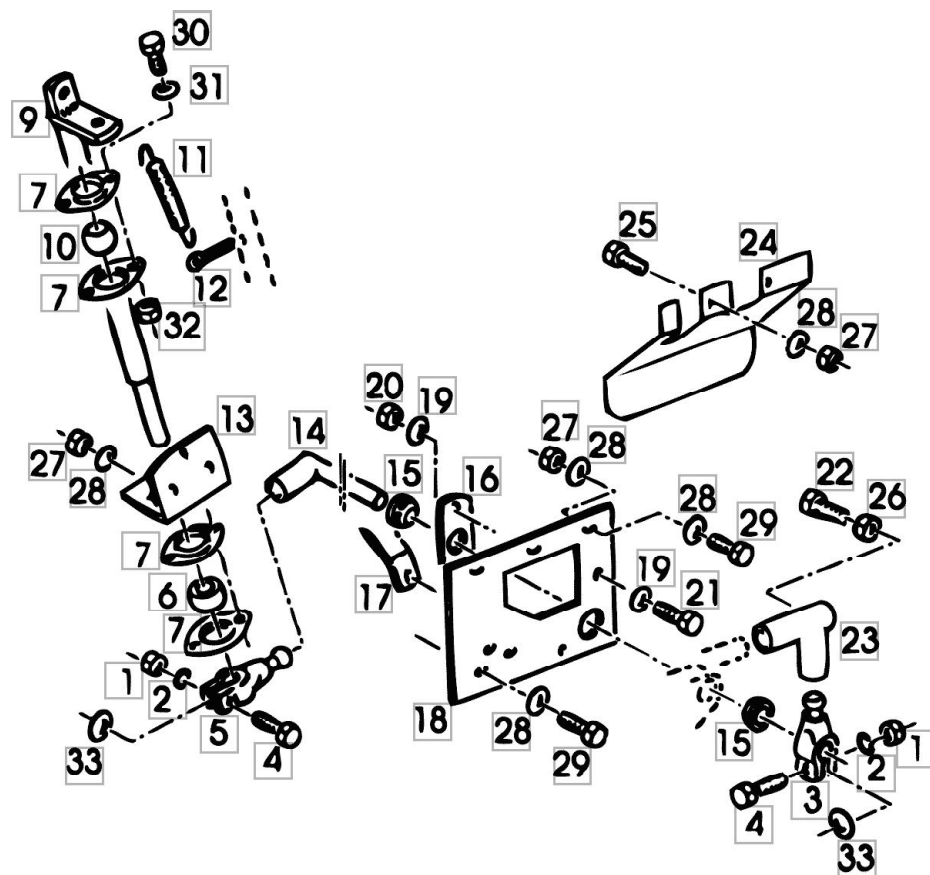

1	01139401	2	nut m10 d934-10
2	01102800	2	washer 10.2
3	06519181	1	pin
4	01125600	1	screw
5	06508950	1	pin
6	06519285	1	ball
7	01141527	4	flange
9	16013062	1	rod
10	06518462	1	ball
11	06215523	1	spring
12	01140002	1	split pin 5 x 45 d94
13	06545781	1	bracket
14	06545591	1	shaft
15	06564092	2	bush
16	06546300	1	plate
17	16014675	1	brace
18	16013056	1	plate
19	01107165	4	washer 10.5
20	06209768	2	nut m 10, d985
21	01112429	2	screw m 10 x 30, d933
22	06546349	1	screw m 12 x 45 10.9
23	06545587	1	lever
24	06545786	1	plate
25	01112322	2	screw m 8 p.1.25 x 20
26	01125801	1	nut m12 d934-10
27	01104944	7	nut m 8, d985
28	06214192	16	washer 8.4
29	01112341	5	screw m 8 x 30, d933
30	01112264	4	screw m 6 x 20, d933
31	01107158	4	washer 6.6, d125
32	01114357	4	nut m 6, d985
33	01107165	2	washer 10.5