

Page Title	Page Number
CYLINDER BLOCK (PERKINS GAS)	2
CRANKSHAFT AND BEARINGS, FLYWHEEL (PERKINS GAS)	5
PISTONS, CONNECTING RODS AND BEARINGS (PERKIN GAS)	6
CAMSHAFT, TIMING GEARS AND CASE (PERKINS GAS)	9
CYLINDER HEAD, COVER, VALVES, ROCKERSHAFT (PERKINS GAS)	10
ENGINE GASKET SETS (PERKINS GAS)	13
LUBRICATION SYSTEM (PERKINS GAS)	14
BALANCER (PERKINS GAS)	17
GOVERNOR (PERKINS GAS)	18
GOVERNOR (PERKINS GAS)	21
MANIFOLD AND MUFFLER (PERKINS GAS)	22
AIR INTAKE (PERKINS GAS)	25
RADIATOR (PERKINS GAS)	26
WATER PUMP (PERKINS GAS)	29
DISTRIBUTOR (PERKINS GAS)	30
STARTER (PERKINS GAS)	33
FUEL TANK AND LINES (PERKINS-GAS)	34
CARBURETOR (PERKINS-GAS)	37
THROTTLE AND CONTROLS (PERKINS-GAS)	38
CYLINDER BLOCK AND ATTACHING PARTS (CONTINENTAL-GAS)	41
BALANCER (CONTINENTAL-GAS)	42
CRANKSHAFT, CAMSHAFT, FLYWHEEL AND TIMING GEAR	45
PISTONS AND RINGS, CONNECTING RODS AND BEARINGS	46
PISTONS AND RINGS, CONNECTING RODS AND BEARINGS	61
CYLINDER HEAD AND COVER, VALVES AND ROCKER ARMS	49
CYLINDER HEAD AND COVER, VALVES AND ROCKER ARMS	62
OIL PUMP, OIL PAN, OIL FILTER (CONTINENTAL-GAS)	50
ENGINE GASKET SETS (CONTINENTAL-GAS)	53
CYLINDER BLOCK AND ATTACHING PARTS (CONTINENTAL - L.P.G.)	54
BALANCER (CONTINENTAL - L.P.G.)	57
CRANKSHAFT, CAMSHAFT, FLYWHEEL AND TIMING GEARS	58
OIL PUMP, OIL PAN, OIL FILTER (CONTINENTAL L.P.G.)	65
ENGINE GASKET SETS (CONTINENTAL L.P.G.)	66
MANIFOLD AND MUFFLER - VERTICAL EXHAUST	69
MANIFOLD AND MUFFLER - HORIZONTAL EXHAUST (CONTINENTAL-GAS)	70
AIR INTAKE (CONTINENTAL GAS AND L.P.G.)	73
RADIATOR AND ATTACHING PARTS, WATER PUMP	74
FUEL TANK AND LINES (CONTENENTAL-GAS)	77
CARBURETER (CONTENENTAL-GAS)	78
CARBURETER (CONTINENTAL-GAS)	81
FUEL TANK AND LINES (CONTINENTAL L.P.G.)	82
CARBURETER (CONTINENTAL L.P.G.)	85
THROTTLE AND CONTROLS (CONTINENTAL GAS AND L.P.G.)	86
DISTRIBUTOR (CONTINENTAL GAS AND L.P.G.)	89
STARTER (CONTINENTAL GAS AND L.P.G.)	90
STARTER SOLENOID	93
CYLINDER BLOCK AND ATTACHING PARTS (DIESEL)	94
CRANKSHAFT AND BEARINGS, FLYWHEEL (DIESEL)	98
PISTONS AND RINGS, CONNECTING RODS AND BEARINGS (DIESEL)	101
CAMSHAFT, TIMING GEARS AND HOUSING (DIESEL)	102

CYLINDER HEAD, COVER, VALVES, ROCKERSHAFT (DIESEL)	105
CYLINDER HEAD, COVER, VALVES, ROCKERSHAFT (DIESEL)	109
ENGINE GASKET SETS (DIESEL)	110
LUBRICATION SYSTEM (DIESEL)	113
BALANCER (DIESEL)	114
MANIFOLD AND MUFFLER (DIESEL) (VERTICAL EXHAUST)	117
AIR TAKE (DIESEL)	118
RADIATOR AND ATTACHING PARTS (DIESEL)	121
WATER PUMP (DIESEL)	122
WATER PUMP (DIESEL)	125
FUEL TANK AND LINES (DIESEL)	126
FUEL LIFT PUMP (USED ENGINE SERIAL NUMBER 236 UA 57083)	129
FUEL LIFT PUMP (USED PRIOR TO ENGINE NUMER 236 UA 57083)	130
FUEL INJECTION SYSTEM (DIESEL)	133
FUEL FILTERS AND INJECTOR (DIESEL)	134
INJECTION PUMP (SEE PAGES V THRU XI C.A.V. SERVICE STATIONS)	137
THROTTLE AND FUEL SHUT-OFF (DIESEL)	138
STARTER (DIESEL)	141
ALTERNATOR (PERKINS GAS AND DIESEL)	142
GENERATOR (USED ON DIESEL PRIOR TO SERIAL NO. 9A 46282 AND	145
GENERATOR (NEVER USED IN PRODUCTION - USED ONLY AS A	146
INSTRUMENT PANEL, BATTERY AND HOLD-DOWN (PERKINS-GAS)	149
INSTURMENT PANEL, BATTERY AND HOLD-DOWN	150
INSTURMENTS AND SWITCHES (PERKINS GAS)	153
INSTRUMENTS AND SWITCHES (PERKINS GAS)	154
INSTRUMENTS AND SWITCHES (CONTINENTAL GAS AND L.P.G.)	157
INSTRUMENTS AND SWITCHES (DIESEL)	158
INSTRUMENTS AND SWITCHES (DIESEL)	161
ELECTRICAL WIRING (PERKINS-GAS)	162
ELECTRICAL WIRING (CONTINENTAL GAS AND L.P.G.)	166
ELECTRICAL WIRING (DIESEL WITH ALTERNATOR)	169
ELECTRICAL WIRING (DIESEL WITH GENERATOR)	170
LIGHTING (FENDER MOUNTED)	173
LIGHTING (FENDER MOUNTED)	174
LIGHTING (HOOD MOUNTED)	177
LIGHTING (HOOD MOUNTED)	178
REAR WORK AND WARNING LAMP	181
REAR WORK AND WARNING LAMP	182
FRONT AXLE (STANDARD, ORCHARD, ROW CROP WIDE)	185
FRONT AXLE AND TIE RODS (MINUTE MAID CORPORATION)	186
FRONT AXLE SUPPORT, SPACERS	189
POWER STEERING LINES, LINKAGE AND DRAG LINK	190
POWER STEERING LINES, LINKAGE AND DRAG LINK	194
STEERING GEAR (STANDARD AND ORCHARD)	197
POWER STEERING CYLINDER (GAS AND DIESEL)	198
POWER STEERING PUMP (PERKINS GAS AND DIESEL)	201
POWER STEERING PUMP (PERKINS GAS AND DIESEL)	202
POWER STEERING PUMP (CONTINENTAL GAS AND L.P.G.)	205
GEAR SHIFT (8 SPEED)	206
GEAR SHIFT (6 SPEED AND MULTI-POWER TRANSMISSION)	209
TRANSMISSION (8 SPEED)	210
6 SPEED TRANSMISSION	214


MULTI-POWERED TRANSMISSION	218
MULTI-POWERED TRANSMISSION	222
TRANSMISSION CASE AND CLUTCH CONTROL	226
MULTI-POWER SHIFT CONTROL	230
CLUTCH (LIVE P.T.O.) (LATE PRODUCTION)	233
DUAL CLUTCH (LIVE P.T.O.) (EARLY PRODUCTION)	234
SPLIT TORQUE CLUTCH (INDEPENDENT P.T.O.) (LATE PRODUCTION)	237
SPLIT TORQUE CLUTCH (INDEPENDENT P.T.O.) (EARLY PRODUCTION)	238
REAR AXLE (CAST IRON)	241
REAR AXLE (MALLEABLE)	242
BRAKES (CAST IRON AXLE)	245
BRAKES (USED TRACTOR SERIAL NUMBER 9A 106430 AND UP)	246
BRAKES (USED PRIOR TO TRACTOR SERIAL NUMBER 9A 106430)	249
DIFFERENTIAL HOUSING (SERVICE ONLY, SEE NOTE "A")	250
DIFFERENTIAL HOUSING AND P.T.O. SHAFT (LATE PRODUCTION)	253
DIFFERENTIAL HOUSING AND P.T.O. SHAFT	254
DIFFERENTIAL HOUSING AND P.T.O. SHAFT	257
DIFFERENTIAL HOUSING AND P.T.O. SHAFT	258
DIFFERENTIAL HOUSING AND P.T.O. SHAFT	261
DIFFERENTIAL (STANDARD CLEARANCE AND ROW CROP)	262
DIFFERENTIAL (CAST IRON AXLE)	265
DIFFERENTIAL (MALLEABLE AXLE) (ROW-CROP)	266
DIFFERENTIAL (MALLEABLE AXLE) (STANDARD CLEARANCE)	269
DIFFERENTIAL (MALLEABLE AXLE) (STANDARD CLEARANCE)	270
DIFFERENTIAL LOCK (CAST IRON AXLE)	273
DIFFERENTIAL LOCK (MALLEABLE AXLE)	274
CLUTCH AND VALVE, INDEPENDENT P.T.O.	277
CLUTCH AND VALVE, INDEPENDENT P.T.O.	278
HYDRAULIC LIFT PUMP (LATE PRODUCTION)	281
HYDRAULIC LIFT PUMP (WITH 21 SPLINED CAMSHAFT AND USED WITH	281A
HYDRAULIC LIFT PUMP (NEVER USED IN PRODUCTION, SERVICE ONLY)	281E
HYDRAULIC LIFT PUMP (NEVER USED IN PRODUCTION, SERVICE ONLY)	281J
HYDRAULIC LIFT PUMP (NEVER USED IN PRODUCTION, SERVICE ONLY)	282
HYDRAULIC LIFT PUMP	286
HYDRAULIC LIFT PUMP (WITH 181993M1 CAMSHAFT (SEE INSET A)	289
HYDRAULIC LIFT PUMP (WITH 181993M1 CAMSHAFT (SEE INSET A)	290
SERVICE KIT (LIFT PUMP CONTROL VALVE)	293
HYDRAULIC LIFT CONTROLS (WITH PRESSURE CONTROL)	294
HYDRAULIC LIFT CONTROLS (WITHOUT PRESSURE CONTROL)	297
PRESSURE CONTROL VALVE	298
PRESSURE CONTROL VALVE (SERVICE REPLACEMENT)	301
HYDRAULIC LIFT COVER (USED AXLE PART NO. 505828X95, TRACTOR	302
HYDRAULIC LIFT COVER (USED PRIOR TO AXLE PART NO. 505828X95,	305
HYDRAULIC LIFT SHAFT (WITH PRESSURE CONTROL)	306
HYDRAULIC LIFT SHAFT (WITHOUT PRESSURE CONTROL)	310
HYDRAULIC PUMP AND DRIVE	313
HYDRAULIC PUMP AND DRIVE	314
HYDRAULIC PUMP AND DRIVE	317
HYDRAULIC PUMP AND DRIVE	318
HYDRAULIC PUMP AND DRIVE	321
HYDRAULIC PUMP AND DRIVE	322

HYDRAULIC PUMP AND DRIVE	325
HYDRAULIC PUMP AND DRIVE	326
HYDRAULIC PUMP AND DRIVE	329
HYDRAULIC PUMP AND DRIVE	330
HYDRAULIC PUMP AND DRIVE	333
HYDRAULIC PUMP (WITH AUXILIARY HYDRAULICS) (SEE NOTE "A")	334
HYDRAULIC PUMP (SEE NOTE "D")	337
HYDRAULIC PUMP	338
HYDRAULIC PUMP	341
HYDRAULIC PUMP	342
HYDRAULIC PUMP SERVICE KIT	345
HYDRAULIC PUMP (6 SPEED WITH IPTO WITHOUT	346
HYDRAULIC PUMP (6 SPEED WITH IPTO WITHOUT	349
REGULATOR SHIFT VALVE	350
OIL COOLER AND FILTER (8 SPEED TRANSMISSION)	353
OIL COOLER AND FILTER (MULTI-POWER TRANSMISSION)	354
AUXILIARY HYDRAULICS STANDARD	357
AUXILIARY HYDRAULICS VALVE (2 SPOOL)	358
AUXILIARY HYDRAULICS VALVE (SINGLE SPOOL)	361
CENTER AND UPPER LIFT LINKAGE	362
LOWER LIFT LINKAGE	365
UPPER LIFT LINKS	366
UPPER LIFT LINKS	369
UPPER LIFT LINKS	370
LOWER LIFT LINKS	373
LOWER LIFT LINKS	374
SWINGING DRAWBAR	377
PRESSURE CONTROL HITCH (BOOM AND CHAIN TYPE)	378
STEP PLATES	381
FENDERS (FLAT TOP)	382
HOOD AND ATTACHING PARTS (GAS AND DIESEL)	385
HOOD AND ATTACHING PARTS (L.P.G.)	386
HOOD CAPS, GRILLE AND SIDE PANELS) (WITH METAL HOOD CAP)	389
HOOD CAPS, GRILLE AND SIDE PANELS (WITH PLASTIC HOOD CAP)	390
HOOD CAP KIT (SEE NOTE "A")	393
HOOD CAP, GRILLE AND SIDE PANELS (WITH METAL HOOD CAP)	394
SEAT (USED TRACTOR SERIAL NUMBER 9A 33014 TO 9A 136826)	397
SEAT (USED PRIOR TO TRACTOR SERIAL NUMBER 9A 33014)	398
SEAT (METAL BUSHINGS)	401
FRONT WHEELS AND HUBS	402
REAR WHEELS (REGULAR)	405
DECALS	406
PAINT	409
STABILIZERS (MINUTE MAID CORPORATION)	410
ACCESSORIES (SPECIAL FOR THE STATE OF FLORIDA)	413

CRANKSHAFT AND BEARINGS, FLYWHEEL

5

BE 1075-4
v

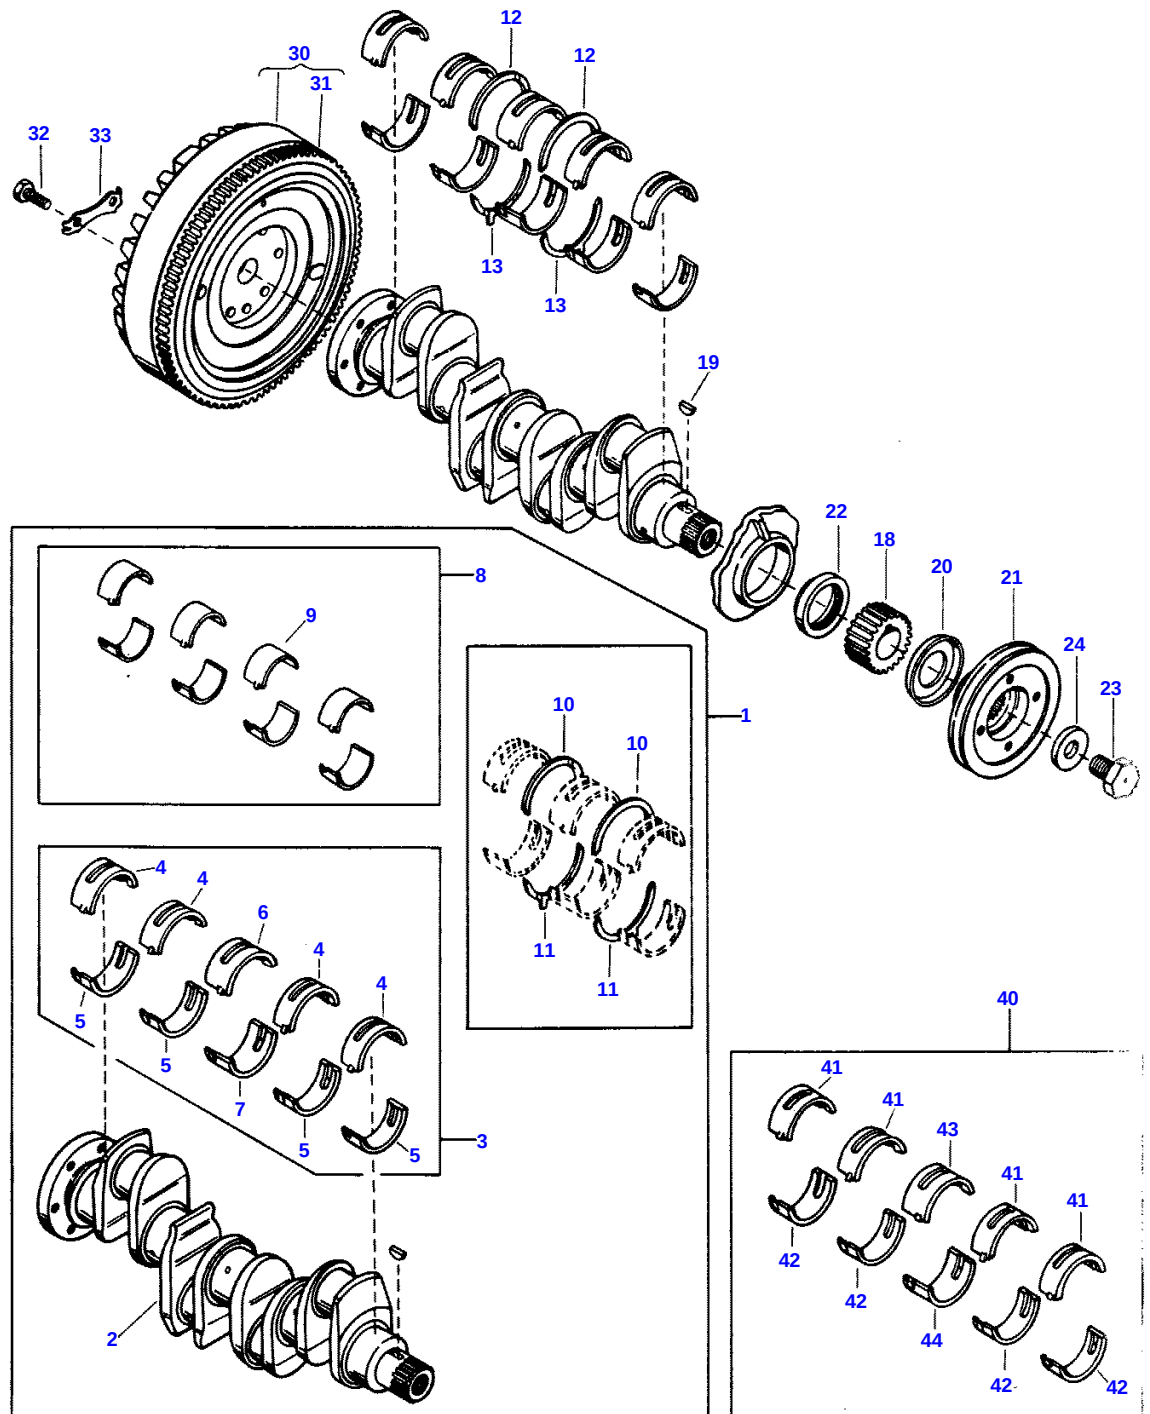

1st Print

651 190 M97 (Issue 1)


CRANKSHAFT AND BEARINGS, FLYWHEEL (PERKINS GAS)

Item	Part Number	Qty	Description
1	736946M91	1	Kit, Crankshaft (Perkins No. 85721)
2		1	Crankshaft (Order 736946M91)
3	735168M91	1	Insert Set, Main Bearing (Std.) (Perkins No. 81558)
4	735103M1	4	Insert (Perkins No. 31126391)
5	735104M1	4	Insert (Perkins No. 31126381)
6	735105M1	1	Insert (Perkins No. 31126371)
7	735106M1	1	Insert (Perkins No. 31126361)
8	736950M91	1	Insert Set, Connecting Rod Bearing (Std.) (Perkins No. 85042)
9	733766M1	8	Insert, Connecting Rod (Perkins No. 31126311)
10	735337M1	2	Washer, Thrust, Upper (Std.) (Perkins No. 31137311)
11	735338M1	2	Washer, Thrust, Lower (Std.) (Perkins No. 31137321)
12	735742M1	AR	Washer, Thrust, Upper (+.007") (Perkins No. 31337312)
13	735743M1	AR	Washer, Thrust, Lower (+.007") (Perkins No. 31137322)
18	734749M1	1	Gear, Crankshaft (28 Teeth) (Perkins No. 31171671)
19	2196X	1	Key, Crankshaft Gear (1/4 x 7/8" Woodruff) (Perkins No. 0500012)
20	736041M1	1	Flange, Oil Slinger (Perkins No. 331575230)
21	736967M1	1	Pulley, Crankshaft (Perkins No. 31148931)
22	1446853M1	1	Seal, Oil (Perkins No. 2415361)
23	376184X1	1	Bolt (7/8 X 1-1/2" NF, Hex. Special) (Perkins No. 32162318)
24	376177X1	1	Washer, Flat, Special (Perkins No. 33125124)
30	734947M91	1	Flywheel Assembly (Live P.T.O.) (Perkins No. 0999965)
	513564M91	1	Flywheel Assembly (Independent P.T.O.) (Perkins No. 41112354)
31	731008M1	1	Gear, Ring (Perkins No. 0410236)
32	353593X1	6	Bolt (1/2 X 1-1/4" NF, Hex.)
33	731192M1	3	Tab Washer (Perkins No. 0921062)
40	735169M91	1	Insert Set, Main Bearing (-.010") (Perkins No. 81558a)
41	735448M1	4	Insert, Top (Front, Intermediate And Rear) (Perkins No. 31126392)
42	735445M1	4	Insert, Bottom (Front, Intermediate And Rear) (Perkins No. 31126382)
43	735442M1	1	Insert, Top (Center) (Perkins No. 311263720)
44	735439M1	1	Insert, Bottom (Center) (Perkins No. 31126362)
40	735170M91	1	Insert Set, Main Bearing (-.020") (Perkins No. 81558B)
41	735449M1	4	Insert, Top (Front, Intermediate And Rear) (Perkins No. 311263930)
42	735446M1	4	Insert, Bottom (Front, Intermediate And Rear) (Perkins No. 31126383)
43	735443M1	1	Insert, Top (Center) (Perkins No. 31126373)
44	735440M1	1	Insert, Bottom (Center) (Perkins No. 31126363)
40	735171M91	1	Insert Set, Main Bearing (-.030") (Perkins No. 81558C)
41	735450M1	4	Insert, Top (Front, Intermediate And Rear) (Perkins No. 31226394)
42	735447M1	4	Insert, Bottom (Front, Intermediate And Rear) (Perkins No. 31126384)
43	735444M1	1	Insert, Top (Center) (Perkins No. 31126374)
44	735441M1	1	Insert, Bottom (Center) (Perkins No. 31126364)

2

CYLINDER BLOCK

BE 2659

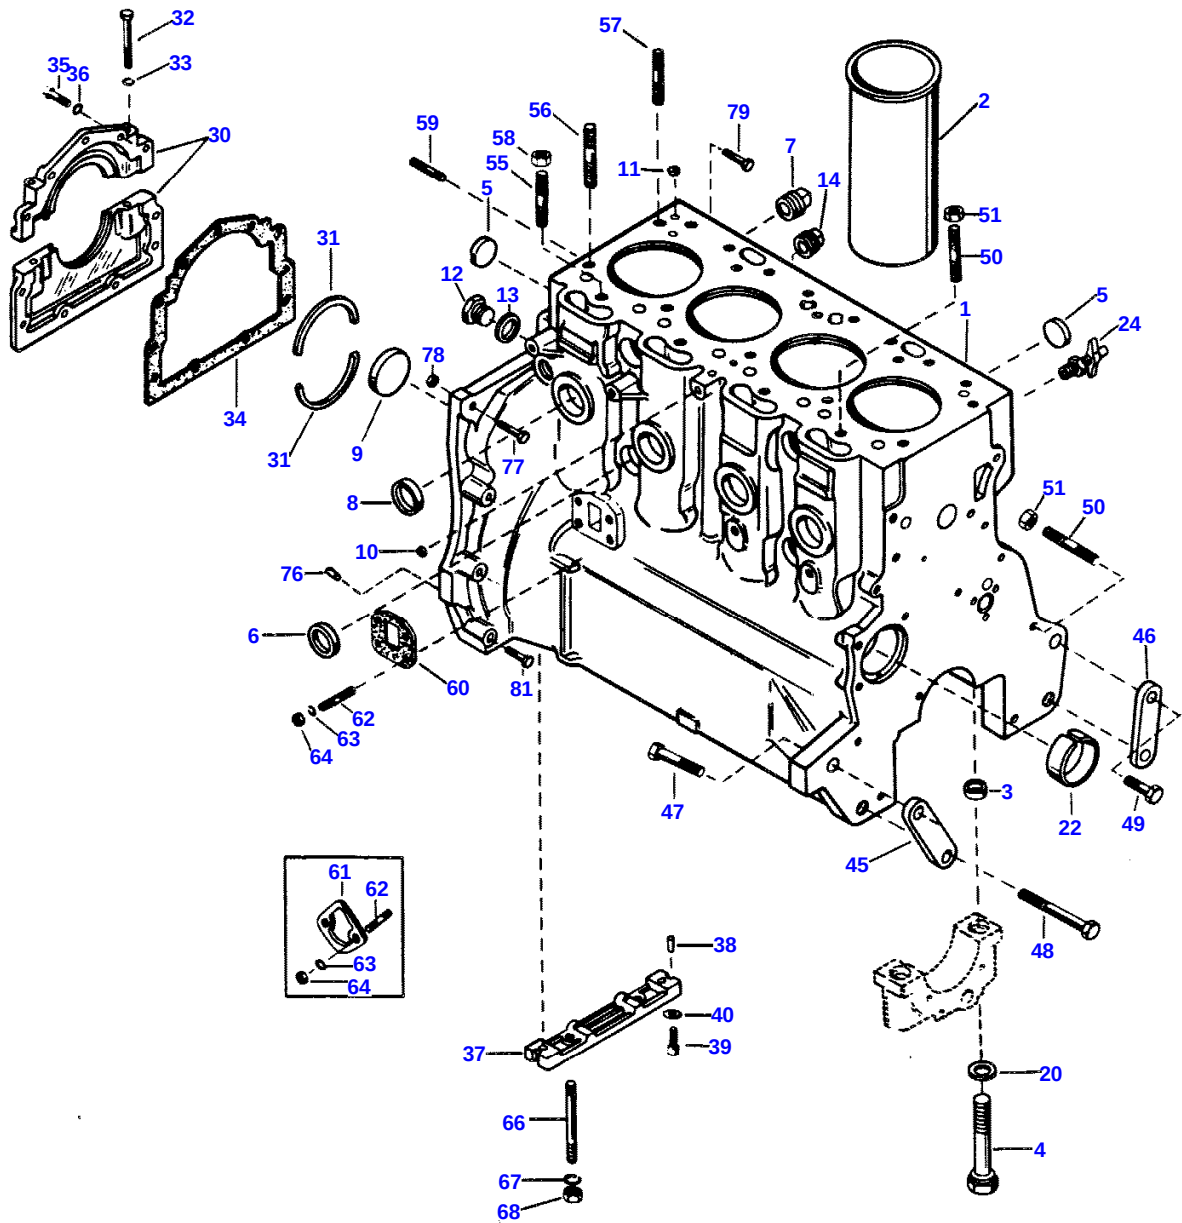

1st Print

651 190 M97 (Issue 1) 3/75

CYLINDER BLOCK (PERKINS GAS)

Item	Part Number	Qty	Description
	515276M92	1	Engine Assembly (Complete) (Live P.T.O.) (Perkins No. AG4-236-20721)
	515277M92	1	Engine Assembly (Complete) (Independent P.T.O.) (Perkins No. AG4-236-20722)
	1896315M91	1	(A) Block Assembly (Short) (Perkins No. 22234)
	886342M91	1	(B) Block Assembly (Short) (Perkins No. 20427)
1	741730M91	1	(B) Block Assembly, Stripped (Perkins No. 92877)
	739805M91	1	(B, H) Block Assembly (Stripped) (Perkins No. 90066)
2	736507M2	4	Liner, Cylinder (Perkins No. 31358341)
3	733072M1	10	Thimble, Main Bearing Cap (Perkins No. 33142111)
4	376074X1	10	Bolt, Bearing Cap (5/8 x 3-3/4" NF, Hex.) (Perkins No. 32166314)
5	735865M1	8	Plug (1-1/4" Cup Type) (Perkins No. 0650563)
6	376190X1	4	Plug (1-3/8" Cup Type) (Perkins No. 0650618)
7	363819X1	2	Plug (3/4" P.T. Sq. Hd.)
8	735869M1	4	Plug (1-1/2" Cup Type) (Perkins No. 0650577)
9	733705M1	1	Plug, Camshaft Hole (2" Cup Type) (Perkins No. 32416105)
10	736867M1	1	Plug (1/4" Expansion) (Perkins No. 32417133)
11	736868M1	1	Plug (5/16" Cup Type) (Perkins No. 32417134)
12	376180X1	1	Plug (7/8" NF, Hex., Sckt.) (Perkins No. 0650582)
13	376196X1	1	Washer (29/32 X 1-1/8 X 3/32" Copper) (Perkins No. 0920130)
14	363819X1	1	Plug (3/4" P.T. Sq. Hd.)
	365333X1	1	Plug (1/4" P.T. Hex. Sckt. Hd.)
20	731141M1	10	Shim (43/64" I.D. X 1" O.D. X .020" Thk.) (Perkins No. 0760001)
22	734883M1	1	Bushing, Camshaft (2 X 2-3/16 X 1-1/4") (Perkins No. 31134132)
24	1851764M1	1	Drain, Cylinder Block (Perkins No. 31419)
30	734975M92	1	Housing Assembly (Perkins No. 59537)
31	735942M1	2	Seal, Housing (Perkins No. 36883108)
32	353531X1	2	Bolt (5/16 X 2-1/2" NF, Hex.) (Perkins No. 0096238)
33	353446X1	2	Washer (5/16" Lock)
34	735110M1	1	Gasket, Housing (Perkins No. 36817136)
35	353519X1	11	Bolt (5/16 x 1" NF, Hex.) (Perkins No. 0746211)
36	353446X1	11	Washer (5/16" Lock)
37	734841M1	1	Bridge Piece, Block (Perkins No. 36277831)
38	733721M1	2	Gasket, Bridge Piece (Perkins No. 32811408)
39	376572X1	2	Screw (1/4 X 3/4" Special) (Perkins No. 376572x1)
40	735898M1	2	Washer (17/64 X 7/16 X 1/32") (Perkins No. 0920521)
45	507760M2	1	Spacer, Front Support (Right)
46	507761M1	1	Spacer, Front Support (Left)
47	354289X1	1	Bolt (5/8 X 3" NC, Hex.)
48	354689X1	1	Bolt (5/8 X 5-1/4" NC, Hex.)
49	354687X1	1	Bolt (5/8 X 5" NC, Hex.)
50	833749M1	1	Stud (5/8" X 3-5/8" NC-NF)
51	353427X1	1	Nut (5/8" NF, Hex.)
	739504M1	6	(C) Bolt (1/2 X 3-1/2" NF, Hex.) (Perkins No. 32181424)
55	735245M1	2	(C) Stud (1/2" NF X 4-1/8") (Perkins No. 32526312)
	735245M1	8	(D) Stud (1/2" NF X 4-1/8") (Perkins No. 32526312)
	739505M1	12	(C) Bolt (1/2 X 4-1/8" NF, Hex.) (Perkins No. 32181425)
56	735244M1	12	(D) Stud (1/2" NF X 5-1/2") (Perkins No. 32526311)
	739506M1	2	(C) Bolt (1/2 X 4-15/16" NF, Hex.) (Perkins No. 32181426)
57	735346M1	2	(D) Stud (1/2" NF x 5-9/16") (Perkins No. 32526313)
58	376672X1	2	(C) Nut (1/2" NF, Special)
	376672X1	22	(D) Nut (1/2" NF, Special)
59	353963X1	2	Stud (7/16" NC, X 1-5/8") (Perkins No. 0828014)
60	740861M1	1	(A) Gasket, Lift Pump (4 Hole) (Perkins No. 36851113)
61	737080M1	1	(B) Gasket, Fuel Pump (2 Hole) (Perkins No. 36862166)
62	731311M1	4	(E) Stud (5/16" NF X 1-1/16") (Perkins No. 0826203)
63	353446X1	4	(E) Washer (5/16" Lock)
64	353916X1	4	(E) Nut (5/16" NF, Hex.) (Perkins No. 0576002)
66	734882M1	2	Stud (5/16" NF X 3-15/16") (Perkins No. 32517128)
67	353446X1	2	Washer (5/16" Lock)
68	353916X1	2	Nut (5/16" NF, Hex.) (Perkins No. 0576002)
76	191314M1	2	Dowel (3/8 X 25/32")
77	353704X1	1	(C) Bolt (7/16 X 1-3/4" NC, Hex.)
	353702X1	1	(D) Bolt (7/16 X 1-1/2" NC, Hex.)
78	355645X1	1	Nut (7/16" NC, Hex.)
79	353706X1	1	(F) Bolt (7/16" X 2" NC, Hex.)
	353711X1	1	(G) Bolt (7/16 X 2-5/8" NC, Hex.)
81	353708X1	5	Bolt (7/16 X 2-1/4" NC, Hex.)

Item	Part Number	Qty	Description

			(A) - Used Engine Serial Number 236 UA and up.
			(B) - Used prior to Engine Serial Number 236 UA 1618A.
			(C) - Used Late Production Tractors.
			(D) - Used Early Production Tractors.
			(E) - Prior to Engine Serial Number 236 UA 1618A quantity was 2.
			(F) - Used Engine Serial Number 236 UA 835A and up.
			(G) - Used prior to Engine Serial Number 236 UA 835A.
			(H) - For Repairs order (1) 741 730 M1, 740 861 M1, 742 258 M1, 1447 017 M91;
			(2) 375 750 X1, 375 751 X1, 376 525 X1, 736 864 M1, 741 388 M1, 742 259 M1;
			(4) 353 916 X1 and 731 305 M1.