

SM KEYSHEET AND GENERAL INFORMATION

Link-Belt
C R A N E S

DATE 12/07/20
PAGE 1

ORDER NO. - S2082 MODEL - ATC-3275 SERIAL NO. - S2L1-6684

DISTRIBUTOR: MARDIAN EQUIPMENT CO., INC.
CARRIER ENG:
MODEL- CUMMINS ISX15 2017
S/N- 80234594
OPERATION- 5411183
PARTS- NONE
UPPER ENGINE:
MODEL- CUMMINS QSB6.7 T4F
S/N- 74611736
OPERATION- 4332780
PARTS- NONE
O/M BOOK- 1361060118
ADDENDUMS - NONE
TECH BULLETINS - NONE
MISCELLANEOUS - HOIST ROPE CAUTION

SALES ORDER: 26684
MAIN TRANS:
MODEL- ZF 12-AS-3041
S/N- 00638668
OPERATION- NONE
PARTS- NONE
AUX TRANS:
MODEL- KESSLER VG2600
S/N-
OPERATION- NONE
PARTS- NONE
AEM: BOOK- MC-1407
VIDEO- DVD-CR

SM CODE DESCRIPTION

SM00 GENERAL INFORMATION

SM00-000-000.00 HOW TO USE THIS MANUAL, S

SM01 RUBBER TIRE LOWER

SM01-001-013.00 BOOM LAUNCH CYLINDER MAIN

SM01-001-015.00 BOOM REST, R & I

SM01-004-017.00 FRONT AXLES, R & I

SM01-005-027.00 TROUBLESHOOTING SHEPPARD

SM01-005-035.00 STEERING COLUMN, RECON

SM01-005-037.00 STEERING GEARS, RECON (SH

SM01-005-039.00 STEERING GEARS, R & I

SM01-005-040.00 STEERING COLUMN, R & I

SM01-006-044.00 STEER ANGLE SENSOR, R & I

SM01-006-045.00 FRONT WHEEL ALIGN & STEER

SM01-006-046.00 REAR WHEEL ALIGNMENT

SM01-006-047.00 STEERING MITER BOX, R & I

SM01-006-049.00 STEERING SYSTEM ALARM COD

SM01-007-033.00 AXLE STEER CYLINDER, RECO

SM01-007-034.00 STEER CYLINDERS, R & I

SM01-016-003.00 HEATER CORE & A/C EVAPORA

SM01-016-004.00 HEATER CORE & A/C EVAP CO

SM01-018-057.00 TRANSMISSION, RECON (ZF A

SM01-018-063.00 TRANSMISSION & CLUTCH, R

SM01-018-064.00 TRANSMISSION INTARDER, RE

SM01-018-068.00 INTARDER SYSTEM ERROR COD

SM01-020-002.00 SUSPENDED BRAKE PEDAL, RE

SM01-020-012.00 SUSPENDED BRAKE PEDAL VAL

SM01-022-004.00 U-JOINT INSTALLATION (ROU

SM01-022-005.00 U-JOINT INSTALLATION (FUL

SM01-024-013.00 AXLES, RECON (KESSLER)

SM CODE DESCRIPTION

SM01 RUBBER TIRE LOWER

SM01-025-017.00 FRONT & REAR DISC BRAKES,

SM01-027-000.00 PNEUMATIC SYSTEM AIR LINE

SM01-027-106.00 CAGING DUAL AIR BRAKE CHA

SM01-027-151.00 FRONT AIR BRAKE CHAMBER,

SM01-027-153.00 REAR DUAL AIR BRAKE CHAMB

SM01-027-156.00 AIR DRYER, R & I

SM01-027-157.00 AIR DRYER, RECON

SM01-029-038.00 REAR AXLES, R & I

SM01-039-003.00 HYDRAULIC SYSTEM CLEANING

SM01-043-001.00 SOLENOID VALVES, GENERAL

SM01-043-004.00 4-WAY SOLENOID VALVE, REC

SM01-043-063.00 OUTRIGGER DIRECTIONAL CON

SM01-043-064.00 OUTRIGGER FUNCTION CONTRO

SM01-043-065.00 PROPORTIONAL VALVE, RECON

SM01-043-066.00 REAR STEER VALVE, RECON

SM01-043-067.00 O/R FUNTION CONTROL VALVE

SM01-044-027.00 O/R LOCK VALVE CARTRIDGE,

SM01-045-064.00 BOTTOM O/R BEAM CYLINDER,

SM01-045-072.00 TOP O/R BEAM CYLINDER, RE

SM01-046-034.00 JACK CYLINDER, RECON

SM01-046-053.00 5TH OUTRIGGER JACK CYLIND

SM01-047-040.00 PRIORITY/RELIEF VALVE, RE

SM01-047-041.00 EMERGENCY STEERING SUPPY

SM01-047-046.00 BLOCKING VALVE MANIFOLD,

SM01-060-004.00 TRANSFER CASE, RECON

SM01-060-008.00 TRANSFER CASE, R & I

SM01-066-000.00 ELECTRICAL SYSTEM WIRE ID

SM01-066-053.00 BATTERY, R & I

SM01-069-018.00 TIRE & RIM, R & I

SM01-069-019.00 TIRE & RIM, INSP & MAINT

SM KEYSHEET AND GENERAL INFORMATION

Link-Belt
C R A N E S

DATE 12/07/20
PAGE 2

ORDER NO.- S2082

MODEL - ATC-3275

SERIAL NO. - S2L1-6684

SM CODE DESCRIPTION

SM01 RUBBER TIRE LOWER

SM01-071-004.00 REPAIR OF COMPONENTS MADE
SM01-075-057.00 ALTERNATOR, R & I
SM01-075-058.00 STARTER, R & I
SM01-075-069.00 ENGINE COOLING PACKAGE, R
SM01-076-069.00 COLLECTOR RING, R & I
SM01-076-091.00 COLLECTOR RING ASSY, RECO
SM01-078-035.00 AXLE OSCILLATION CYLINDER
SM01-078-039.00 AXLE OSCILLATION ACCUMULA
SM01-078-042.00 AXLE OSCILLATION HEIGHT S
SM01-078-046.00 AXLE OSCILLATION VALVE BL
SM01-078-055.00 AXLE OSCILLATION CYLINDER
SM01-079-071.00 LOWER HYD COMPS, R&I (AXL
SM01-079-079.00 LOWER HYD COMP, R&I (SUCT
SM01-079-081.00 LOWER HYD COMPS, R&I (AXL
SM01-081-014.00 HYDRAULIC GEAR PUMP, RECO
SM01-081-036.00 GEAR PUMP/MOTOR, RECON (P
SM01-081-063.00 HYD PISTON PUMP, R & I (R
SM01-081-064.00 HYDRAULIC PISTON PUMP, RE
SM01-081-065.00 1-SECT GEAR PUMP, R & I (
SM01-081-066.00 2-SECT GEAR PUMP, R & I (O

SM03 UPPER FRAME & MACHY

SM03-001-079.00 UPPER REVOLVING FRAME & T
SM03-010-060.00 COUNTERWEIGHT REMOVAL CYL
SM03-010-062.00 CTWT REMOVAL SOLENOID CON
SM03-010-070.00 UPPER CTWT LOWERING USING
SM03-010-071.00 COUNTERWEIGHT REMOVAL CYL
SM03-010-072.00 CTWT REMOVAL SOLENOID CON
SM03-010-074.00 COUNTERWEIGHT LOCKING VAL
SM03-010-104.00 COUNTERWEIGHT LOCKING CYL

SM04 VERTICAL SHAFTS

SM04-005-035.00 SWING BRAKE, RECON
SM04-005-037.00 SWING BRAKE, R & I
SM04-010-027.00 SWING REDUCTION UNIT, REC
SM04-010-043.00 SWING REDUCTION UNIT & SW

SM05 HORIZONTAL SHAFTS

SM05-006-024.00 WINCH DRUM ASSY, R & I
SM05-006-048.00 WINCH, TROUBLESHOOTING (B
SM05-006-049.00 WINCH, RECON (BRADEN CH26
SM05-018-006.00 WINCH ROLLER, R & I AND R

SM CODE DESCRIPTION

SM06 UPPER ENGINE

SM06-008-018.00 THROTTLE PEDAL, R & I
SM06-013-009.00 ALTERNATOR, R & I
SM06-013-010.00 STARTER, R & I
SM06-013-011.00 TORSION SPRING COUPLING,
SM06-013-012.00 RADIATOR FAN PUMP, R & I
SM06-013-030.00 CHARGED AIR COOLER & RADI
SM06-013-031.00 RADIATOR FAN MOTOR, R & I
SM06-025-022.00 HEATER CORE & A/C EVAP CO
SM06-029-005.00 BATTERY, R & I
SM06-047-000.00 ELECTRICAL SYSTEM WIRE ID

SM07 UPPER HYDRAULICS & AIR

SM07-000-000.00 HYDRAULIC SCHEMATIC DIAGR
SM07-001-028.00 HYDRAULIC SYSTEM CLEANING
SM07-002-028.00 RELIEF VALVE, RECON
SM07-003-006.00 SOLENOID VALVES, GENERAL
SM07-003-014.00 BOOM PIN/LATCH SOLENOID C
SM07-003-020.00 WINCH MANIFOLD ASSY, RECO
SM07-004-101.00 UPPER HYDRAULIC COMPONENT
SM07-004-124.00 UPPER HYD COMPONENTS, R&I
SM07-005-070.00 POWER STEERING/SWING PUMP
SM07-005-077.00 HYDRAULIC PUMP, RECON - W
SM07-005-088.00 PUMP DRIVE, RECON (STIEBE
SM07-005-093.00 PUMP DRIVE, R & I
SM07-005-097.00 HYD PISTON PUMP, RECON (B
SM07-005-098.00 PILOT CONTROL PUMP, R & I
SM07-005-113.00 1-SECTION GEAR PUMP, R &
SM07-005-137.00 1-SECTION GEAR PUMP, RECO
SM07-005-141.00 SWING PUMP, R & I
SM07-005-142.00 SWING PUMP ASSEMBLY, RECO
SM07-005-143.00 PISTON PUMP ASSEMBLY, REC
SM07-005-144.00 WINCH PUMPS, R & I
SM07-006-034.00 SWING MOTOR, RECON
SM07-006-095.00 WINCH MOTOR, RECON (LINDE
SM07-006-129.00 WINCH MOTOR, R & I
SM07-006-130.00 SWING MOTORS, R & I
SM07-008-037.00 PRESSURE REDUCING VALVE,
SM07-008-112.00 PRESS REDUCING VALVE, REC
SM07-008-118.00 SWING BRAKE PEDAL VALVE,
SM07-008-130.00 SWING BRAKE PEDAL VALVE,
SM07-008-169.00 SINGLE AXIS ELECTRONIC CO
SM07-008-170.00 SINGLE AXIS ELECTRONIC CO
SM07-008-206.00 B/H TELESCOPE CONTROL VAL
SM07-008-207.00 FREE SWING VALVE, RECON

SM KEYSHEET AND GENERAL INFORMATION

Link-Belt
C R A N E S

DATE 12/07/20
PAGE 3

ORDER NO.- S2082 MODEL - ATC-3275 SERIAL NO. - S2L1-6684

SM CODE	DESCRIPTION	SM CODE	DESCRIPTION
SM07	UPPER HYDRAULICS & AIR		

SM07-008-249.00	BOOM HOIST/TELESCOPE CONT		
SM07-010-006.00	BOOM TELE ELECTRONIC FOOT		
SM07-014-016.00	HYDRAULIC OIL COOLER ASSE		
SM07-014-017.00	HYDRAULIC OIL COOLER FAN		
SM07-018-001.00	HYDRAULIC SYSTEM TUBE FIT		
SM14	CAB & HOUSE ASSEMBLY		

SM14-001-006.00	REPAIR OF COMPONENTS MADE		
SM14-001-007.00	CAB TILT CYLINDER, RECON		
SM14-001-008.00	UPPER CAB TILT CYLINDER R		
SM17	HYDRAULIC BOOM		

SM17-001-053.00	HYDRAULIC BOOM INSPECTION		
SM17-001-089.00	BOOM FOOT PIN PULLER ASSY		
SM17-001-091.00	BOOM FOOT PIN PULLER CYLI		
SM17-001-092.00	BOOM FOOT PIN PULLER CYLI		
SM17-001-104.00	7 SECTION BOOM ASSMEBLY,		
SM17-002-055.00	BOOM TELESCOPE CYLINDER,		
SM17-002-065.00	LATCHING BOOM TELESCOPE S		
SM17-002-086.00	BOOM PINNING CYLINDER, RE		
SM17-002-097.00	BOOM TELE COUNTERBALANCE		
SM17-002-098.00	BOOM PINNING CYLINDER, R		
SM17-002-099.00	BOOM LATCHING CYLINDER, R		
SM17-002-100.00	BOOM TELESCOPE CYLINDER M		
SM17-002-131.00	TELE CYLINDER LENGTH ENCO		
SM17-002-135.00	HOSE & CABLE REEL, R & I		
SM17-002-154.00	HOSE & ELECTRICAL REEL AS		
SM17-003-049.00	BOOM HOIST HOLDING VALVE,		
SM17-003-050.00	BOOM HOIST HOLDING VALVE,		
SM17-003-057.00	BOOM HOIST CYLINDER., REC		
SM17-009-010.00	7 SHEAVE BOOM HEAD MACHIN		
SM18	SPECIAL ATTACHMENTS		

SM18-000-001.00	CAPSCREW TORQUES		
SM18-000-002.00	BEARING, GEAR, SHAFT, & H		
SM18-000-003.00	CRANE SYSTEM SCHEMATICS		
SM18-007-024.00	REELING DRUM, R & I		
SM18-007-038.00	REELING DRUM, TROUBLESHOO		
SM18-018-001.00	AIR CONDITIONING SERVICE		
SM18-018-004.00	A/C COMPRESSOR, RECON		
SM18-018-027.00	A/C COMPRESSOR, R & I (UP		
SM18-018-028.00	A/C COMPRESSOR, R & I (CA		

How To Use This Manual, General Service Instructions, And Safety Procedures

The following information is provided to help guide the user of this manual. An explanation of how this manual is organized, as well as general information and safety considerations which should be understood when performing any service or maintenance procedure, is given. This information is general in nature and should supplement any of the specific procedures in this manual along with a constant awareness of safety and common sense.

How To Use This Manual

This Service Manual is a collection of written procedures which are used to service and maintain a specific crane model. The index, which is called a "Keysheet", is used to organize the procedures within this manual and serve as a Table Of Contents as well. Each procedure, in this manual, is written so that it can stand alone and typically covers only one procedure. Procedures are given a numerical designation, or "SM Code" Number, (Example: SM01—005—034.00) which is unique to that procedure and that procedure only. The following is a listing of the general area definitions which are designated by the first digits in the SM Code Number sequence:

General Area Descriptions

- SM01 — Rubber Tire Lower
- SM02 — Crawler Lower
- SM03 — Upper Revolving Frame & Machinery
- SM04 — Vertical Shafts
- SM05 — Horizontal Shafts
- SM06 — Upper Engine
- SM07 — Hydraulic Power Supply
- SM08 — Angle Boom
- SM09 — Tubular Boom
- SM10 — Tagline Winder
- SM11 — Fairleader
- SM12 — Shovel Attachment
- SM13 — Trench Hoe, Logger & Scraper Attachment & Prop Handler
- SM14 — Cab & House Assembly
- SM15 — Rotascope Attachment (Discontinued)
- SM16 — Wire Rope Requirements
- SM17 — Hydraulic Boom And Attachments
- SM18 — Special Attachments
- SM19 — Diesel Pile Hammer (Discontinued)
- SM20 — Tower, Climbing Assembly, Traveling Base & Gantry (Discontinued)
- SM21 — Log Skidder (Discontinued)
- SM22 — Hydraulic Hammer (Discontinued)

The procedures in this manual are collated by SM Code Number sequence. Use the Keysheet in the front of this manual, the general area descriptions shown previously, and the SM Code title shown on the

Keysheet to find the specific procedure required to service the crane.

Throughout this manual, reference is made to the left, right, front, and rear, pertaining to directions and locations. These reference directions are relative to the operator, sitting in the operator's seat, with the upper directly over the front of the carrier, unless otherwise stated. (Crawler mounted cranes: upper over the front of the crane with travel motors to the rear.)

Danger, warning, and caution captions as well as special notes are used throughout this manual and on the crane to emphasize important and critical instructions. **If any instruction, caution, warning, or danger labels, decals, or plates become lost, damaged, or unreadable, they must be replaced.** Information contained on such labels, decals, and plates is important and failure to follow the information they contain could result in an accident. Replacement labels, decals, and plates can be ordered through a Link-Belt Distributor. For the purpose of this manual, danger, warning, and caution captions and notes are defined as follows:



DANGER

An operating procedure, practice, etc. which, if not correctly followed, may result in severe personal injury, dismemberment, or loss of life.



WARNING


An operating procedure, practice, etc. which, if not correctly followed, may result in personal injury.

CAUTION

An operating procedure, practice, etc. which, if not correctly followed, may result in damage to, or destruction of, equipment or property.

NOTES

Note: An operating procedure step, condition, etc. which is essential in order for the process to be completed properly.



This symbol may appear in manuals or on a label on the crane to alert personnel that additional instructions are included in the crane Operator's Manual.



Figure 1
Keep hands and tools clear of moving parts.


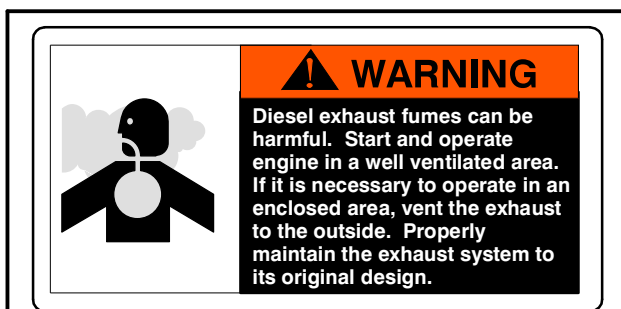


Figure 2
Diesel Exhaust Fumes.

Service Safety And Set Up Guidelines

The following is a list of safety and set up considerations which may apply to any service or maintenance procedure. Review the entire list and understand the type of things you must consider to perform a safe service procedure and then apply these guidelines to each specific service or maintenance procedure.

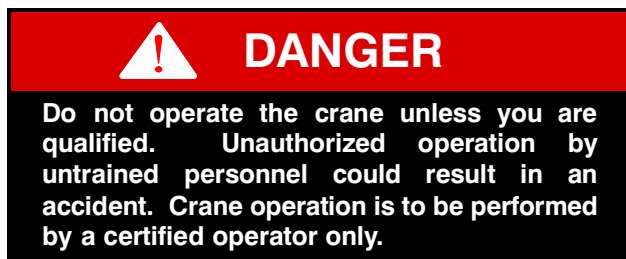


Service Safety

1. Read and understand the service or maintenance procedure to be performed before beginning work. By reading the procedure ahead of time, you can be sure to have the replacement parts and tools on hand that are required to complete the job.
2. Wear protective gear to prevent injury; hard hat, safety glasses, gloves, steel toed shoes, etc.



Figure 3
Pinch Point Label


3. First aid supplies and a fire extinguisher should be on the job site to assist in an unexpected situation. The location of these items should be known to all as well as access to a telephone for emergencies.
4. Work in a clean, dry, firm, level area whenever possible. Choosing the correct work site can make a big difference on how well the job goes.
5. Use caution around flammable materials. Be aware of all the materials in the work area which are a threat. Also make others aware of volatile materials; post signs if necessary.
6. Release all trapped pressure in air and hydraulic circuits before disconnecting any line or component. Shutdown the crane, exhaust all pressure from the crane's air reservoir(s) and work the hydraulic control levers back and forth before servicing the crane.
7. Do not disconnect any hydraulic line from a crane which has its attachment in the air. Trapped pressure may be all that is suspending it. Disconnecting a line could release the trapped pressure, causing the attachment to fall. Lower the attachment to the ground or on to its rest before servicing the crane.
8. Do not work on a crane which is in motion. Fans, belts, gear trains, etc. can catch an unexpected person and quickly dismember them.
9. Do not climb on the attachment or other hard to reach areas. If the steps and/or ladders which are installed on the crane do not provide adequate access to the area of the crane which needs servicing, use a step ladder or other approved device.
10. Pinch points exist between the upper and lower frames. Death or dismemberment may result from personnel caught in these points. Learn where these pinch points are and stay clear of the rotating upper frame.

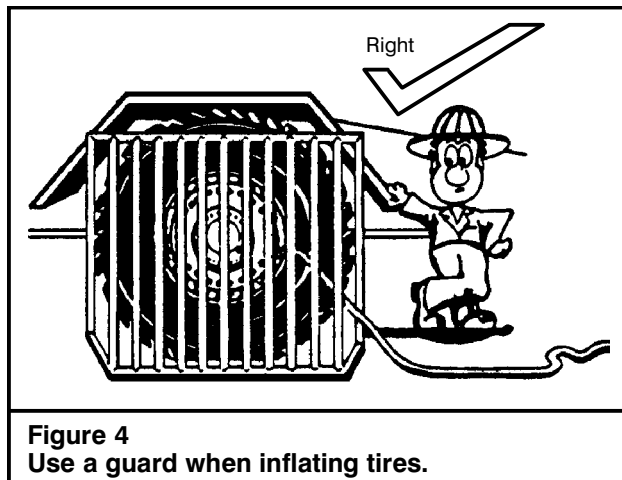


11. If working in a confined area, be sure to provide adequate ventilation when running the engine(s), using toxic solvents, welding, or any other operation which contaminates the fresh air supply.
12. Post a sign in the operator's cab to alert others that the crane is under service. Starting the crane while it is being serviced could severely injure someone. Crane damage could also occur if systems are operated prematurely. Imagine starting the engine(s) before the oil is replaced.
13. Secure access panels, doors, and machinery hoods when in the open position to ensure they do not fall or slam shut due to wind or accidental disruption.
14. Crane parts may be heavy. Always use an appropriate lifting device to support work. Do not attempt to lift an object without knowing its weight. Get help if necessary.
15. Always use a safety rim cage when inflating or deflating tires. Worn or misassembled parts can "explode" from the assembly causing serious injury. Use a safety rim cage, clip on air chuck, and stand aside when inflating or deflating tires.

Crane Set Up And Disassembly

1. Properly park the crane as described in the Operator's Manual. Park the crane in an area which provides the most comfortable working conditions. However, do not park the crane where it will be an obstruction or an intrusion to traffic, coworkers, or to the public. Keep in mind that a major service procedure, or a repair part which requires a long lead time, could have the crane disabled for an extended period of time.
2. Keep in mind the mess which is sometimes caused by a crane under repair. Oil or other fluid leaks should be contained or prevented. Consider your responsibility of maintaining a safe clean work area and a healthy environment for all.

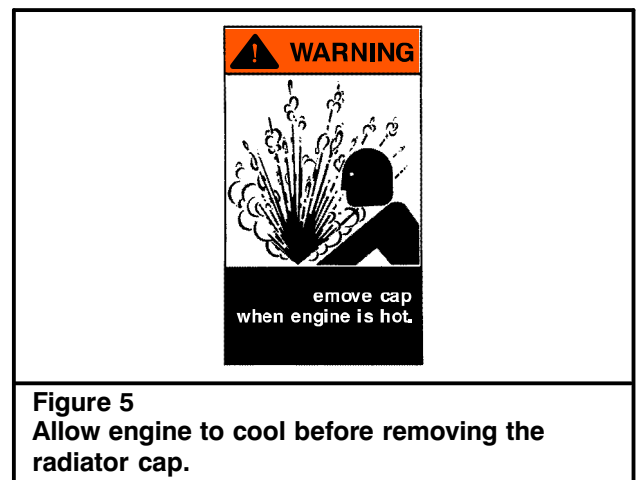

3. If the crane is equipped with outriggers, it may be safer as well as an advantage to raise and level the crane on outriggers to provide easier access to areas underneath. Do not work under a crane that is improperly supported.
4. Shutdown the engine(s) per the instructions given in the Operator's Manual.
5. Post a sign in the operator's cab to alert others that the crane is being serviced.
6. Engines, transmissions, hydraulic systems, etc. generate extreme heat during operation. Temperatures can reach levels which may cause serious burns. Allow the crane to cool before attempting to service it.

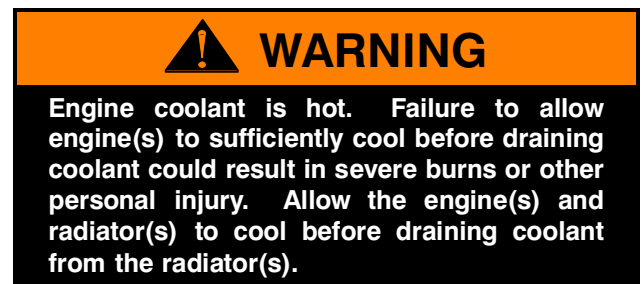

7. Pressure is generated inside the engine's cooling system due to the heat transfer process from the engine(s) to the radiator(s). Do not attempt to open or drain the radiator(s) until it/they has/have had sufficient time to cool. Disconnecting hoses before the engine(s) and radiator(s) has/have cooled is even more dangerous. Wait until the engine(s) and radiator(s) have cooled and then drain the radiator(s) before disconnecting any hoses. Properly store or dispose of used coolant.

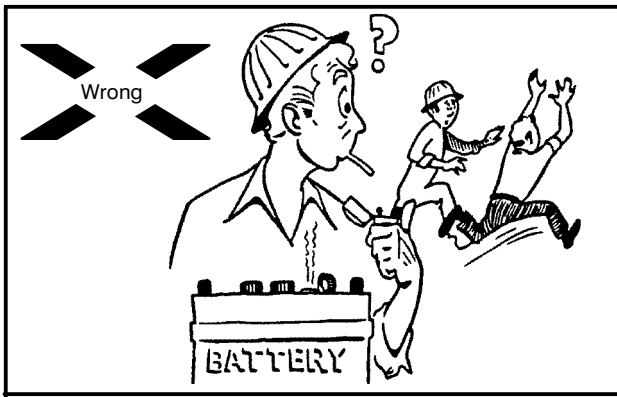


Figure 6
Do not use an open flame near the battery.

WARNING

Solvents and cleaning solutions can be hazardous. Serious personal injury may result from misuse of these products. Read and follow all the manufacturer's recommendations concerning solvents and cleaning solutions.

8. Thoroughly clean the area of the crane which is to be serviced. Dirt or other contamination could enter the hydraulic, air, lubricating system, etc. and cause immediate and/or long term problems. Cleaning the service area not only prevents contamination problems but it also makes working on the crane easier and sometimes problems are more recognizable.
9. Before beginning any removal or disassembly procedure, take a moment to observe critical features of the assembly which may greatly simplify the installation or assembly process. Label electrical, hydraulic, air, or other connections. Index mark pump, motor, and valve sections. Lightly spray paint or count the threads of adjustment screws. Simple steps such as these can minimize the effort needed to put the crane back in service.

WARNING

Hydraulic oil is under pressure and may be hot. A sudden release of hot oil could cause severe burns and/or other serious injury. Shutdown the engine(s) and exhaust all trapped hydraulic pressure from the system before removing any line or component.

10. Hydraulic systems, while operating, are under high pressure. Even after the crane is shutdown these pressures can remain trapped in the hydraulic lines and system components. Some hydraulic systems utilize an air pressurized reservoir which maintains pressure on the system after the crane is shutdown. It is critical that all residual pressure, which is trapped in the system, be neutralized before disconnecting any line or hydraulic component. Use the following techniques to exhaust trapped hydraulic pressure from the system:

- a. Lower the attachment to the boom rest, onto blocking, or onto the ground and shutdown the engine(s).
- b. Open the drain valves on the air system reservoir(s), if equipped, to bleed the air system pressure.
- c. Relieve any residual or precharge pressure by pushing the button on the pressure relief valve, on the hydraulic reservoir, if equipped. Otherwise, loosen the filler cap 1/4 turn.
- d. Turn the ignition switch to the **ON POSITION**, but **DO NOT START THE ENGINE**.
- e. Operate the steering control(s) back and forth repeatedly until steering becomes hard. (On cranes equipped with emergency steering system, it will take several rotations of steering wheel before steering becomes hard.)
- f. Work the crane control levers and outrigger switches, if equipped, back and forth several times.
- g. Turn ignition switch to the **OFF POSITION**.
- h. When pressure is fully relieved, close the drain valves on the air system reservoir(s), if equipped.

WARNING

Air lines may contain high pressure. Opening lines and fittings before relieving air pressure may result in serious injury. Shutdown the engine(s) and drain the air system reservoir(s) before opening any line or fitting.

11. Air system circuits, like hydraulic circuits, contain high pressures also. Although the threat of a hot working fluid does not exist, highly pressurized lines and components can possibly "fly off" if lines are disconnected before the system pressure is relieved. Open the drain valve on the air system reservoir(s) to exhaust system pressure before working on the crane.



WARNING

Use care not to cause sparks at the battery terminals while disconnecting or connecting the battery. Battery gasses are volatile and could be ignited by a spark or flame causing the battery to explode. Keep the area around the battery well ventilated and disconnect the negative side of the battery first, with the ignition switch “OFF”, to minimize hazard.

Battery posts, terminals, and related accessories contain lead and lead compounds. Eating or smoking with lead residue on hands may cause lead poisoning. Wash hands after handling lead products.

12. When working on electrical circuits, disconnect the battery to minimize shock, burn, spark, or other hazard. When disconnecting the battery, confirm that the ignition switch is in the “OFF” position. Disconnect the negative side of the battery first to minimize the potential for sparks at the battery. Battery gases which are exposed to such sparks, could cause an explosion. Likewise when connecting the battery, confirm that the ignition switch is in the “OFF” position and install the positive cable(s), first and the negative connection(s) last.
13. It is a good practice when disassembling hydraulic components to lay the parts out in the order that they were disassembled. Keeping the parts in this order during disassembly, cleaning, and inspection will aid in the assembly process.

Welding

1. When making repairs which require welding, disconnect any electronic equipment (such as rated capacity limiters and engine computers) to prevent damage to them. Use the battery disconnect switch(es), if equipped.
2. Be aware of systems adjacent to areas being welded. Residual heat from the welding process could cause damage to other components. Heat may also vaporize materials which may become toxic or volatile.
3. Remove paint from areas to be welded to prevent toxic fumes.
4. The grounding connection should be within 3 feet (1 m) of the welded parts.
5. Connect the ground to the lower, if welding on the lower, or to the upper if welding on the upper. Electrical current through the turntable bearing could cause an arc which could damage it.

6. Do not position the ground connection where seals or bearing, as in transmissions or valves, will be between it and the welded parts.
7. Remove any flammable materials from the area.
8. Use the appropriate setting on the welder for the size of the welding operation. Do not use more than 200 Volts continuously.

Cleaning And Inspection



WARNING

Solvents and cleaning solutions can be hazardous. Serious personal injury may result from misuse of these products. Read and follow all the manufacturer's recommendations concerning solvents and cleaning solutions.

1. All components should be thoroughly cleaned with an approved cleaning solvent, air dried and carefully inspected for damage, wear and corrosion.
2. All Loctite® or other sealant residue should be removed from threads of hardware and parts that are going to be reused.
3. All “soft parts”, such as seals, gaskets, back up rings, and o-rings, should be replaced.
4. Replacement of bearings and bushings is generally a good preventive maintenance measure. Even though a bearing or bushing seems to be intact and is functioning properly, its life span is limited. Replacing a simple bearing or bushing while the opportunity is at hand could save a complete component failure later.
5. In the event of severe defects, contact factory personnel for directions whether to repair or replace any major component.


Crane Assembly

1. Loosely assemble parts to ensure all parts are in place and fasteners started before beginning torquing procedure. Always use a cross torquing sequence to ensure even and uniform installation.



WARNING

Lubricants, sealants, joint and thread locking compounds, etc. can be hazardous. Serious personal injury may result from misuse of these products. Read and follow all manufacturer's recommendations concerning these products.

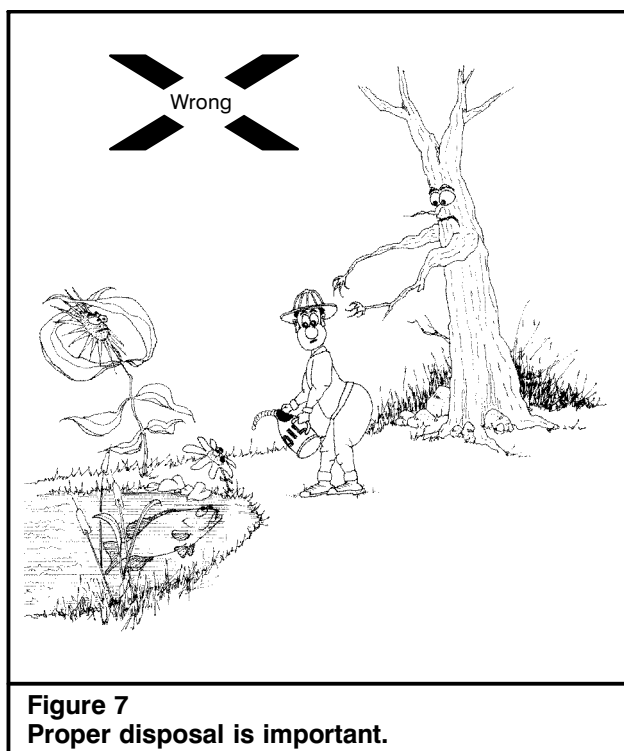

2. Unless otherwise stated, torque all fasteners per the instructions given in SM Code Area 18—000.
3. When installing hydraulic hoses, lines, and fittings, use two wrenches to ensure the hoses and lines are not twisted. One wrench must be on the male fitting, the other wrench on the female fitting.
4. Unless otherwise stated, torque all hydraulic fittings per the instructions given in SM Code Area 07—018.
5. Check all fluid levels before returning the crane to service; hydraulic reservoir oil level, transmission fluid level, engine(s) oil level, etc. Add oil as required. See Operator's Manual and/or engine(s) manufacturer's manual(s) for correct type of fluids and procedures.
6. Always replace guards, grilles, and other types of protective shields. Also, be sure that any systems which were disconnected such as load indicating systems, anti-two block devices, control cables, etc. are functioning properly before returning the crane to service.
7. Start the appropriate engine and let it idle for five minutes. Inspect the connections on the hydraulic, air, transmission, etc. lines for leaks. Repair if needed.
8. Check that all hydraulic, air, and electrical functions are operating normally before returning the crane to service.
9. After crane is assembled, refer to the Operator's Manual for any periodic type of adjustments which may have been affected by the service procedure.
10. Properly dispose of any used oils, solvents, cleaners, etc.

Boom Launch Cylinder Mount, R & I

This procedure covers the removal and installation of the boom launch cylinder mount.

Removal

1. Stabilize the crane for service as follows:
 - a. Lower, detach, and secure load, as required.
 - b. Fully retract and position the boom, as required.
 - c. Engage the swing park brake or travel swing lock, as required.
 - d. Properly shutdown the upper engine.
 - e. Park the crane out of the way on a firm and level surface.
 - f. Apply the park brake and/or properly block the tires.
 - g. Level the crane on fully extended outriggers.
 - h. Properly shutdown the carrier engine.



WARNING

Solvents and cleaning solutions can be hazardous. Serious personal injury may result from misuse of these products. Read and follow all the manufacturer's recommendations concerning solvents and cleaning solutions.

2. Thoroughly clean the area to be disassembled with an approved cleaning solvent to prevent contamination. Allow the area to air dry.

Refer to Figure 1.

3. If necessary, remove capscrews, washers, and locknuts (2) that secure wear pad (3) to mount (4).

Note: The boom launch cylinder mount weighs approximately 33 lb (15kg).

4. Support the mount (4) and remove locking pins (5) that secure it to the carrier mounting brackets (1). Remove the mount (4) from the crane.

Cleaning And Inspection



WARNING

Solvents and cleaning solutions can be hazardous. Serious personal injury may result from misuse of these products. Read and follow all the manufacturer's recommendations concerning solvents and cleaning solutions.



1. All components should be thoroughly cleaned with an approved cleaning solvent, air dried, and carefully inspected.
2. Thoroughly inspect all related parts for damage, wear, fatigue or stress fractures, and corrosion. Repair or replace as required.
3. In the event of severe defects, contact factory personnel for directions whether to repair or replace any major component.

Installation

Refer to Figure 1.

Note: The boom launch cylinder mount weighs approximately 33 lb (15kg).

1. Position the mount (4) to the the carrier mounting brackets (1) and secure with locking pins (5).
2. If necessary, Install wear pad (3) to the mount (4) and secure with capscrews, washers, and locknuts (2).
3. A general inspection of the components and systems in the areas adjacent to the repair should also be performed to ensure related damage or wear is not present.

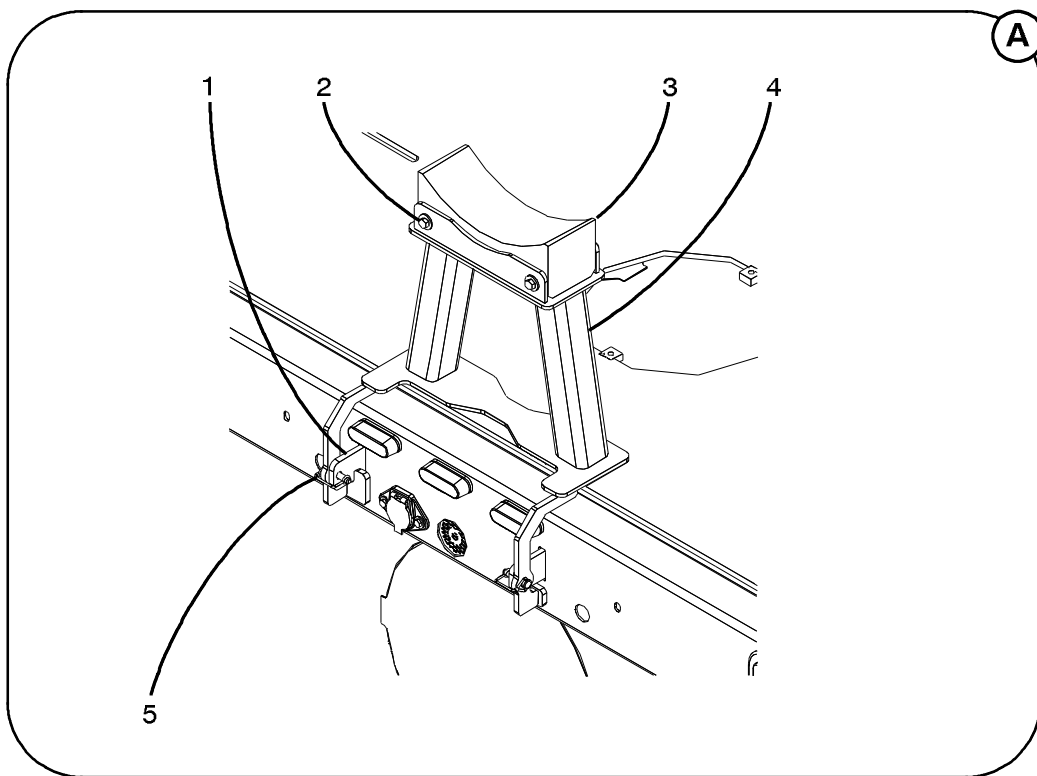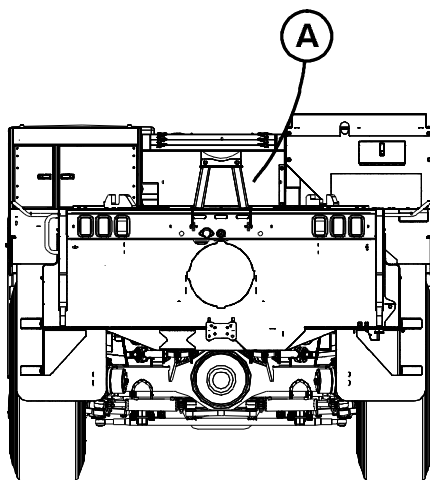


- 1. Carrier Mounting Brackets
- 2. Capscrews, Washers, & Locknuts

- 3. Wear Pad
- 4. Mount

- 5. Locking Pins

Figure 1
Boom Launch Cylinder Mount

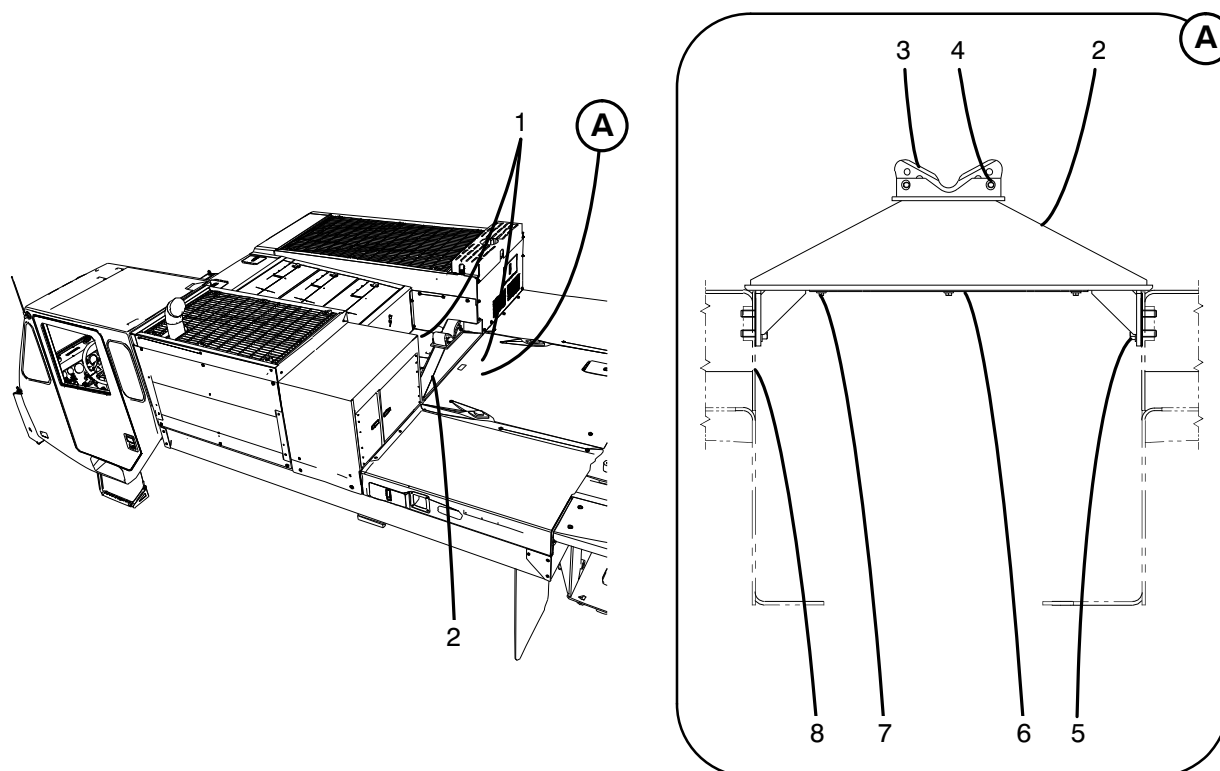

1. Deck Plates
2. Boom Rest
3. Wear Block

4. Capscrews, Washers, & Locknuts
5. Capscrews, Washers, & Locknuts
6. Support Plate

7. Capscrews, Washers, & Locknuts
8. Carrier Frame

Figure 1
Boom Rest

Boom Rest, R & I

This procedure covers the removal and installation of the boom rest.

Removal

1. Stabilize the crane for service as follows:
 - a. Lower, detach, and secure load, as required.
 - b. Fully retract and position the boom, as required, to allow access to the boom rest.
 - c. Engage the swing park brake or travel swing lock, as required.
 - d. Properly shutdown the upper engine.
 - e. Park the crane out of the way on a firm and level surface.
 - f. Apply the park brake and/or properly block the tires.
 - g. Level the crane on fully extended outriggers.
 - h. Properly shutdown the carrier engine.

Refer to Figure 1.

2. Remove the deck plates (1) directly in front of and behind the boom rest (2).

Note: The boom rest assembly weighs approximately 114 lb (52kg).

3. Using an adequate lifting device, rig the boom rest (2) for removal.
4. Remove the capscrews, washers, and locknuts (5) securing the boom rest (2) to the carrier frame (8). (Note: If shims were removed, note position for installation.)
5. Remove the boom rest (2) from the crane.
6. If necessary, remove the wear block (3) from the top of the boom rest (2) by removing the capscrews, washers, and locknuts (4).
7. If necessary, remove the capscrews and washers (7) to separate the support plate (6) from the boom rest (2).

Cleaning And Inspection



WARNING

Solvents and cleaning solutions can be hazardous. Serious personal injury may result from misuse of these products. Read and follow all the manufacturer's recommendations concerning solvents and cleaning solutions.

1. All components should be thoroughly cleaned with an approved cleaning solvent, air dried, and carefully inspected.
2. All Loctite®, Permatex®, or other sealant residue should be removed from threads of hardware and the mounting surfaces of parts that are going to be reused. Prior to applying new thread locking compounds or sealants, clean threads and surfaces with Loctite® 7070 Cleaner to ensure best performance of products.

3. Thoroughly inspect all parts for damage, wear, fatigue or stress fractures, and corrosion. Repair or replace as required.
4. In the event of severe defects, contact factory personnel for directions whether to repair or replace any major component.

Installation



WARNING

Lubricants, sealants, joint and thread locking compounds, etc. can be hazardous. Serious personal injury may result from misuse of these products. Read and follow all manufacturer's recommendations concerning these products.

Refer to Figure 1.

1. If removed, apply Loctite® 242 to the capscrews (7) and install the support plate (6) to the bottom of the boom rest (2) using the capscrews and washers (7).
2. If removed, position the wear block (3) on the boom rest (2), and install the capscrews, washers, and locknuts (4).

Note: The boom rest assembly weighs approximately 114 lb (52kg).

3. Using an adequate lifting device, align the boom rest (2) to the carrier frame (8).
4. If shims were removed, properly align shims and secure the boom rest (2) to the carrier frame (8) by installing the capscrews, washers, and locknuts (5). Torque capscrew (5) to 450 ft lb (610Nm).
5. Install the deck plates (1).

Front Axles, R & I

This procedure covers the removal and installation of the front axles. Although there are two separate front axles, removal and installation is similar for each. This procedure address axle #1 (the front front axle) in particular, but can be used for the removal and installation of axle #2 (the rear front axle) as well. For recondition procedure, see SM Keysheet Area 01- 024.

Removal

1. Stabilize the crane for service as follows:
 - a. Lower, detach, and secure load, as required.
 - b. Fully retract and position the boom, as required.
 - c. Engage the swing park brake or travel swing lock, as required.
 - d. Properly shutdown the upper engine.
 - e. Park the crane out of the way on a firm and level surface.
 - f. Apply the park brake and/or properly block the tires.
 - g. Level the crane on fully extended outriggers.
 - h. Properly shutdown the carrier engine.



WARNING

Hydraulic oil is under pressure and may be hot. A sudden release of hot oil could cause burns or other serious injury. Shutdown the engine and exhaust all trapped hydraulic pressure from the system before removing any line or component.

2. Relieve the carrier hydraulic system pressure as follows:
 - a. Release any residual pressure in the carrier hydraulic reservoir by slowly loosening the breather/filler dipstick, located on the top of the carrier hydraulic reservoir, until pressure is fully relieved.
 - b. Turn the ignition switch to "ON", but **DO NOT START THE ENGINE.**
 - c. Work the outrigger switches back and forth several times.

- d. Turn the ignition switch to the "OFF" position.



WARNING

Air lines may contain high pressure. Opening lines and fittings before relieving air pressure may result in serious injury. Shutdown the carrier engine and drain the air system reservoir before opening any line or fitting.

3. Open the drain valves on the air system reservoirs to bleed the air system pressure.
4. When pressure is fully relieved, close the drain valves on the air system reservoirs.



WARNING

Solvents and cleaning solutions can be hazardous. Serious personal injury may result from misuse of these products. Read and follow all the manufacturer's recommendations concerning solvents and cleaning solutions.

5. Thoroughly clean the area to be disassembled with an approved cleaning solvent to prevent contamination. Allow the area to air dry.




Refer to Figure 1.

6. Remove the tire and rim assemblies from the axle (1). Refer to SM Keysheet Area 01- 069 for the correct procedure.
7. Remove cotter pin and castle nut (5) that secure steering rod (4) to the steering arm (3).
8. Using a ball stud removal tool, separate the tapered fit between the steering rod (4) and the steering arm (3). Secure steering rod (4) away from the immediate area.



DANGER

If not properly supported, the axle could shift and/or fall during removal resulting in severe personal injury, death, or major component damage. To prevent unwanted movement of the axle, tightly secure the axle to the lifting device using adequate straps or chains.

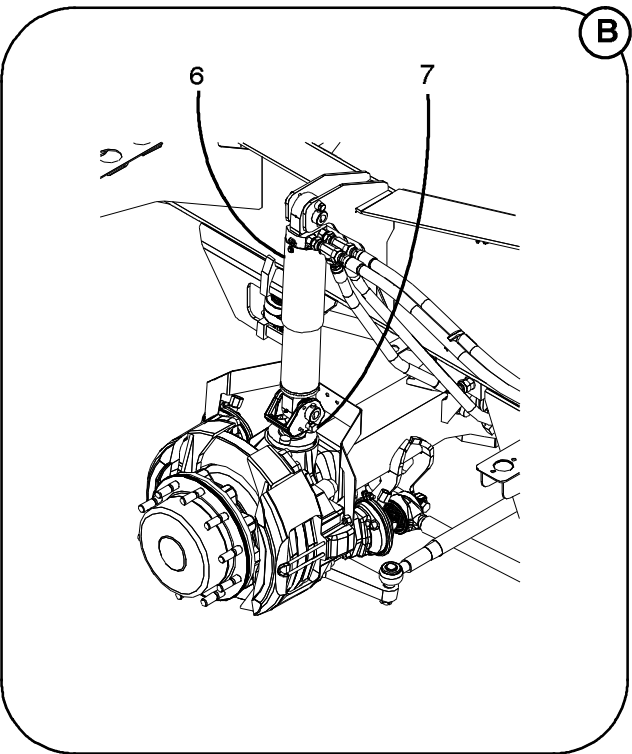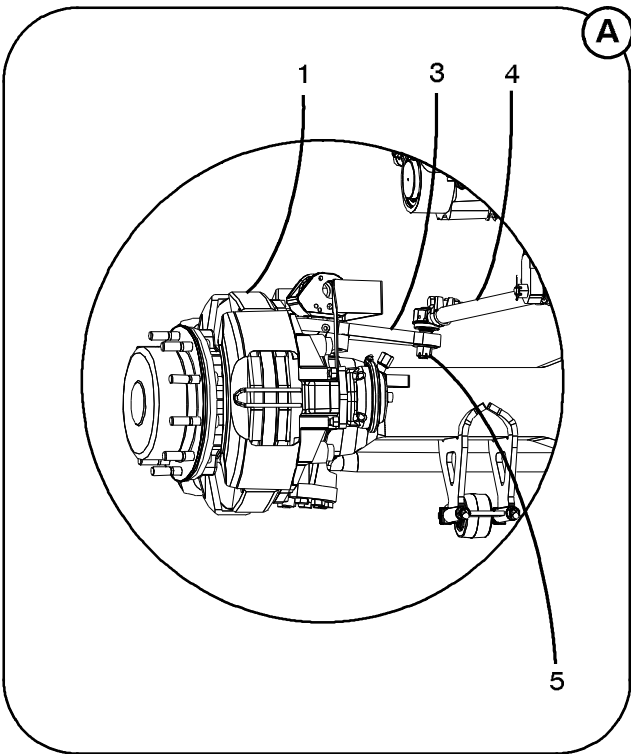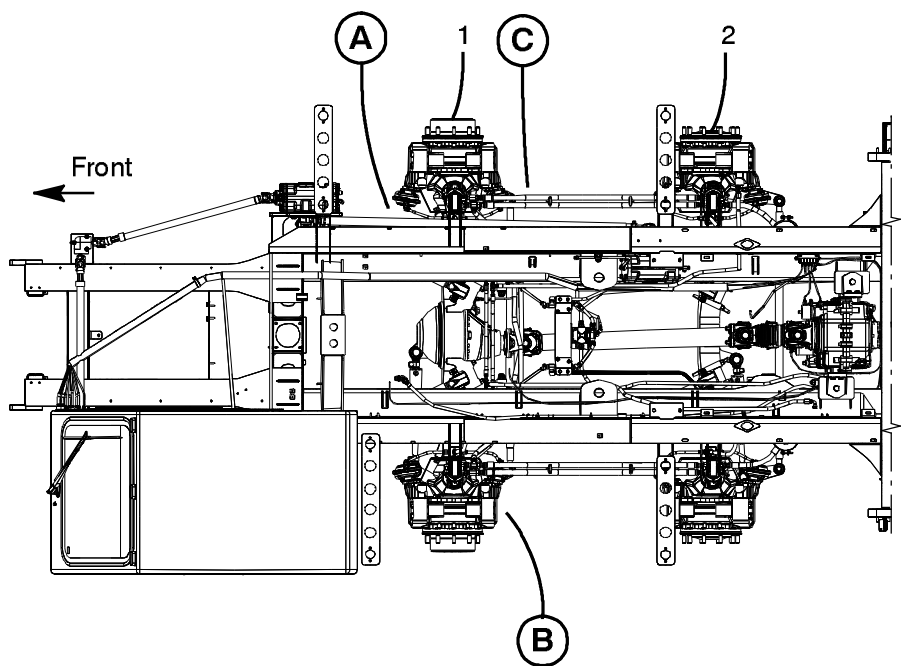

- | | | |
|-----------------------------------|----------------------------|--------------------------------|
| 1. Axle #1 - Drive/Steer Assembly | 4. Steering Rod | 6. Axle Oscillation Cylinders |
| 2. Axle #2 - Steer Assembly | 5. Cotter Pin & Castle Nut | 7. Capscrews, Rod Ends, & Pins |
| 3. Steering Arm | | |

Figure 1
Front Axles & Suspension