

Massey Ferguson®

9936
Planter

SERVICE MANUAL 4283533M1

CONTENTS

GENERAL INFORMATION	01
ROW UNIT	02
DRIVE SYSTEMS	03
AIR SYSTEM	04
HYDRAULICS	05
ELECTRICAL	06
TROUBLESHOOTING	07
ADJUSTMENTS	08

Massey Ferguson®

9936 Planter

SERVICE MANUAL 4283533M1

01 - General Information

Contents

GENERAL INFORMATION	
General	01-1
Serial Number Plate Location	01-1
Serial Number Definition (2010 and up)	01-2
Machine Identification	01-2
Intended Use	01-3
Proper Disposal of Waste	01-3
SAFETY	
Safety Alert Symbol	01-5
Safety Messages	01-5
Informational Messages	01-5
Safety Signs	01-6
A Word To The Operator	01-6
Service Manual	01-7
Prepare For Operation	01-8
Operation	01-9
General Information	01-9
PPE (Personal Protection Equipment)	01-10
Seat Instructions	01-10
Shield and Guards	01-10
Exhaust Warning	01-11
Flying Debris	01-11
Agricultural Chemicals	01-12
Travel On Public Roads	01-12
Maintenance	01-14
General Information	01-14
Fire Prevention and First Aid	01-15
Checking for High Pressure Leaks	01-16
Tire Safety	01-17
Reflectors	01-17
Center Section	01-17
Wing Sections	01-18
SPECIFICATIONS	
Frame	01-19
Tires and Wheels	01-19
Tracks	01-19
9936-30	01-19
9936-20	01-20
9936-22	01-20
Row Units	01-20
Air System	01-20

Contents

Hydraulic System	01-21
Hydraulic Flow Requirements	01-21
Electronic Seed Drive Controller	01-21
Approximate Shipping Weights	01-21
Tractor Recommendation	01-22
Recommended Tractor Horsepower	01-22
Maximum Speed	01-22
 FIELD OPERATIONS AND ADJUSTMENTS	
Tractor Preparation	01-23
General	01-23
Recommended Tractor Horsepower	01-23
Lubrication	01-23
Wheels	01-23
Wheel Spacing	01-23
Tire Inflation	01-23
Remote Hydraulic Valve Requirements	01-23
Tractor Drawbar	01-23
Front Weights	01-24
Electrical Requirements	01-24
Air Clutches for Swath Control	01-24
Planter Preparation	01-24
Lubrication	01-24
Wheel Bolts	01-24
Bolt Torque	01-24
Tire Inflation	01-24
Track Wheel Lug Nuts	01-24
Track Air Bag Tensioner Inflation	01-24
Chains	01-25
Seed Discs	01-25
Hydraulic Seeding Monitor	01-25
Connecting the Planter To the Tractor	01-25
Frame Lift/lower and Central Fill Fan Circuit	01-26
Hydraulic Planter Drive/Singulation Fan	01-26
Tilt and Fold	01-27
Hitch Jack	01-27
Operation of the Seed Meter Blower/Meter Drive Hoses	01-28
Air Clutches for Swath Control	01-28
Pneumatic Down Pressure	01-28
Folding And Unfolding the Planter	01-30
Folding Procedure	01-30
Unfolding Procedure	01-30
Transporting the Planter	01-32
Preparation	01-32
Safety Precautions	01-32
Disconnecting the Planter From the Tractor	01-33
Lamp Operation - Enhanced Harness	01-34
Daylight Operation	01-34
Night Operation With Tractor Head Lamps	01-34
Field	01-35
General	01-35
Before Entering the Field	01-35
In The Field	01-35
Finishing the Field	01-36
Air clutch Operation	01-37
Pneumatic Down Pressure	01-38
Air Compressor Operation	01-38
Seed Meters	01-40
Seed Gate	01-41
Operation	01-41
Seed Recommendations	01-42
Seed Meter	01-42
Seed Meter Covers	01-44

Contents

Central Fill Air Pressure	01-44
Seed Removal	01-45
Seed Meter	01-45
Central Fill Hopper	01-45
Closing Wheels	01-46
Implement Lift Switch	01-47
ISOBUS Planter System	01-48
General Information	01-48
Performance	01-48
Row Unit Mounted Tillage	01-49
Tillage Coulter	01-49
Coulter with Residue Manager	01-49
Residue Manager	01-50
Shark Tooth™ Residue Manager	01-50
Trashmaster	01-50
Coulter Discs	01-51
Rippled Blades	01-51
Bubble Blade	01-51
Fluted Blades	01-52
Torque Values For Standard Bolts	01-53
Special Torque Values	01-53
Torque Values For Metric Bolts	01-55
LUBRICATION AND MAINTENANCE	
Lubrication Chart	01-57
Lubrication	01-58
Lubrication Points	01-58
Bearing Assemblies	01-62
Component Service	01-63
ISOBUS Planter Controller	01-63
Master Switch	01-63
Test Button	01-63
Speed Sensor and Motor	01-63
Motor Control Valve	01-64
Control Solenoid	01-64
Frame Hydraulic System	01-64
Hydraulic Hookup	01-64
Priming the Hydraulic Circuits	01-64
Hydraulic Component Locations And Service	01-66
Blower Motor Flow Control Valve	01-66
Hydraulic Fluid Coolers	01-66
Blower Motors	01-66
Component Service	01-66
ISOBUS Planter Controller	01-66
Master Switch	01-66
Test Button	01-66
Speed Sensor and Motor	01-67
Motor Control Valve	01-68
Control Solenoid	01-68
Frame Hydraulic System	01-68
Hydraulic Hookup	01-68
Priming the Hydraulic Circuits	01-68
Seed Air Hose Routing Chart	01-69
Hose Fittings Guidelines	01-70
General Information	01-70
Guidelines for 37 Degrees Tube Fittings and Adapters	01-70
Assembly Instructions for O-Ring Port Straight Stud Ends	01-71
Assembly Instructions for O-Ring (Adjustable) Port Fittings	01-72
Assembly Instructions for NPTF Pipe Fittings	01-75
Assembly Instructions for Code 61 and Code 62 - Four Bolt Split Flange Connections	01-76
Assembly Instructions for ORFS (O-Ring Face Seal) Fitting and Adapters	01-78
Flats From Finger Tight (F.F.F.T.) Installation Method 37 Degree Tube Fittings	01-78
Bolt Torque Values	01-79

Contents

Special Torque Values 01-79

Standard Bolts 01-79

Metric Bolts 01-80

INDEX 01-81

GENERAL INFORMATION

GENERAL

Model 9936 30-Row, 9936 22-Row, 9936 20-Row Forward Fold Planter with Central Fill System.

9900 Series Forward Fold Planters are designed, built and tested to make sure high quality, maximum strength and long service life. This machine features positive air metering and hydraulic seed drive for accurate seed spacing.

This manual contains information necessary for correct adjustment and operation of your planter. Read this manual carefully.



WARNING: Pictures in this manual can show protective shields and guards opened or removed for illustration purposes. **MAKE SURE ALL SHIELDS AND GUARDS ARE IN PLACE DURING OPERATION.**

This manual must remain with machine when sold.

This manual was prepared from the latest information available at publication time. The Company reserves the right to make changes at any time without notice or obligation.

SERIAL NUMBER PLATE LOCATION

FIG. 1: Row unit toolbar: The serial number plate (1) is located on the left-hand row unit toolbar of the center section.

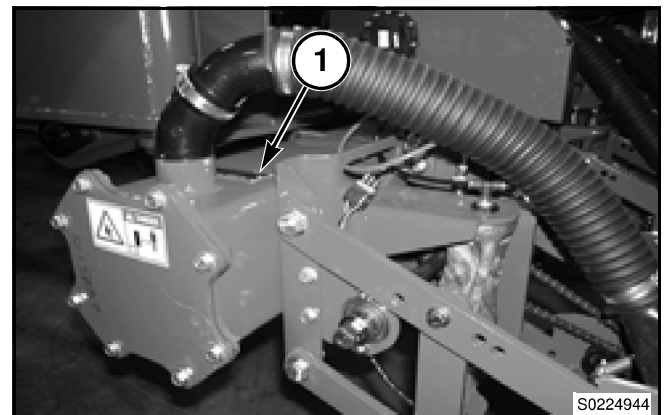


FIG. 1

FIG. 2: Frame: The serial number plate (1) is located on the right-hand side of the main tongue.

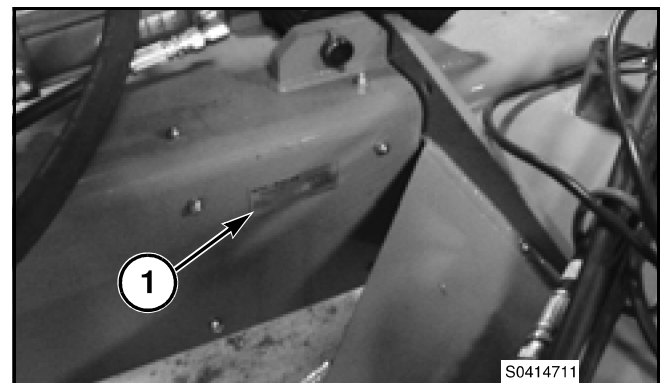


FIG. 2

General Information

SERIAL NUMBER DEFINITION (2010 AND UP)

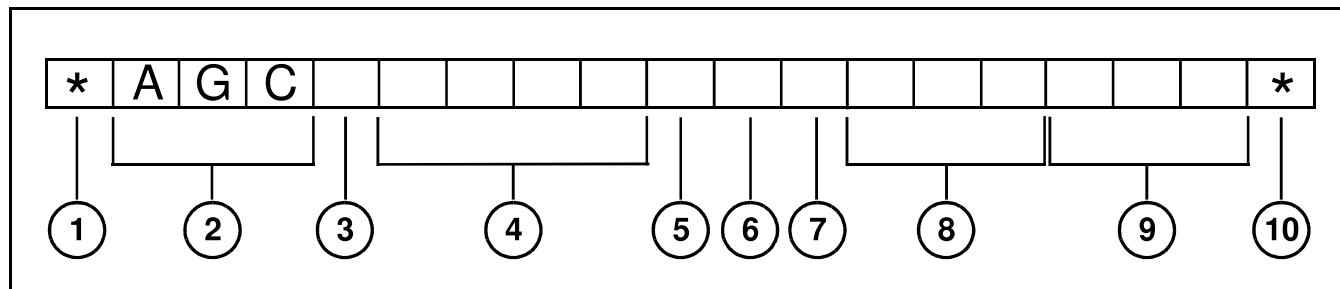


FIG. 3

FIG. 3: Definition of the serial number for model year 2010 and up.

- (1) Beginning symbol
- (2) World Manufacturer Code
- (3) Brand Code
- (4) Model Identifier (Model number)
- (5) Check Letter (0 or used if model identifier is five digits)
- (6) Model Year Code (A=2010, B=2011, C=2012, and on)
- (7) Plant Code
- (8) Family Code
- (9) Unit Number for the Year
- (10) Ending symbol

NOTE: For serial number breaks in this manual, only the information from the model year code and following will be given.

MACHINE IDENTIFICATION

NOTE: Always quote the serial number in any communication to your Dealer.

Machine Model No.: _____

Machine Serial No.: _____

Date of Delivery: _____

Dealer Name and Address: _____

Dealer's Telephone No.: _____

Dealer's Fax No.: _____

INTENDED USE

This machine is designed solely for use in customary agricultural operations.

Do not use this machine for any application or purpose other than those described in this manual. The manufacturer accepts no liability for damage or injury resulting from misuse of this machine.

Compliance with the conditions of operation, service and repair as specified by the manufacturer constitute essential elements for the intended use of this machine.

This machine should be operated, serviced and repaired only by qualified persons familiar with its characteristics and familiar with the relevant safety rules and procedures.

All generally recognized safety regulations and road traffic regulations must be obeyed at all times.

Any unauthorized modifications performed on this machine will relieve the manufacturer of all liability for any resulting damage or injury.

PROPER DISPOSAL OF WASTE

Improper disposal of waste can pollute the environment and ecology. A few examples of potentially harmful waste from AGCO equipment include, but not limited to, items such as oil, fuel, coolant, brake fluid, filters, battery chemicals, tires, etc.

Use leak proof containers when draining fluids. Do not use food or beverage containers to collect waste fluids, as food or beverage container(s) may mislead someone into drinking from them.

Do not pour or spill waste onto the ground, down a drain, or into any water source.

Air conditioning refrigerants escaping into the air can damage the Earth's atmosphere. Government regulations may require a certified air conditioning service center to recover and recycle used air conditioning refrigerants.

Inquire with local environmental or recycling center on the proper way to recycle or dispose waste.

SAFETY

SAFETY ALERT SYMBOL

FIG. 1: The safety alert symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED!

Look for the safety alert symbol both in this manual and on safety signs on this machine. The safety alert symbol will direct your attention to information that involves your safety and the safety of others.

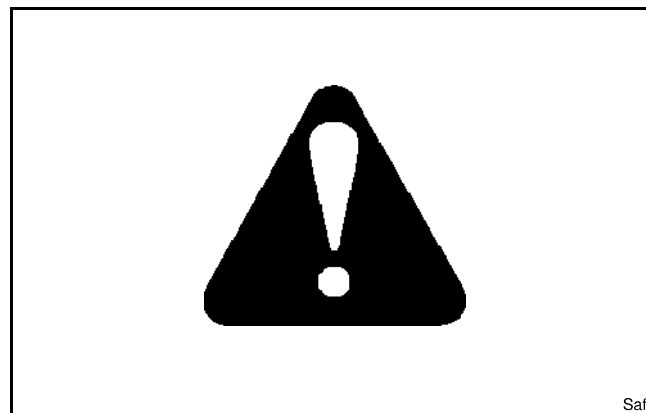


FIG. 1

SAFETY MESSAGES

FIG. 2: The words DANGER, WARNING or CAUTION are used with the safety alert symbol. Learn to recognize these safety alerts and follow the recommended precautions and safety practices.

 **DANGER:** Indicates an imminently hazardous situation that, if not avoided, will result in DEATH OR VERY SERIOUS INJURY.

 **WARNING:** Indicates a potentially hazardous situation that, if not avoided, could result in DEATH OR SERIOUS INJURY.

 **CAUTION:** Indicates a potentially hazardous situation that, if not avoided, may result in MINOR INJURY.



FIG. 2

INFORMATIONAL MESSAGES

The words IMPORTANT and NOTE are not related to personal safety, but are used to give additional information and tips for operating or servicing this equipment.

IMPORTANT: Identifies special instructions or procedures which, if not strictly observed, could result in damage to or destruction of the machine, process, or its surroundings.

NOTE: Identifies points of particular interest for more efficient and convenient repair or operation.